

GE electronic-controlled refrigerator error codes

searspartsdirect.com/diy/error-codes/refrigerator-repair/1234589/ge-refrigerator/0432

These error code explanations can help you diagnose a problem with your GE refrigerator with a digital display on the dispenser control panel.

Error codes appear on the dispenser control panel display when the

electronic control board detects component failures. When an error code appears:

1. Match the error code on your refrigerator with the error code in the chart below.
2. Make sure that the condition listed with the error code is the same as the symptom(s) shown by your refrigerator.
3. Read the DIY advice to learn how to troubleshoot the issue and determine the problem part.
4. Follow repair guide instructions (if listed) to fix the broken part

FF

Check frozen foods for thawing

Check/Repair

Freezer temperature has been above normal for more than 2 hours. Make sure that the refrigerator and freezer doors are closed properly. Replace the door gaskets if damaged. Press the System Check button to clear the error code and check for other system failures. If



the PF code appears, then the FF code was likely caused by a power failure. Keep the refrigerator and freezer doors closed as much as possible to allow the interior temperatures to recover.

How-to help

[How to replace a door gasket in a top-freezer refrigerator](#)

Possible parts

Door gasket

PF

Power has been interrupted

CI

Ice maker not operating properly

dE

Defrost system error

CC

Freezer temperature is too warm