



CLICK ANYWHERE on THIS PAGE to RETURN to AIRCO OLSEN ECR FURNACE AGE & MANUALS at InspectApedia.com


HTL
(Up-Flow Model)
HTLV
(Up-Flow Model with ECM)
Series D
Oil Fired Warm Air Furnaces

**INSTALLATION, OPERATION &
MAINTENANCE MANUAL**



Manufactured by:
ECR International Inc.
2201 Dwyer Avenue, Utica, NY 13501
Tel. 800 325 5479
www.ecrinternational.com
PN 240007799 REV. J [10/01/2021]

Dimensions

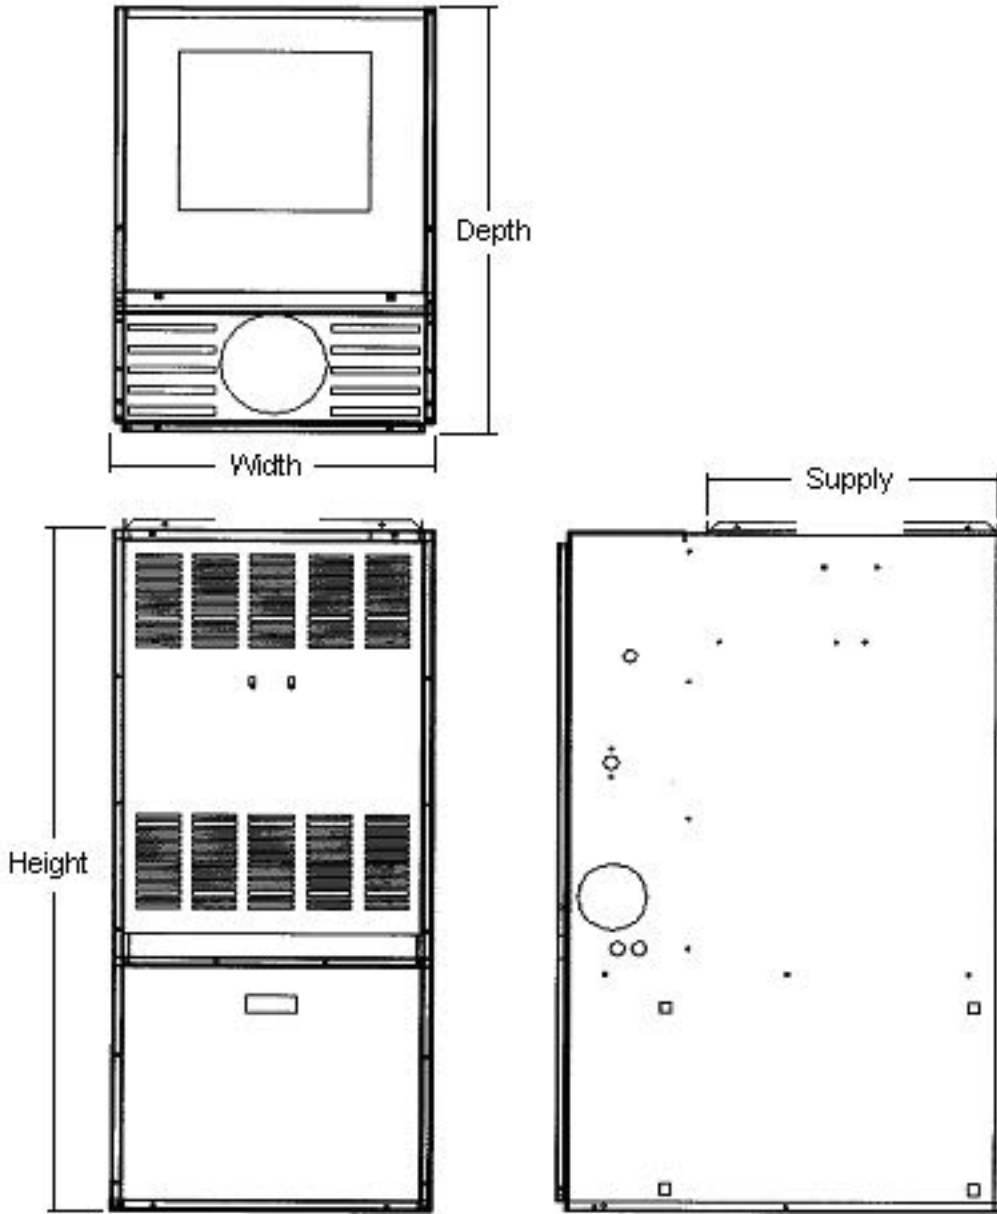

Furnace Model	Cabinet			Plenum Openings			Flue Diameter	Filter		Shipping Weight (LB.)
	Width	Depth	Height	Supply	Return			Type	Size	
					Side	Bottom				
HTL-D HTLV-D	22"	30¾"	58"	20½"W x 20"D	14" x 22"	14" x 22"	6"	Permanent	16" x 25" x 1"	270 lb
	55.9 cm	78.1 cm	147.3cm	52 cm x 52.8 cm	35.6 cm x 55.9 cm	35.6 cm x 55.9 cm	15.2 cm		40.6 cm x 63.5 cm x 2.5 cm	77.1 Kg

1. General	4
2. Safety Symbols	4
3. Introduction Models HTL And HTLV	4
4. Heat Loss	4
5. Locating the Unit	5
6. Furnace Used In Conjunction With Air Conditioning.....	5
7. Combustion Air.....	6
8. Chimney Venting	6
9. Barometric Damper Control.....	7
10a. Fan Timer Board And Limit Control (HTL).....	7
10b. Fan Timer Board And Limit Control (HTLV)	7
11. Electrical Connections.....	7
12. Humidifier.....	8
13. Piping Installation	8
14. Oil Filter	8
15. Oil Burner Nozzles.....	8
16. Oil Burner Adjustment	8
17. Burner Electrodes.....	8
18. Burner Primary (Safety) Control.....	9
19. Combustion Chamber	9
20a. Circulating Air Blower (HTL).....	9
20b. Circulating Air Blower (HTLV)	10
21. Maintenance And Service	10
22. Operating Instructions (HTL)	11
23. Operating Instructions (HTLV).....	11
Appendix A - Check out and Adjustments.....	12
A.1 Oil Burner Air Adjustment	13
A.2 Burner Electrodes	13
A.3 Start Up	13
A.4 Special Instructions For Units Equipped With Riello Burners	14
A.5 Final Check Out	14
Appendix B - Wiring Diagrams.....	18
Chimney Vent Furnace Wiring Diagram HTL/HTLV	18
Appendix C - Sequence of Operation and Troubleshooting	19
C.1 Troubleshooting	21
C.2 Preliminary Steps:	21
C.3 Check Oil Primary Control	21
Parts Listing: Chimney Vent Models HTL(D2,DRF2) and HTLV(D2,DRF2)	26
Model HTL and HTLV Diagram.....	27
Homeowner's Reference Table	28

Check our website frequently for updates: www.ecrinternational.com

Information and specifications outlined in this manual in effect at the time of printing of this manual. Manufacturer reserves the right to discontinue, change specifications or system design at any time without notice and without incurring any obligation, whatsoever.

1. General

Furnace installation shall be completed by qualified agency. See glossary for additional information.

WARNING

Fire, explosion, asphyxiation and electrical shock hazard. Improper installation could result in death or serious injury. Read this manual and understand all requirements before beginning installation.

WARNING

Fire, burn, asphyxiation hazard. Do not use gasoline, crank case oil, or any oil containing gasoline. Failure to follow these instructions could result in death or serious injury.

NOTICE

Remove and discard cardboard support under blower before operating furnace. It is for shipping purposes only.

2. Safety Symbols

Become familiar with symbols identifying potential hazards.



This is the safety alert symbol. Symbol alerts you to potential personal injury hazards. Obey all safety messages following this symbol to avoid possible injury or death.

DANGER

Indicates a hazardous situation which, if not avoided, WILL result in death or serious injury

WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

Used to address practices not related to personal injury.

3. Introduction Models HTL And HTLV

Models HTL and HTLV are oil fired forced air up-flow furnaces.

- HTL models are equipped with 1/2 HP PSC 4 speed blower motor.
- HTLV models are equipped with 1/2 HP ECM variable speed blower motor.

Furnace models are factory equipped for chimney venting.

Installation shall conform to requirements of authority having jurisdiction or in absence of such requirements:

- Canada - CAN/CSA - B139, Installation Code for Oil-Burning Equipment.
- United States - National Electrical Code, NFPA31, Standard for the Installation of Oil-Burning Equipment.

Models are CSA listed, (NRTL/C) for use with No. 1 (Stove) and No. 2 (Furnace) Oil.

Refer to tables in Appendix A for performance data.

4. Heat Loss

Maximum hourly heat loss for each heated space shall be calculated in accordance with the procedures described in the manuals of:

- Canada - The Heating, Refrigeration and Air Conditioning Institute of Canada (HRAI), or by other means prescribed, or approved by the local authority having jurisdiction.
- United States - Manual J, titled, "Load Calculation" published by the Air Conditioning Contractors of America, describes a suitable procedure for calculating maximum hourly heat loss.

5. Locating the Unit - [See Figure 1 and Table 1]

- Locate furnace so flue connection to chimney is short, direct and consists of as few elbows as possible.
- Centralize furnace location with respect to supply and return air duct work. Central location minimizes trunk duct sizing.
- All models may be installed on combustible floors.

6. Furnace Used In Conjunction With Air Conditioning

- Install furnace in parallel with or upstream from evaporator coil to avoid condensation in heat exchanger.
- When installed in parallel, prevent chilled air from entering furnace by use of dampers or air controlling.
- Manually operated dampers must have a control to prevent operation of either system unless dampers are in full heat or full cool position.
- Air heated by the furnace shall not pass through evaporator coil unless coil is specifically approved for such service.
- Check and adjust blower speed to compensate for pressure drop caused by evaporator coil.
- Maintain required clearance between bottom of coil drain pan and top of heat exchanger as specified by coil manufacturer.
- Cased evaporator coils that are slightly larger than the furnace cabinet may be used by employing field fabricated block off plates to close gap between furnace cabinet and coil casing.
- Cased evaporator coils that are smaller than the furnace cabinet should not be used as they will restrict airflow.

Table 1: Minimum Installation Clearances

Location	Clearance to Combustibles
	HTL and HTLV
	Up flow
Top	1" (26 mm)
Bottom	0"
S/A Plenum	1" (26 mm)
Rear	1" (26 mm)
Sides	1" (26 mm)
Front	1"*** (26 mm)
Flue Pipe	9"* (229 mm)
Enclosure	Closest
*18 in. (458 mm) USA	
** 24 in. (610 mm) Service Clearance	

Figure 1 - Heat Exchanger Support Screw Location



Heat Exchanger Support Screws

- Remove heat exchanger support screws before final placement of the furnace.
- Preferable if furnace rear panel is inaccessible after installation.
- Screws must be removed if heat exchanger is to be removed from the cabinet.

7. Combustion and Ventilation Air

Comply with CSA B139 (Canada) or NFPA 31 (U.S.) standards for the Installation of Oil Burning Equipment and applicable provisions of local building codes to provide combustion and ventilation air.

8. Chimney Venting

- Flue pipe should be as short as possible with horizontal pipes sloping upward toward the chimney at a rate of one-quarter inch per foot.
- Flue pipe should not be smaller in cross sectional area than flue collar on the furnace.
- Flue pipe should connect to chimney so the flue pipe extends into, and terminates flush with the inside surface of chimney liner. Seal the joint between pipe and lining.
- Chimney outlet should be at least two feet above highest point of peaked roof.
- All unused chimney openings should be closed.
- Chimneys must conform to local, provincial or state codes, or in the absence of local regulations, to the requirements of the National Building Code.

NOTICE

This furnace is approved for use with Type L vent or equivalent. Maximum vent temperature for Type L vent is 575° F (300°C).

WARNING

Asphyxiation hazard. Chimney vented versions of furnace must be connected to flue having sufficient draft at all times. Failure to follow these instructions could result in death or serious injury.

Manufacturer recommends over fire draft of -0.02 in. w.c. See figure 2.

Flue pipe must not pass through any floor or ceiling, may pass through a wall where suitable fire protection provisions have been installed.

- Refer to CAN/CSA B-139 for rules governing the installation of oil burning equipment.
- United States, refer to NFPA 31 for regulations governing the installation of oil burning equipment.

See appendix A for burner set-up.

Figure 2 - Check Over-Fire Draft



Over-fire draft access port.

9. Barometric Damper Control

Barometric damper control, also known as draft regulator, is used on conventional chimney venting only. Control automatically maintains constant negative pressure. Ensures proper pressures are not exceeded. If chimney does not develop sufficient draft, draft control does not function properly.

- Install draft regulator in same room or enclosure as furnace. Draft regulator should not interfere with combustion air supplied to the burner.
- Locate control near furnace flue outlet.
- Install per instructions supplied with regulator.
- Set over fire draft, measured at oil burner mounting plate over-fire draft access port, to -0.02 in. w.c. See Figure 2 page 6.

10a. Fan Timer Board And Limit Control (HTL) See Figure 3, page 15.

Electronic Fan Timer integrates control of burner and circulator fan operations. Control is central wiring point for most of furnace electrical components.

- United Technologies 1158-120 has an adjustable fan on time set by selecting dip switch combination displayed in Chart 1. Fan on delay can be set at 30, 60, 90 or 120 seconds. Provides a delay between burner ignition and blower start-up to eliminate excessive flow of cold air when blower comes on.
- United Technologies 1158-120 has an adjustable fan off time of 2, 3, 4 or 6 minutes as displayed in Chart 1. Fan off delay time starts when burner motor is de-energized at end of call for heat. Blower shutdown is delayed to remove any residual heat from heat exchanger.
- Electronic fan timer board works in conjunction with snap disc limit controls, performing a safety function, and breaks power to oil burner primary control, shutting off burner if furnace over-heats.
- Limit control is thermally operated and automatically resets. Limit control is factory installed, pre-set and is not adjustable.
- If limit control opens with United Technologies 1158-120 electronic fan control, circulating fan will energize. When limit closes, fan off timer begins. At the end of fan off time cycle burner is energized, initiating normal burner cycle.

Chart 1- United Technologies 1158-120 (HTL)

Dip Switch Position				Blower Delay Times	
1	2	3	4	On Seconds	Off Minutes
Off	Off			30	
On	Off			60	
Off	On			90	
On	On			120	
		Off	Off		2
		On	Off		3
		Off	On		4
		On	On		6

10b. Fan Timer Board And Limit Control (HTLV) [See Figure 4, page 15]

United Technologies 1168-1 ECM (HTLV) tap board has an adjustable fan on/off delay and airflow settings that must be adjusted in accordance with furnace input rating (nozzle size). Refer to Table A-5 for ECM blower set-up.

11. Electrical Connections

- Furnace is listed by Canadian Standards Association under NRTL (North American) Standard.
- All field wiring shall conform to CAN/CSA C22.1 Canadian Electrical Code, Part 1, and by local codes, where they prevail.
- United States, wiring shall conform to National Fire Protection Association NFPA-70, National Electrical Code, and with local codes and regulations.
- Wire furnace to separate dedicated circuit in main electrical panel.
- Suitably located circuit breaker can be used as service switch, separate service switch is advisable.
- Service switch is necessary if circuit breaker is close to the furnace, or furnace is located between circuit breaker and entry to furnace room.
- Clearly mark service switch. Install in accessible area between furnace and furnace room entry. Locate so as to reduce possibility it can be mistaken as light switch or similar device.
- Power requirement for HTL and HTLV models is: 115VAC, 1 Ø, 60 Hz., 12A.
- Accessory equipment such as electronic air cleaners and humidifiers may be included on furnace circuit.
- Accessories requiring 115 VAC power sources such as electronic air cleaners and humidifier transformers may be powered from electronic fan timer board where provisions have been made for connections, but should have their own controls.
- Do not use direct drive motor connections as a power source, there is risk of damaging accessories.

- Thermostat wiring connections are shown in wiring diagrams in Appendix B. Some micro-electronic thermostats require additional controls and wiring. Refer to thermostat manufacturer's instructions.
- Locate thermostat approximately 5 feet above floor, on inside wall, and where thermostat is exposed to average room temperatures. Avoid locations where thermostat is exposed to cold drafts, heat from nearby lamps and appliances, exposure to sunlight, heat from inside wall stacks, etc.
- Adjust thermostat heat anticipator to amperage draw of heating control circuit as measured at "R" and "W" terminals of thermostat. Do not measure current with thermostat connected to the circuit. Measure amperage by connecting ammeter between two wires which connect to thermostat "R" and "W" terminals.

12. Humidifier

- Humidifier is optional accessory available through most heating supplies outlets.
- Follow humidifier manufacturer's installation instructions
- Protect furnace heat exchanger from water or water droplets from humidifier.
- Do not use direct drive motor connections as source of power for 120 VAC humidifiers and humidifier transformers.

13. Piping Installation

- Install fuel system in accordance with requirements of CAN/CSA B-139, and local regulations.
- United States installation shall conform to NFPA No. 31 and local codes and authorities.
- Use only approved fuel oil tanks, piping, fittings and oil filter.
- Install oil filter as close to burner as possible.
- Refer to instructions and illustrations in oil burner and oil pump instructions shipped with the furnace.

14. Oil Filter

Install oil filter between fuel oil storage tank and oil burner. When using oil burner nozzle smaller than 0.65 U.S. Gallons Per Hour, install additional 7 to 10 micron filter as close as possible to oil burner.

15. Oil Burner Nozzles

HTL and HTLV are certified for multiple firing rates. Furnace may be fired at ideal rate for wide range of structures by manipulating oil burner nozzle, flame retention head, and temperature rise. Refer to Table A-1 and A-2, and furnace rating plate to determine proper combinations.

16. Oil Burner Adjustment

- Adjust burner air supply to maintain fuel to air ratio to obtain ideal combustion conditions.
- Lack of air causes "soft" and "sooty" flames, resulting in soot build-up throughout heat exchanger passages.
- Excess combustion air causes bright roaring fire and high stack temperatures resulting in poor fuel efficiency.
- HTL and HTLV operate most efficiently with No. 1 smoke spot on Bacharach Scale. Dust will eventually build up on air moving components of oil burner assembly resulting in decreased air supply with potential soot build up in flue gas passageways of heat exchanger. Soot behaves as insulator and impairs good heat transfer. Stack temperature increases, and efficiency decreases. To avoid this problem, adjust the air supply to provide no more than trace smoke spot on Bacharach Scale.

NOTICE

Before operating furnace check burner alignment with combustion chamber. End cone of air tube must be centred to accommodating ring of combustion chamber. Adjust as necessary.

17. Burner Electrodes

Correct positioning of electrode tips with respect to each other, fuel oil nozzle, and burners is essential for smooth light ups and proper operation.

Refer to oil burner instructions provided with furnace and Appendix A Section A.2 in this manual for electrode specifications.

NOTICE

Do not tamper with furnace controls they are sensitive. If problems persist, call your service contractor.

18. Burner Primary (Safety) Control

Furnace is equipped with primary combustion control, also referred to as burner relay or burner protector relay, which uses a cad cell located in burner housing, to monitor and control combustion.

Dust or combustion residuals can build up on lens of cad cell impairing its response to flame. Check cad cell for cleanliness and proper alignment if primary control frequently shuts down combustion.

19. Combustion Chamber

Furnace is equipped with ceramic fiber combustion chamber, held in place by a retaining bracket.

Check the alignment of the combustion chamber and oil burner before firing. It is possible for the combustion chamber to shift if subjected to rough handling during transit.

Inspect combustion chamber for damage or carbon build up whenever oil burner is removed for repairs or routine maintenance.

⚠ WARNING

Fire, burn, asphyxiation hazard. Do not start the burner unless blower access door is secured in place. Failure to follow these instructions could result in death or serious injury.

20a. Circulating Air Blower (HTL)

- HTL and HTLV furnace models are equipped with direct drive blower systems.
- HTL models are equipped with PSC motors.
- HTLV models are equipped with electronically commutated motors (ECM).
- Direct drive blower speed adjustments are not normally required in properly sized extended plenum duct systems. Motor RPM and air CFM delivery will vary automatically to accommodate conditions within usual range of external static pressures typical of residential duct systems.
- Under-sized duct systems may require higher blower speed to obtain system temperature rise.

- Some older duct systems were not designed to provide static pressure. They typically feature special reducing fittings at each branch run and lack block ends on the trunk ducts. These systems may require modification to provide some resistance to the airflow to prevent over-amping of direct drive blower motor. Selecting a lower blower speed may correct this problem.
- Direct drive blower speeds are adjusted by changing "hot" wires to motor winding connections. Refer to wiring diagrams in Appendix B or wiring diagram label affixed to furnace.
- **Do not move neutral wire (normally white wire) to adjust blower speed.**
- Single blower speed for both heating and cooling modes may be used. Use a "piggy-back connector" accommodating both wires on a single motor tap.
- It is also acceptable to connect selected motor speed with a pigtail joined to both heating and cooling speed wires with a wire nut.
- Safety precaution against accidental disconnection of wires by vibration, secure wire nut and wires with few wraps of electricians tape.
- **Do not connect power leads between motor speeds. Always connect neutral wire to motor's designated neutral terminal.**
- If joining blower speed wiring is done in furnace junction box, tape off both ends of unused wire.
- **Do not use blower speed wires as source of power to accessories as electronic air cleaners and humidifier transformers. Unused motor taps auto-generate sufficiently high voltages to damage accessory equipment.**

⚠ WARNING

Electrical shock hazard. Turn OFF electrical power supply at service panel before opening blower access door. Failure to do so could result in death or serious injury.

20b. Circulating Air Blower (HTLV)

HTLV furnace models are equipped with electronically commutated motors (ECM).

Setting Blower Speed and "ON" and "OFF" Timings

Blower speed and on/off time delays are handled by ECM motor programming and are set via dip switches per Table A-5. Heating airflow rate is SW1 and on/off delay is SW4, both are set according to firing rate. Cooling airflow rate is SW2 and if used is set according to installed cooling capacity. SW3 can be used to adjust airflow rate by (+) or (-) 15%. Features of this ECM variable speed motor are that it will deliver a constant airflow within a wide range of external static pressures, and also includes:

- **Soft Start:** ECM will slowly ramp up to required operating speed. In heating cycle allows heat exchanger to reach operating temperature before set heat speed, minimizes noise and increases comfort.
- **Soft Stop:** At end of heating cycle, ECM will slowly ramp down. Allows increased energy efficiency and reduced noise levels.
- **Continuous Fan Operation:** When thermostat continuous fan (G) switch is on without call for heating or cooling, indoor fan is immediately energized to 50% of cooling speed. Allows continuous circulation of air between calls for heating or cooling. If call for heat (W) or cool (Y) occurs during continuous fan, blower remains energized.

21. Maintenance And Service

Routine Maintenance By Home Owner

- Arrange for professional servicing of furnace by the service or installation contractor annually.
- Homeowner is to maintain air filter or filters. A dirty filter can cause furnace to over-heat, fail to maintain indoor temperature during cold weather, increase fuel consumption and cause component failure.
- Inspect, clean or replace filter monthly.
- Furnace is supplied with semi-permanent type filter. If filter is damaged, replace with filters of same size and type.
- During monthly filter inspection, inspect general condition of furnace. Watch for signs of oil leaks in vicinity of oil burner, soot forming on any external part of furnace, soot forming around joints in vent pipe, etc. If any of these conditions are present, please advise your service or installation contractor.

Annual Service By Contractor

NOTICE

Combustion chamber (fire pot) is fragile. Use care when inspecting and cleaning this area

- Inspect heat exchanger periodically and clean if necessary.

WARNING

Electrical shock hazard. Turn OFF electrical power supply at service panel before service or maintenance Failure to do so could result in death or serious injury.

- If cleaning is necessary, shut off oil supply, shut off power to the furnace and remove burner.
- Use stiff brush with wire handle, brush off scale and soot from inside drum and flue pipe.
- Clean radiator, remove clean-out cap screws. Remove caps carefully to avoid tearing gaskets.
- Wire brush can be used to loosen dirt and debris on the inside surfaces of radiator. Clean out all accumulated dirt, soot and debris with a wire handled brush and an industrial vacuum cleaner.
- Before replacing clean-out caps, inspect gaskets. If gaskets are broken, remove remnants and replace with new gaskets.
- Blower motor is factory oiled and permanently sealed. **Do not lubricate.** Excess oil causes premature electric motor failure.
- Inspect blower fan. Clean if necessary.
- Oil Burner Maintenance: Follow oil burner manufacturer instructions.
- Change oil burner nozzle and oil filter annually.
- Clean and inspect venting system for signs of deterioration. Replace pitted or perforated vent pipe and fittings.
- Barometric damper should open and close freely.
- Check electrical connections to ensure tight connections. Safety controls such as the high limit controls should be tested for functionality.
- Check fan control to ensure fan on and off delay function continues to start and stop blower fan at optimal settings.

WARNING

Fire, burn, explosion, asphyxiation hazard.

- Do not start burner when excess oil has accumulated, furnace is full of vapor, or combustion chamber is very hot.
- Do not burn garbage or paper in furnace.
- Do not leave paper or rags around furnace.

Failure to follow these instructions could result in death or serious injury.

22. OPERATING INSTRUCTIONS (HTL)

Before Lighting

1. Open all supply and return air registers and grilles.
2. Open all valves in oil pipes.
3. Turn on electric power supply

To Light Unit

1. Set thermostat above room temperature to call for heat. Burner should start. It may be necessary to press RESET button on primary combustion control relay.
2. There is a fan on time delay before circulating fan is energized. United Technologies 1158-120 has adjustable fan on time set by selecting dip switch combination displayed in Chart 1. Fan on delay can be set at 30, 60, 90 or 120 seconds.
3. Set the thermostat below room temperature. Oil burner stops.
4. Air circulation blower continues to operate until time off setting selected on electronic fan timer control times out. United Technologies 1158-120 has adjustable fan off time of 2, 3, 4 or 6 minutes. Fan timer control adjustments may be altered if air at room registers is high upon blower start up or shutdown.
5. Restore thermostat setting to comfortable temperature.

To Shut Down Unit

1. Set thermostat to lowest possible setting.
2. Set manual switch (if installed) in electrical power supply line to "OFF".

23. Operating Instructions (HTLV)

Before Lighting

1. Open all supply and return air registers and grilles.
2. Open all valves in oil pipes.
3. Turn on electric power supply.

To Light Unit

1. Set thermostat above room temperature to call for heat. Burner should start. It may be necessary to press RESET button on primary combustion control relay.
2. There is a fan on time delay before circulating fan is energized. United Technologies 1168-1 has adjustable fan on/off time delay programmed into ECM motor, and is set by selecting SW4 DIP switch combination displayed in Table A-9. Adjust Fan on/off delay according to input (nozzle size).
3. Set thermostat below room temperature. Oil burner stops.
4. Air circulation blower continues to operate until blower off delay setting programmed into ECM motor times out.
5. Restore thermostat setting to comfortable temperature.

NOTICE

If furnace is to be shut down for extended period of time, close oil supply valve to burner.

Check out and adjustments

HTL and HTLV furnaces may be used with following oil burners.

Beckett AF, and Riello 40F oil burners are for applications using indoor air for combustion only.

Table A-1 Beckett AF Oil Burner Set-Up

Beckett AF Series Oil Burner Set-Up (For use with chimney vented units only)							
Furnace Model	Output Btu\Hr	Burner Model	Nozzle	Pump Pressure	Flow Rate	Head	Static Plate
HTL90D2	83,000	AF65XN	0.75/70°W	100 psi	0.75 USGPH	F3	2 3/4
HTL100D2	100,000	AF65XN	0.85/70°W	100 psi	0.85 USGPH	F3	2 3/4
HTL120D2	117,000	AF65XN	1.00/70°W	100 psi	1.00 USGPH	F3	2 3/4

Table A-2 Riello 40F Series Oil Burner Set-Up

Riello 40F Series Oil Burner Set-Up (For use with chimney vented units only)					
Furnace Model	Output Btu\Hr	Burner Model	Nozzle	Pump Pressure	Flow Rate
HTL90DRF2	90,000	40F3	0.65 x 60°W	140 psi	0.75 USGPH
HTLV90DRF2					
HTL100DRF2	101,000	40F3	0.75 x 60°W	140 psi	0.85 USGPH
HTLV100DRF2					
HTL115DRF2	112,000	40F3	0.85 x 60°W	140 psi	0.95 USGPH
HTLV115DRF2					

A.1 OIL BURNER AIR ADJUSTMENT

Consult oil burner instructions provided in furnace documents envelope for specific information concerning burner adjustments, operation and troubleshooting.

Beckett AF Burner (Chimney Vent)

Adjust air shutter by loosening locking screws. Moving air shutter, and if necessary, bulk air band.

Riello 40F3 Burner (Chimney Vent)

Combustion air is adjusted by removing burner cover. Loosen screws that secure air adjustment plate. Move adjusting plate to either increase or decrease combustion air. When proper air setting is achieved, retighten fixing screws.

A.2 Burner Electrodes

Adjustment of electrode tips with respect to each other, nozzle, burner head is very important to ensure smooth start-ups and to permit efficient combustion.

Beckett AF Burners

- Electrode gap: 5/32 inch.
- Distance above horizontal center-line: 5/16 inch. Older instruction sheets specify 7/16 inch. Current specification is 5/16 inch.
- Distance ahead of nozzle: 1/16 inch.
- "Z" dimension, distance from front of end cone (head) to face of nozzle should be 1-1/8 inches. If ceramic head is used, distance from end cone to nozzle face is increased to 1-3/8 inches.

Riello 40F Burners

- Electrode gap: 5/32 inch.
- Distance above horizontal center-line: 13/64 inch.
- Distance ahead of nozzle: 5/64 to 7/64 inch.

A.3 Start Up

Use following instructions to set the burner:

1. Shut off electrical power to the furnace.
2. Install oil pressure gauge to pressure port on oil pump. (Refer to oil pump specification sheet included with burner instructions).
3. Restore electrical power to furnace.
4. Start furnace and bleed all air from fuel oil lines.
5. Close purge valve and fire the unit.
6. Allow furnace to warm up to normal operating temperatures. During this time, set pump pressure in accordance with data provided in Appendix A, Table A-1 and A-2.
7. **Chimney vented units** - Drill 1/4" test port in venting between furnace flue outlet and draft regulator (barometric damper) to take smoke readings.
8. When furnace has reached "steady state" (after approximately 10 minutes). Set combustion air damper to get TRACE of smoke for chimney vented units and ZERO smoke for sidewall vented units.
9. Check system temperature rise. *Temperature rise is the difference between return air temperature measured at a point near return air inlet, and supply air temperature measured near furnace outlet.*
System temperature rise is listed on furnace rating plate. If temperature rise is too high, airflow must be increased. If temperature rise is too low, slow fan down.
10. After air adjustments have been completed, recheck the overfire draft at test port on burner mounting plate shown in Figure 2. Overfire draft should be adjusted to -0.02 inches w.c.
11. Turn burner off. Observe duct thermometer in supply air stream, note temperature blower fan stops. Fan adjustments can be made by moving dip switch settings on timer control board for fan off delay.
12. Check operation of limit switch.
 - A. Shut off power to furnace.
 - B. Temporarily remove neutral wire from PSC blower motor or remove 5 pin power connector from ECM blower motor. Isolate AC line voltage pins on 5 pin power connector with electrical tape to prevent electric shock hazard.
 - C. Restore electrical power to furnace.
 - D. Set thermostat above room temperature.
 - E. After three or four minutes of burner operation, limit control should turn burner off.
 - F. When limit function test is complete, shut off electrical power to furnace, replace neutral wire to PSC blower motor or 5 pin power connector to ECM blower motor. Restore power.
 - G. Blower fan should start up immediately. Once temperature has dropped and limit control has reset, fan should operate until fan off time is reached.
 - H. Oil burner should resume operation and continue until thermostat is satisfied.
 - I. Restore thermostat setting to comfortable temperature.
13. Set heat anticipator adjustment in thermostat (if so equipped), by removing "R" or "W" wire to thermostat. Read amperage draw between the two wires. Failure to remove one of the wires from thermostat while performing this test could burn out heat anticipator. Set heat anticipator to amperage measured.
14. Run furnace through at least three full cycles before leaving the installation, to ensure all controls are operating properly.
15. Check all joints in any positive pressure venting system for leaks before leaving the installation site

A.4 Special Instructions For Units Equipped With Riello Burners

Riello specifications are listed in Table A-2. Consult Riello Installation Instructions supplied with Burner for specific information concerning burner adjustments, operation, and trouble-shooting.

A.5 Final Check Out

Verify all safety devices and electrical components have been set for normal operation.

Verify all electrical connections are tight and wiring is secure.

Verify homeowner is informed and understands:

Where circuit breaker or fuse is located in main electrical panel.

Where furnace switch is located, and switch "on" and "off" positions if not obvious.

Where oil shut-off valve from oil storage tank is located.

Thermostat operation, and other related accessories.

How to operate manual reset button on primary control, and when not to push the reset button.

How and where to visually inspect venting system for leaks or other problems.

How to inspect, clean and replace air filter, and other homeowner maintenance procedures.

Who to call for emergency service and routine annual service.

FIGURE 3: UNITED TECHNOLOGIES 1158-120 FAN
TIMER BOARD (HTL)

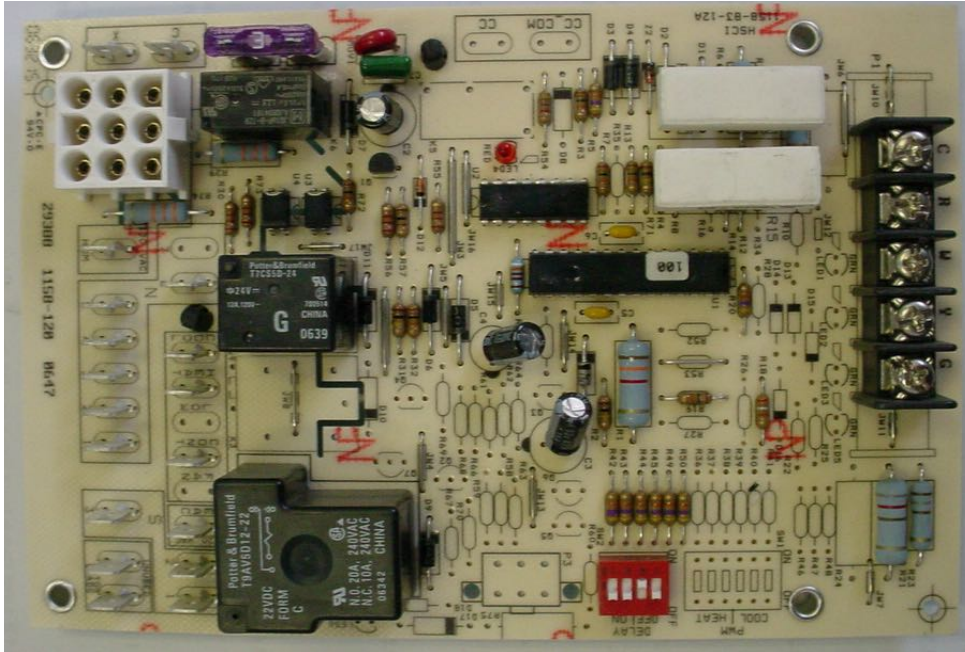


FIGURE 4: UNITED TECHNOLOGIES 1168-1 ECM
TAP BOARD (HTLV)

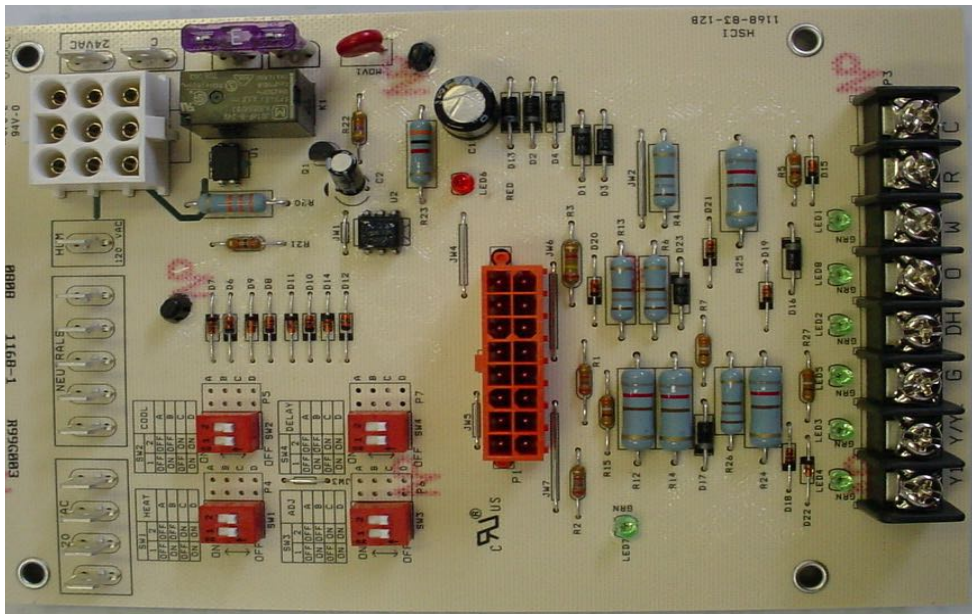


Table A-3 - Direct Drive Blower Set-Up PSC Motor

Furnace Model	Blower	Blower Set-Up				Cooling Capacity		
		0.20 in. w.c.		0.50 in. w.c.		Tons	Power	CFM Range
		Speed	Motor	Speed	Motor			
HTL90	100-10R DD	Med-Low	1/2 HP	Med-High	1/2 HP	3	1/2 HP	696 – 1440
HTL100	100-10R DD	Med-Low	1/2 HP	Med-High	1/2 HP	3	1/2 HP	696 – 1440
HTL115/120	100-10R DD	Med-High	1/2 HP	Med-High	1/2 HP	3	1/2 HP	696 – 1440

Table A-4 - Direct Drive Blower Characteristics PSC Motor

Furnace Model	Blower	Motor HP	Motor FLA	ΔT	Speed	CFM				
						External Static Pressure – Inches w.c.				
						0.2	0.3	0.4	0.5	0.6
HTL 90-120	100-10R DD	1/2 HP	7.1	70°F	High	1639	1581	1507	1440	1374
					Med-High	1544	1493	1429	1366	1300
					Med-Low	1158	1144	1121	1084	1040
					Low	766	743	703	696	661

TIP: These formulae assist with duct work design and determination of airflow delivery:

CFM = BONNET OUTPUT / (1.085 X System Temperature Rise (ΔT))

System Temperature Rise (ΔT) = Bonnet Output/(1.085 x CFM)

Table A-5 Direct Drive Blower Setup - 1/2 HP ECM Variable Speed Constant CFM Motor (HTLV)

Dip Switch Adjustment Chart


For Input 0.75 USGPH TO 0.95 USGPH

SW1 - HEAT		POS.	INPUT USGPH
DIP Switch Position			
1	2		
OFF	OFF	A	0.95
ON	OFF	B	0.85
OFF	ON	C	N/A
ON	ON	D	0.75

SW2 - COOL		POS.	AC Size (TON)
DIP Switch Position			
1	2		
OFF	OFF	A	3
ON	OFF	B	2.5
OFF	ON	C	2
ON	ON	D	1.5

SW3 - ADJUST		POS.	CFM
DIP Switch Position			
1	2		
OFF	OFF	A	0%
ON	OFF	B	(+)15%
OFF	ON	C	(-)15%
ON	ON	D	N/A

SW4 - DELAY		POS.	INPUT USGPH
DIP Switch Position			
1	2		
OFF	OFF	A	0.95
ON	OFF	B	0.85
OFF	ON	C	N/A
ON	ON	D	0.75

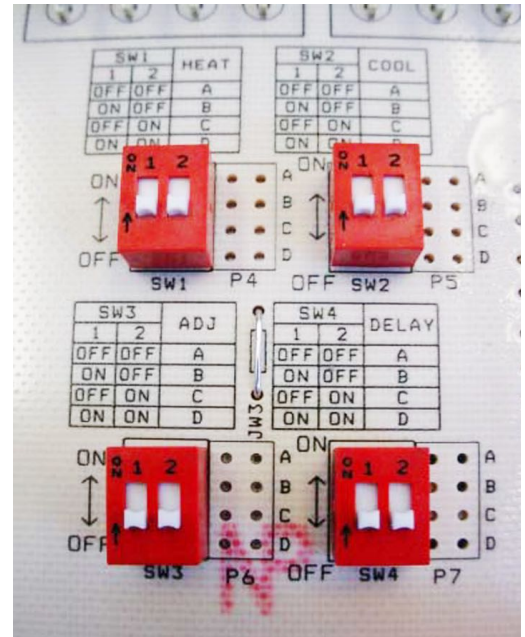

NOTE:

SW1 (HEAT) AND SW4 (DELAY): Dip Switches must both be adjusted according to Input (Nozzle Size).

SW2 (COOL): 1 TON is approximately equal to 400 CFM

SW3 (ADJUST): Position B increases CFM. In Heating Mode this decreases temperature rise.

Position C decreases CFM. In Heating Mode this increases temperature rise.

APPENDIX A - CHECK OUT AND ADJUSTMENTS

Table A-6 Direct Drive Blower Characteristics - 1/2 HP ECM Variable Speed Constant CFM Motor

Furnace Model	Blower	Motor HP	Motor FLA	ΔT
HTLV 90-115	100-10R DD	1/2 HP ECM	7.7	55-85°F
OIL HEATING				
SW1 HEAT DIP SWITCH POSITION	INPUT [USGPH]	CFM WITH SW3-ADJ DIP SWITCH POSITION A	CFM WITH SW3-ADJ DIP SWITCH POSITION B	CFM WITH SW3-ADJ DIP SWITCH POSITION C
A (1=OFF, 2=OFF)	0.95	1600	1600	1360
B (1=ON, 2=OFF)	0.85	1449	1600	1232
C (1=OFF, 2=ON)	N/A	N/A	N/A	N/A
D (1=ON, 2=ON)	0.75	1323	1521	1125
CONTINUOUS FAN				
SW2 COOL DIP SWITCH POSITION	AC SIZE [TONS]	CFM WITH SW3-ADJ DIP SWITCH POSITION A	CFM WITH SW3-ADJ DIP SWITCH POSITION B	CFM WITH SW3-ADJ DIP SWITCH POSITION C
A (1=OFF, 2=OFF)	3	600	690	510
B (1=ON, 2=OFF)	2.5	500	575	425
C (1=OFF, 2=ON)	2	400	460	340
D (1=ON, 2=ON)	1.5	300	345	255
COOLING OR HEAT PUMP HEATING				
SW2 COOL DIP SWITCH POSITION	AC SIZE [TONS]	CFM WITH SW3-ADJ DIP SWITCH POSITION A	CFM WITH SW3-ADJ DIP SWITCH POSITION B	CFM WITH SW3-ADJ DIP SWITCH POSITION C
A (1=OFF, 2=OFF)	3	1200	1380	1020
B (1=ON, 2=OFF)	2.5	1000	1150	850
C (1=OFF, 2=ON)	2	800	920	680
D (1=ON, 2=ON)	1.5	600	690	510
DELAY PROFILE FOR OIL HEATING				
SW4 DELAY DIP SWITCH POSITION	INPUT [USGPH]	PRE RUN ON DELAY	SHORT RUN ON DELAY	OFF DELAY
		TIME - CFM LEVEL	TIME - CFM LEVEL	TIME - CFM LEVEL
A (1=OFF, 2=OFF)	0.95	45 SECONDS - 0%	60 SECONDS - 50%	5 MINUTES - 75%
B (1=ON, 2=OFF)	0.85	60 SECONDS - 0%	60 SECONDS - 63%	5 MINUTES - 75%
C (1=OFF, 2=ON)	N/A	N/A	N/A	N/A
D (1=ON, 2=ON)	0.75	60 SECONDS - 0%	60 SECONDS - 50 %	5 MINUTES - 75%
DELAY PROFILE FOR COOLING OR HEAT PUMP HEATING				
NO ADJUSTMENT REQUIRED	AC SIZE [TONS]	PRE RUN ON DELAY TIME - CFM LEVEL	SHORT RUN ON DELAY TIME - CFM LEVEL	OFF DELAY TIME - CFM LEVEL
N/A	ALL	NONE	NONE	NONE

APPENDIX C - SEQUENCE OF OPERATION AND TROUBLESHOOTING

Table C-1: 1158-120 Electronic Fan Timer Board (EFT) Detailed Sequence Of Operation (HTL)

Mode	Action	System Response
HEAT	Thermostat calls for heat. ("W" terminal is energized).	EFT closes the oil primary control T - T connections. Ignition system and the oil primary control start the furnace. Oil flows as long as the oil primary control senses flame. Burner motor is energized and heat "fan on" delay timing begins. When timing is complete, the circulator fan is energized at heat speed.
	Thermostat ends call for heat. ("W" terminal is de-energized).	The oil primary control is de-energized, terminating the burner cycle. Heat "fan off" delay timing begins. Length of delay depends on EFT dip switch settings. When timing is complete, the circulator fan is de-energized. EFT returns to standby mode, (Oil primary control and circulator fan are off, unless continuous fan operation is selected at the thermostat).
	Burner fails to light.	Oil primary control locks out within lockout timing, (15 seconds). Burner motor is de-energized. (Even though thermostat is still calling for heat). If circulator fan has started, it continues through the selected heat "fan off" delay period.
	Established flame fails.	Burner motor is de-energized and oil primary control goes into recycle mode. If the selected heat "fan off" delay timing is longer than the recycle delay timing, the circulator fan continues to run through the next trial for ignition.
COOL	Thermostat begins call for cool. (G and Y terminals are energized).	Cooling contactor is energized immediately. Circulator fan is energized at cool speed.
	Thermostat ends call for cool. (G and Y terminals are de-energized).	Cooling contactor is de-energized immediately. Circulator fan turns off immediately.
FAN	Thermostat begins call for fan. (G terminal is energized).	Circulator fan is energized immediately at cooling speed.
	Thermostat ends call for fan. (G terminal is de-energized).	Circulator fan is de-energized immediately.
LIMIT	Limit switch string opens.	Oil primary control shuts off burner. Circulator fan is energized immediately at heat speed. EFT opens the oil primary control T - T connections. Circulating fan runs as long as limit string stays open. If there is a call for cooling or fan, the circulating fan switches from heating to cooling speed.
	Limit switch string closes (with existing call for heat).	EFT begins heat "fan off" delay sequence. Circulating fan turns off after the selected heat "fan off" timing. EFT re-closes the oil primary control T - T connections. Oil primary control is energized, initiating burner light off.
	Limit switch string closes (without existing call for heat).	Circulator fan turns off when heat "fan off" delay time is complete. Normal operation resumes; EFT control is in standby mode awaiting next thermostat command.
FAN	Continuous circulating fan is connected.	Circulating fan is energized when there is no call for heat, cool, or fan. If fan operation is required by a call for heat, cool, or fan, the EFT switches off the continuous fan speed tap before energizing the other fan speed.
EAC	Electronic Air Cleaner is connected.	Electronic air cleaner (EAC) connections are energized when the heat or cool speed of the circulator fan is energized. EAC connections are not energized when the optional continuous fan terminal is energized.
HUM	Humidity control is connected.	Humidifier connections are energized when the oil burner motor is energized.

Table C-2: 1168-1 ECM Tap Board Sequence of Operation (HTLV)

Thermostat Input LEDs (LED 1-5, LED 8)

Six green LEDs are placed behind their respective thermostat connections (Y1, Y/Y2, G, DH, O, W) and illuminate whenever a call is present.

Mode	Action	System Response
HEAT	Thermostat call for heat "W"	The 24 VAC input signal is passed to pin 2 of P1 and will drive the K1 relay that provides dedicated contacts to the T-T input of the oil primary control. Blower runs on heating speed profile.
COOL	Thermostat calls for single stage cooling or second stage of two stage cooling "Y/Y2"	The 24 VAC input signal is passed to pin 14 of P1. Blower runs on cooling speed profile.
	Thermostat calls for first stage of two stage cooling "Y1" while "Y/Y2" is not calling	The 24 VAC input signal is passed to pin 6 of P1. Blower runs on cooling speed profile.
FAN	Thermostat calls for fan "G"	The 24 VAC input signal is passed to pin 15 of P1. Blower runs at continuous low speed profile which is 50% of cooling speed.
DEHUMID	Thermostat calls for Dehumidification "DH"	The 24 VAC input signal is passed to pin 10 of P1. Blower runs according to "Y1" and "Y/Y2" calls as noted above.
REVERSING VALVE	Thermostat calls for reversing valve "O"	The 24 VAC input signal is passed to pin 9 of P1. Blower runs according to "Y1" and "Y/Y2" calls as noted above.

C.1 Troubleshooting

WARNING

Electrical shock hazard. Only a trained, experienced service technician should perform troubleshooting procedure. Failure to do so could result in death or serious injury.

C.2 Preliminary Steps:

Consult Beckett or Riello instruction manuals provided with oil burner for specific information regarding oil burner primary control sequence of operation, diagnostics and troubleshooting.

Check diagnostic light for indications of burner condition.

NOTICE

When simulating call for heat at oil primary control, disconnect at least one thermostat lead wire from T - T terminals to prevent damage to thermostat. Neglecting this procedure may burn out heat anticipator of standard 24 vac thermostat, or cause harm to components within micro-electronic thermostat.

Before checking oil primary control, perform these preliminary checks, repair or replace controls as necessary:

- Check power supply, fuse box or breaker, any service switches, all wiring connections, and burner motor reset button (if equipped).
- Check limit switches to ensure switch contacts are closed.
- Check electrode gap and position.
- Check contacts between oil primary control and electrodes.
- Check oil supply (tank gauge).
- Check oil nozzle, oil filter, and oil valves.
- Check piping or tubing to oil tank.
- Check oil pump pressure.

C.3 Check Oil Primary Control

If the trouble does not appear to be in the burner or ignition hardware, check the oil primary control per manufacturer's instructions included with oil burner.

⚠ WARNING

Electrical shock hazard. Only a trained, experienced service technician should perform troubleshooting procedure. Failure to do so could result in death or serious injury.

Table C2: System and General Troubleshooting

Problem	Possible Cause	Remedy
Furnace will not start.	Thermostat not calling for heat	Check thermostat and adjust. Check thermostat for accuracy; if mercury switch type, it might be off level.
	No power to furnace	Check furnace switch, main electrical panel furnace fuse or circuit breaker. Look for any other hand operated switch, such as old poorly located furnace switch, which was not removed during furnace replacement.
	Thermostat faulty	Remove thermostat wires from oil primary control terminals T-T. Place a jumper across T-T. If furnace starts, replace thermostat, thermostat sub-base (if equipped), or both.
	Oil primary control faulty	Check reset button on oil primary control. Remove thermostat wires from oil primary control terminals T - T. Check for 24V across T -T. If no voltage is present, check for 115V to oil primary control. If 115V is present, refer to oil primary control documentation provided with oil burner.
	Photo Cell wiring shorted or room light leaking into photo cell compartment	Check photo cell (cad cell) wiring for short circuits. Check for room light leaking into cad cell compartment. Repair light leak if necessary.
	Open safety switch	Check for open limit or auxiliary limit. Check internal wiring connections; loose connectors, etc.
Furnace will not start without first pushing oil primary control reset button. (Happens on frequent basis)	No fuel oil	Check fuel oil supply. Check all hand operated fuel oil valves are in open position. Fill oil storage tank if necessary.
	Clogged nozzle	Replace nozzle with high quality replacement. Use rating plate or Tables in Appendix A as a guide.
	Clogged oil filter	Replace oil tank filter or in-line filter if used.
	Low oil pump pressure	Connect pressure gauge to oil pump. Adjust pump pressure, or replace oil pump if necessary. Verify erratic pressure readings are not caused by defective fuel oil line.
	Air getting into fuel oil lines, or fuel oil line dirty, clogged, or in some manner defective	Check fuel oil lines. Replace any compression fittings found with high quality flared fittings. Check for signs of oil leaks. Any oil leak is potential source of air or contaminants.
	Defective burner motor	Check burner motor. If burner motor is cutting out on over-load, determine why. Replace if necessary.

APPENDIX C - SEQUENCE OF OPERATION AND TROUBLESHOOTING

Table C-2: System and General Troubleshooting continued

Problem	Possible Cause	Remedy
Furnace starts, but cuts out requiring manually resetting oil protector reset button.	Photo Cell (Cad Cell) defective.	If cad cell is dirty, clean it. Determine why cad cell is getting dirty. If cad cell is poorly aimed, realign it. NOTE: Photocell should have resistance of 100 K Ω in absence of light; maximum of 1500 Ω in presence of light. Verify room light is not leaking into the cad cell compartment. (See diagnostic light section).
Furnace starts, but cuts out requiring manually resetting oil protector reset button.	No fuel oil.	Check fuel oil supply. Check that all hand operated fuel oil valves are in the open position. Fill oil storage tank if necessary.
	Clogged nozzle.	Replace nozzle with high quality replacement. Use rating plate or Tables in Appendix A as a guide.
	Clogged oil filter.	Replace oil tank filter or in-line filter if used.
	Low oil pump pressure.	Connect pressure gauge to oil pump. Adjust pump pressure, or replace oil pump if necessary. Verify erratic pressure readings are not caused by defective fuel oil line.
	Air getting into fuel oil lines, or fuel oil line dirty, clogged, or in some manner defective.	Check fuel oil lines. Replace any compression fittings found with high quality flared fittings. Check for any signs of oil leaks. Any oil leak is a potential source of air or contaminants.
	Defective burner motor.	Check burner motor. If burner motor is cutting out on over-load, determine why. Replace if necessary.
	Water or contaminants in oil.	Drain fuel oil storage tank; replace fuel oil. (Consult with fuel oil supplier).
Frozen oil line.	Gently warm oil line. Insulate oil line. (Outdoor piping size may require increased diameter).	
Oil burner sputtering at nozzle	Electrodes out of adjustment or defective.	Check electrode settings. Check electrodes for dirt build-up or cracks in porcelain.
	Poor igniter connections or defective igniter.	Check contacts between the igniter and electrodes. If OK, replace the igniter
	Fuel oil filter clogged.	Replace fuel oil storage tank filter and / or fuel oil in-line filter.
	Defective oil pump.	Check burner motor and / or fuel oil pump coupling. Check oil pump pressure. Replace fuel oil pump if necessary.
	Fuel oil line partially clogged or contains air.	Bleed air from oil line. If problem persists, replace oil line.
Excessive fuel oil consumption.	System temperature rise too high.	System temperature rise should not exceed 75°F. Check for clogged air filters. Check blower fan for excess dirt build-up or debris. Speed up blower fan if necessary.
	Poor "fan off" delay timing selection, (fan stops too soon).	Check "fan off" delay timing setting. Use duct thermometer in supply air plenum take-off or first few inches of supply air trunk duct. Fan should shut off at 90° - 100°F. Manipulate dip switch settings to come as close as possible to this "fan off" temperature.
	Fuel oil leak.	Check fuel oil line for leaks. Repair or replace if necessary.
	Stack temperature too high.	Check stack temperature. Stack temperatures will normally range from 400° to 500°F. Check draft regulator. Draft should be set to -0.02 in. w.c.
	Thermostat improperly adjusted or in poor location.	Check thermostat heat anticipator setting against measured amperage draw. Increase heat anticipator setting if necessary. If thermostat is being influenced by drafts, sunlight, duct work, etc., relocate to suitable location.

APPENDIX C - SEQUENCE OF OPERATION AND TROUBLESHOOTING

Table C-2: System and General Troubleshooting continued

Problem	Possible Cause	Remedy
Too much smoke.	Insufficient combustion air adjustment at oil burner, or improper draft pressure.	Adjust oil burner combustion air band and draft regulator to gain highest practical CO ₂ or lowest practical O ₂ content in flue gases. See Burner Set Up.
	Heat exchanger partially clogged.	Check for soot build-up in heat exchanger flue passages, especially in outer radiator.
Soot building up on blast tube (end coning).	Poor alignment between oil burner blast tube and fire pot.	Check alignment. Blast tube should be centered with fire pot burner opening. Oil burner head should be ¼ inch back from inside surface of fire pot.
	Flame impingement caused by incorrect nozzle angle.	Check nozzle size and angle. (See Appendix A). Check distance from head to inside surface of fire pot.
	Defective fire-pot	Check fire-pot. Repair or replace.
Furnace will not warm home to desired temperature.	Airflow blocked or dirty air filter.	Clean or replace air filter.
	Thermostat adjustments or location.	Check thermostat heat anticipator setting against measured amperage draw. Increase heat anticipator setting if necessary. If thermostat is being influenced by drafts, sunlight, duct work, etc., relocate to suitable location.
	Insufficient airflow.	Check all dampers. Open closed dampers including registers in unused rooms. Check system temperature rise. If temperature rise is too high, speed up blower fan.
	Defective high limit control.	Test high limit function of all limit switches. Use duct thermometer to verify accuracy of limit control. Check for obstructions to airflow around limit switch bimetal elements. Replace control if necessary.
	Under-sized nozzle.	Check nozzle. If problem is not caused by air flow problems, use larger nozzle, if permitted by rating plate.
	Blower fan motor stopping intermittently on overload.	Check blower fan motor amperage draw. Check motor ventilation ports, clean if necessary. Replace motor if necessary.
	Burner motor stopping intermittently on overload.	Check burner motor. Replace if necessary.
Home does not heat evenly	Improper distribution of heat.	This is not likely to be a furnace problem. Balance duct system.
Supply air temperature too hot.	Airflow blocked or dirty air filter.	Clean or replace air filter.
	Insufficient airflow.	Check all dampers. Open closed dampers including registers in unused rooms. Check system temperature rise. If temperature rise is too high, speed up blower fan.
Supply air temperature too cool.	Excess airflow.	Check system temperature rise. Slow down blower fan if necessary.
	Excessive duct losses.	Check supply air duct work. Seal leaky joints and seams. Insulate duct work if necessary.
Supply air temperature too cool during first moments of furnace cycle.	Fan control "fan on" setting too low.	Increase "fan on" dipswitch settings on EFT if control has this option. Register air deflectors may help.
	Excessive duct losses.	Check supply air duct work. Seal leaky joints and seams. Insulate duct work if necessary.


PARTS LISTING

Parts Listing: Chimney Vent Models HTL(D2,DRF2) and HTLV(D2,DRF2)

Ref. No.	Part No.	DESCRIPTION
1	109007732AD	Left Side Panel Assembly
2	109007730AD	Right Side Panel Assembly
3	109007727AD	Rear Panel
4	29189	Blower Division Assembly
5	26216	Base Panel
6	109007728	Inner Front Panel
7	29122AD	Blower Access Panel
8	21437AD	Top Panel
9	550001633	Heat Exchanger Assembly
10	27068	Combustion Chamber Retainer Bracket
11	8823B1	Replacement Combustion Chamber
12	109007674	Oil Burner Mounting Plate Assembly
	29850	Sight Glass Cover Plate
	29870	Sight Glass Gasket (2 per unit)
	29876	Sight Glass
13	28306	Flue Connector
14	2080175	Pouch Gasket
15	109007733	Air Baffle
16	20602	Insulation Retainer
17	240007841	Radiator Clean-out Cover (2 per unit)
	240006333	Radiator Clean-out Cover Gasket (2 per unit)
18	29161	Clean-out Gasket Retainer
	29163	Clean-out Tube Gasket
19	18020	Filter Frame 16" X 25"
20	5592B2	Filter Frame End Support
21	2180023	Filter 16" X 25" X 1" Permanent
24	29362	Control Box
25	21338AD	Upper Door Panel
	28479	Logo Bezel
	28563	Logo Label
26	28841	Limit Disc 60T11 BOF 220°F
27	29388	Fan Timer Control 1158-120 UTEC HTL
	240007048	Fan Timer Control 1168-1 ECM UTEC HTLV
28	29364	Wire Harness, Controls Fan Timer
29	29365	Wire Harness, Blower
30	29751	Wire Harness, Fan Timer Board, Transformer
31	240006438	Wire Harness, ECM Control HTLV
	240005742	Wire Harness, ECM Supply HTLV
32	240005330	Transformer
33	12240 (6")	Draft Regulator

Ref. No.	Part No.	DESCRIPTION
34a	240007760	Oil Burner Assembly, Beckett AF65XN HTL-D
	29689	Burner Motor 1/7 HP 3450 RPM PSC
	29688	Beckett Clean-cut Oil Pump A2EA6520
	29522	Solid State Ignitor 10SAY-01
	240008816	Oil Primary Combustion Control Genisys
	1050002	Flame Retention Head F3
34b	240007947	Oil Burner Assembly Riello 40F3 HTL(V)-DRF
35a	109007721	Blower Assembly Direct Drive 1/2 HP 4 Speed HTL-D
	30624	Blower Housing and Wheel 100-10R
	102000131	Blower Motor 1/2 HP PSC 4 Speed
	17811	Motor Mounting Band TR5868
	26251	Motor Mounting Arms TR6884B (3 Req'd.)
	27743	Motor Run Capacitor 10 mfd
35b	27761	Capacitor Strap
	27733	Blower Slide Rail (2 Req'd.)
	550002636	Blower Assembly Direct Drive 1/2 HP Variable Speed HTLV-D
	30624	Blower Housing and Wheel 100-10R
	550002637	Blower Motor 1/2 HP ECM Variable Speed
	17811	Motor Mounting Band TR5868
*	26251	Motor Mounting Arms TR6884B (3 Req'd.)
	27733	Blower Slide Rail (2 Req'd)
	30694	Blocked Vent Safety Switch Complete
	30660	Blocked Vent Safety Switch - Replacement Switch Only
	29476	6" 26 Gauge Galvanized Vent Elbow (w/o Hole)
	30683	6" 26 Gauge Galvanized Vent Elbow (w/ Hole for Blocked Vent Safety Switch)
*	28673	Door Handle (2 per unit)

MODEL HTL-D AND HTLV-D

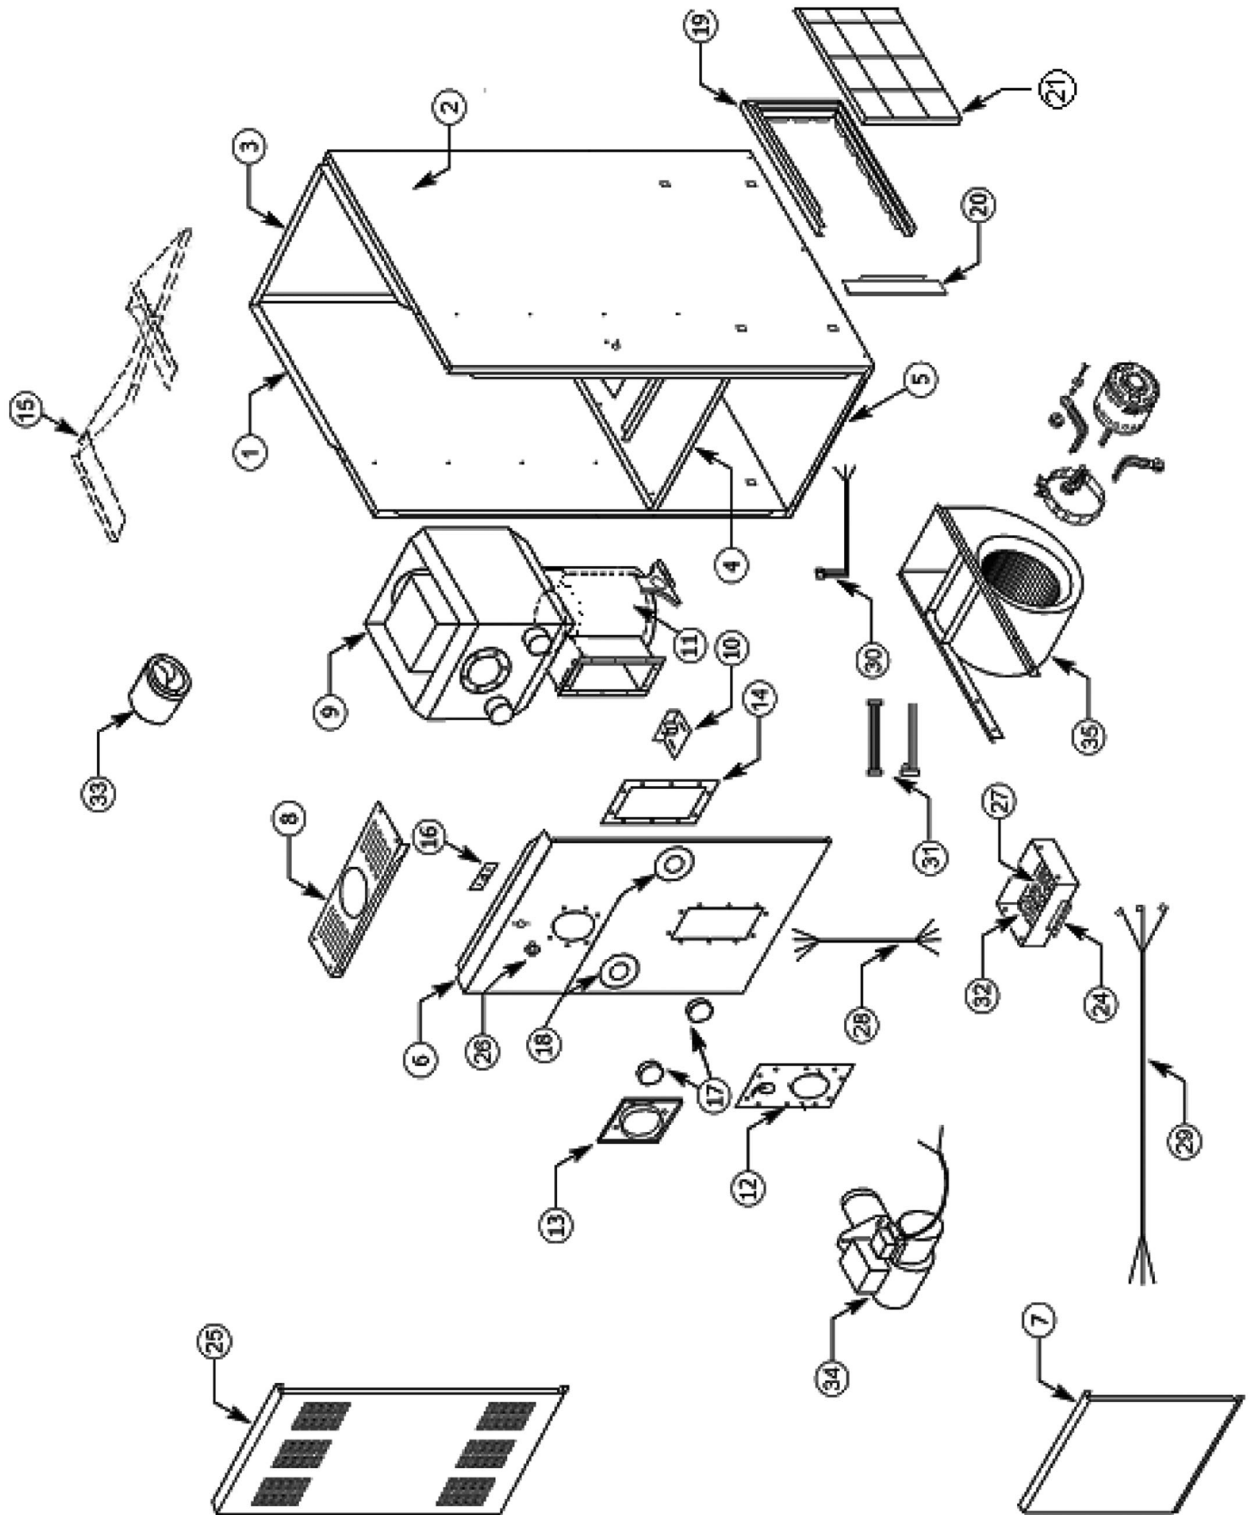

Model No.	
Serial No.	
Date Installed	
Contractor	
Contact	
Address	
Postal Code	
Telephone No.	
After Hours No.	

Fuel Supplier

Fuel Oil Supplier	
Contact	
Telephone No.	
After Hours No.	

