


# THERMOSTAT INSTALLATION INSTRUCTIONS

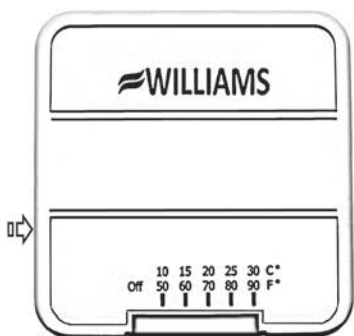


**FIGURE 1 - FRONT VIEW**


- 1) REMOVE THERMOSTAT COVER FROM BASE AS SHOWN IN FIGURE 1.

SQUEEZE SIDES FIRMLY AND LIFT

- 2) DISCONNECT THE POWER SOURCE.
- 3) LOCATE THE THERMOSTAT IN AN AREA WITH GOOD AIR CIRCULATION.  
(NOT ON AN OUTSIDE WALL)
- 4) INSTALL THE THERMOSTAT APPROXIMATELY FIVE-FEET ABOVE THE FLOOR.
- 5) USE ELECTRICAL WIRING APPROVED BY APPLICABLE CODES.
- 6) FEED WIRES THROUGH THE RECTANGULAR SLOTS AS SHOWN IN FIGURE 2.
- 7) CONNECT THE WIRES TO THE TERMINAL SCREWS AS SHOWN IN FIGURE 3.

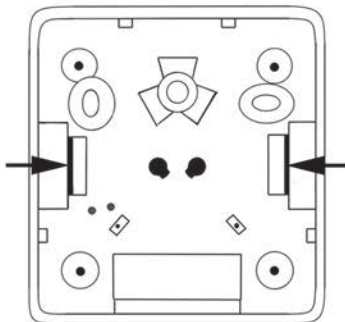

**FIGURE 2 - BACK VIEW**

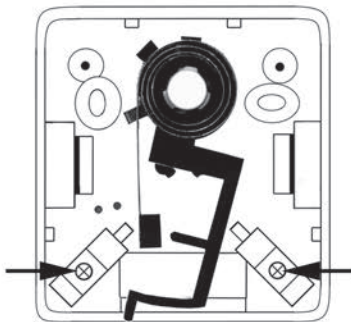

**FIGURE 3 - INSIDE VIEW**

- 8) MAKE SURE THE WIRING DOES NOT INTERFERE WITH THE THERMOSTAT'S OPERATION.
- 9) REPLACE THE COVER.

## WARNING

If this product is used to replace a device containing mercury, the purchaser or consumer must insure that the mercury is properly managed to comply with state or federal regulations. The mercury must not become part of solid waste or waste water. Additional guidance may be obtained from the manufacturer of the product being removed or by calling the Director of Environment Services.