


Steps for programming CZ-RTC2 Remote Controller

These are the locations of the keys used in this procedure.

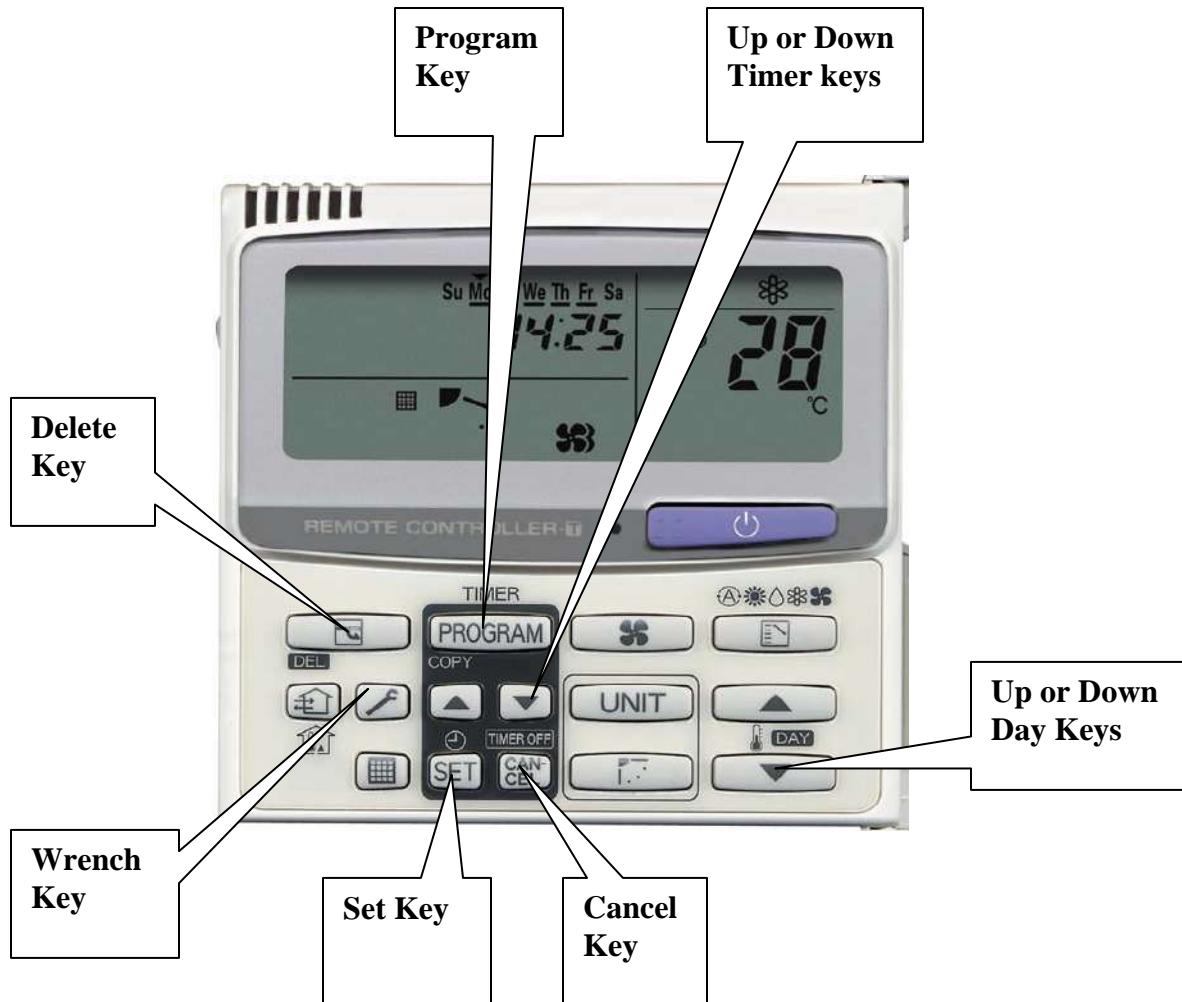


Steps for programming CZ-RTC2 Remote Controller


Note: There can be up to 6 timed functions entered per day. Functions must be entered in the order they occur 1-6.

1. **Setting day of the week and current time of day:** Push and hold the **“SET” KEY** and the hours will start blinking. While hours or minutes are blinking, you can also now set the day of the week. Press the **“UP” or “DOWN” DAY KEY** until desired day is highlighted. Set the correct hour of the day using the **“UP” or “DOWN” ARROW KEY** followed by the **“SET” KEY**. The minutes will now start blinking. Set the correct minutes using the **TIMER “UP” or “DOWN” ARROW KEY** followed by the **“SET” KEY**.


The time Note: on the remote is set in “military time”, this range will be from 0:00 a.m. (representing midnight) - 23:59 hours p.m.

2. **Setting a timed function:** Press the **“PROGRAM” KEY “CH 1”** will then appear in LCD display. Set the day of the week you want to schedule an On/Off timed function, by pressing the **“UP” or “DOWN” DAY KEY**, until the arrow emblem appears above the day to be programmed. 


- There can be up to 6 timed functions per day. Press the **“UP” or “DOWN” TIMER KEY** and set the function from 1 to 6. **Example:** If only one timed function is needed for a particular day you would select timer No. 1 then you would

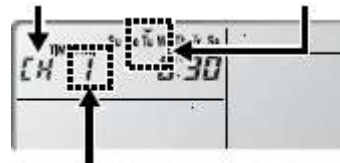

see the following display. **TIMER No. 1~6** For this example we are showing timer No. 2. Next press the **“SET”**

KEY then  will appear on the LCD display.

- “P1” is for setting the hour the unit will be turned on. Press the “UP” or “DOWN” **TIMER KEY** and set the hour. Once desired hour is shown then press the “SET” **KEY** and

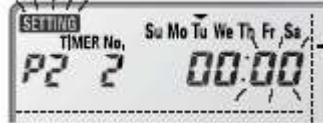



will appear on the LCD display.

- “P2” is for setting the desired minutes. Using the “UP” or “DOWN” **TIMER KEY**, set the desired minutes, then press the “SET” **key**.

- Now “P3” will be displayed and is for setting on and off times and the desired temperature set-point.



- Using the **UP KEY ONLY** of the “UP” or “DOWN” **ARROW KEYS** will toggle between on or off and the temperature set-point.


-  This icon represents the “OFF” position.
-  This icon represents the “ON” position.

- By default the “ON” icon will be flashing.
- Press the “UP” arrow once and the “OFF” icon will appear.
- Press the “UP” arrow again and the “ON” icon will appear and you can now set the temperature set-point with the “UP” or “DOWN DAY KEY.
- Press the “UP” arrow again and you can set the temperature set-point only with the “UP” or “DOWN ARROW KEY.
- Press the “SET” **KEY** to complete.
- Press the “CANCEL” **KEY** to exit the programming.

Note: Each day of the week that has a set timed on or off function will be represented by a black line under its particular day of the week.

Example: Su Mo Tu We Th Fr Sa

3. **Copying program from one day to the next:** First press the **“PROGRAM” KEY**. Make sure the desired day of the week to be copied is highlighted by using the **“UP” or “DOWN” DAY**

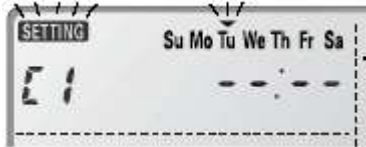

ARROWS. Now press the **“PROGRAM” KEY** one more time and the following will be



displayed. Press the **“SET” KEY**. Now use the **“UP” or “DOWN” DAY KEY** to select the day you wish to copy to. Press the **“SET” KEY**. Press the **“CANCEL” KEY** to return to normal operation. Repeat the above steps to copy to each day of the week you wish to copy to.

4. **Turning off the timer without deleting the timer program:**

To keep the system from following the programmed On/OFF time schedule, press the **“CANCEL” KEY** for 3-4 seconds and the following will appear in the LCD window. **TIMER OFF** To re-enable the programmed time schedule press the **“CANCEL” KEY** for 3-4 seconds until the **TIMER OFF** emblem disappears from the LCD window.

5. **Deleting the Program Timer:**

- Press the **“PROGRAM” KEY** once.
- Press the **“UP” or “DOWN” DAY KEYS** to select the day you want to delete.
- Press the **“UP” or “DOWN TIMER KEYS** to select a timer number. (From 1-6).
- Press the **“SET” KEY** to display the P1 programming mode.
- Press the **“DELETE” KEY** to delete the program.
- Press the **“CANCEL” KEY** to exit.