


 IAPMO R & T Certified
against NSF/ANSI 44

 IAPMO R & T Certified
against CSA B483.1

785UF Series Water Softener

- 1. Page 22 of this manual contains important maintenance procedures for the continued proper operation of your unit. These MUST be performed regularly for your warranty to remain valid.**
2. Read all instructions carefully before operation.
3. Avoid pinched o-rings during installation by applying NSF certified lubricant to all seals (provided with install kit).
4. This system is not intended for treating water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

Canada West 855 Park St., Unit 1 Regina, SK S4N 6M1	Canada East 490 Pinebush Rd., Unit 1 Cambridge, ON N1T 0A5	U.S.A. 56 Lightcap Rd. Pottstown, PA 19464	9760 Mayflower Park Drive Suite 110 Carmel, IN 46032	4645 W. McDowell Rd. Suite 106 Phoenix, AZ 85035
--	---	---	--	--

Table of Contents

READ THIS PAGE FIRST BEFORE STARTING INSTALLATION	3
EFFICIENCY STATEMENT	4
HOW YOUR WATER CONDITIONER WORKS	4
SPECIFICATIONS	
SPECIFICATION	5
SYSTEM DIMENSIONS	6
BRINE TANK DIMENSIONS	7
INSTALLATION	
UNPACKING / INSPECTION OF TWIN TANK MODEL	9
UNPACKING / INSPECTION OF CABINET MODEL	11
BEFORE INSTALLATION	13
PREPARATIONS	14
INSTALLING BRINE TANK	16
WATER SOFTENER INSTALLATION	17
CABINET WATER SOFTENER INSTALLATION	18
STARTUP INSTRUCTIONS	19
DURING REGENERATION	21
PLUMBING SYSTEM CLEAN-UP	21
MAINTENANCE INSTRUCTIONS AND SCHEDULE	22
IMPORTANT WARRANTY AND MAINTENANCE INFORMATION	23
SERVICING 785HE VALVE	25
REPLACEMENT	
INSPECTION AND REPLACEMENT OF PISTON ASSEMBLY AND SEAL AND SPACER KIT	26
CLEAN INJECTOR ASSEMBLY	26
REPLACE METER ASSEMBLY	26
REPLACING THE BYPASS AND METER CABLE	27
REPLACE MOTOR	28
REPLACE DRAIN LINE FLOW CONTROL	28
REPLACE BRINE LINE FLOW CONTROL	28
AFTER SERVICING	29
PARTS BREAKDOWN	29
PARTS	
POWERHEAD	30
VALVE BODY	31
BYPASS	32
CABINET	33
TROUBLE SHOOTING GUIDE	34
MASTER PROGRAMMING	35

READ THIS PAGE FIRST

BEFORE STARTING INSTALLATION

- ▶ Read this manual thoroughly to become familiar with the appliance and its capabilities before installing or operating the new appliance. Failure to follow instructions in this manual could result in personal injury or property damage. This manual will also help you to get the most out of your new appliance.
- ▶ Installation must comply with all State, provincial or local regulations. Check with your local public works department for plumbing and sanitation codes. In the event the codes conflict with any content in this manual the local codes should be followed. Consult your licensed plumber for installation of this system.
- ▶ **WARNING!** Do not use water that is microbiologically unsafe without adequate disinfection before or after this system.
- ▶ Do not install this appliance where it may be exposed to wet weather, direct sunlight, or temperatures outside of the range specified above.
- ▶ This appliance is designed to operate on pressures of 30 psi to 125 psi. If the water pressure is higher than the maximum use a pressure reducing valve in the water supply line to the device.
- ▶ This appliance is capable of operating at temperatures between 40°F and 110°F (4°C - 43°C). Do not use this appliance on hot water supplies.
- ▶ Avoid pinched o-rings during installation by applying (provided with install kit) NSF certified lubricant to all seals.
- ▶ It is not uncommon for sediment, precipitated iron or hardness to be present in water supplies. Precipitated minerals or sediments can cause damage to the seals and piston. This is considered a harsh environment and the seals and piston would not be covered by warranty stated or otherwise.
- ▶ It is recommended to regularly inspect and service the control valve on an annual basis. Cleaning and or replacement of piston, seals, and or spacers may be necessary depending on how harsh the conditions are. An Annual Maintenance kit is available for this purpose
- ▶ This publication is based on information available when approved for printing. Continuing design refinement could cause changes that may not be included in this publication. The manufacturer reserves the right to change the specifications referred to in this literature at any time, without prior notice.

INSTALL NOTES & SAFETY MESSAGES

Watch for the following messages in this manual:

NOTE

Do not remove or destroy the serial number. It must be referenced on request for warranty repair or replacement

NOTE: used to emphasize installation, operation or maintenance information which is important but does not present a hazard.



CAUTION!

Disassembly while under pressure can result in flooding.

CAUTION: used when failure to follow directions could result in damage to equipment or property.



WARNING!

ELECTRICAL SHOCK HAZARD! UNPLUG THE UNIT BEFORE REMOVING THE COVER OR ACCESSING ANY INTERNAL CONTROL PARTS

WARNING: used to indicate a hazard which could cause injury or death if ignored.

EFFICIENCY STATEMENT

This product is efficiency rated according to NSF/ANSI 44. The stated efficiencies are valid only at the specified salt dosages and maximum service flow rate.

PERFORMANCE DATA SHEET							
Model Number	785HE-75C	785HE-100C	785HE-75	785HE-100	785HE-150	785HE-200	785HE-300
Qty High Capacity Resin	0.75 ft ³	1.0 ft ³	0.75 ft ³	1.0 ft ³	1.5 ft ³	2.0 ft ³	3.0 ft ³
Rated Service Flow (gpm)	7.5	12.1	7.5	11.0	11.2	12.4	12.9
Pressure Drop at Rated Service Flow (psi)	7.0	15.0	9.0	15.0	15.0	15.0	15.0
Rated Softening Capacity (grains)	9,609 @ 2.25lbs	13,269 @ 3lbs	10,222 @ 3lbs	13,269 @ 3lbs	20,443 @ 4.5lbs	27,258 @ 6lbs	40,887 @ 9lbs
Efficiency (grains/lb salt)	4,271	4,543	4,543	4,543	4,543	4,543	4,543
Max. Flow Rate to Drain (gpm)	2.0	2.4	1.5	2.0	2.4	3.5	5.0
Working Pressure	Min. 20 - Max. 125 psi						
Operating Temperature	Min 39 - Max. 100 degrees Fahrenheit						

These softeners conform to NSF/ANSI 44 for the specific performance claims as verified and substantiated by test data. These models are efficiency rated. The efficiency rating is valid only at the stated salt dose and maximum service flow rate. They have a demand initiated regeneration (D.I.R.) feature that complies with specific performance specifications intended to minimize the amount of regenerant brine and water used in their operation. These softeners have a rated softener efficiency of not less than 3350 grains of total hardness exchange per pound of salt (based on sodium chloride) and shall not deliver more salt than their listed ratings. The rated salt efficiency is measured by laboratory tests described in NSF/ANSI Standard 44. These tests represent the maximum possible efficiency that the systems can achieve. Operational efficiency is the actual efficiency after the system has been installed. It is typically less than the efficiency due to individual application factors including water hardness, water usage, and other contaminants that reduce the softener's capacity. These systems are not intended for use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. For best results, use plain, white block salt. Refer to Installation/operation manual and warranty for further details on installation, parts and service, maintenance and further restrictions or limitations to the use of the product.

HOW YOUR WATER CONDITIONER WORKS

Water softeners remove hardness in the water by exchanging particles in the water, or ions. They remove hard ions such as calcium and magnesium in the water by trading it for sodium ions producing soft water. Unlike the calcium and magnesium, sodium stays dissolved in water and does not form a scale. Sodium also does not interfere with the cleaning action of soaps. The sodium is released by a charged resin contained in the softener, this resin also traps the calcium and magnesium ions. Eventually this resin releases all of its sodium and has filled up with other ions, so it then must be regenerated. Regeneration is accomplished by washing the resin with a salt saturated brine solution that removes the calcium and magnesium while replenishing the sodium. This is why the softener requires a brine tank and salt. The water softener can run for days before running out of sodium, and when it does, the sodium is replenished in only a matter of a few hours

When using a softener to remove both hardness and dissolved iron it is important that it regenerates more frequently than ordinarily would be calculated for hardness removal alone. Although many factors and formulas have been used to determine this frequency, it is recommended that the softener be regenerated when it has reached 50–75% of the calculated hardness alone capacity. This will minimize the potential for bed fouling.

If you are operating a water softener on clear water iron, regular resin bed cleaning is needed to keep the bed from coating with iron. Even when operating a softener on water with less than the maximum of dissolved iron, regular cleanings should be performed. Clean every six months or more often if iron appears in your conditioned water supply. Use resin bed cleaning compounds carefully following the directions on the container.

Precision Brining: Precision brining means that your conditioner calculates the exact amount of brine required to regenerate saving up to 30% more salt

When your conditioner regenerates it will display 2 numbers for capacity 1 will be total capacity the other will be 70 % of capacity. The unit counts down to the end of the 70% then calculates how much of the 30% you used (your reserve) it then adjusts the brine amount accordingly and regenerates that evening. This feature means that your capacity will always be different after every regeneration therefore maximizing your salt use.

Soft Water Recharge for High Usage: Should you reach the 70% capacity and then go beyond the 30% before it is time to regenerate the conditioner will do a quick regeneration to restore limited capacity to get it through the remainder of the day.

System Refresh: If you are away for an extended period of time the Conditioner does a refresh cycle to prevent any chance of bacterial growth or stagnation inside the conditioner.

Scrolling Diagnostics: By pressing any button to light the LCD display the unit will automatically begin scrolling important information for diagnostic purposes

Date and Time

Total Gallons and Remaining Gallons

Number of People: in the household as programmed at install

Reserve Capacity: calculated as 75 gallons per person

Estimated Days to Next: estimation of days to the next regeneration based on current consumption, hardness and capacity

Last Regeneration: the date of the last regeneration cycle by the conditioner

Total Regenerations: this is the total number of times the conditioner has regenerated

Total Gallons: total gallons treated by the conditioner

Over Run Total: – how many times Soft water recharge was required due to high usage

Current Flow Rate: will only display if treated water is running otherwise it would read 0

Peak Flow: maximum flow that has gone through the conditioner.

Delayed Regen OFF: – generally only used after servicing.

Regen Time: This is the time of day that the conditioner is scheduled to regenerate

Refill Time: The current calculated refill time for makeup brine (displays up to 70% of total brine required)

Valve Mode: current valve setting EG. Softener UF (up flow)

To stop the scrolling you can unlock the board as directed and press the down arrow to stop the scrolling. You can then use the down arrow to go to each of the diagnostics as required.

SPECIFICATION

Model	System Capacity Grains			Flow Rate		Regeneration Water Usage (Gallons)		Mineral Tank Size	Resin Cu. Ft.	Brine Tank / Cabinet Size Inches	Salt Capacity (Lbs)	Ship Weight (Lbs)
	@ 10 lbs/cu ft	@ 6 lbs/cu ft (Factory Setting)	@ 3 lbs/cu ft	Service USGPM	Backwash USGPM	Clean Water (Factory Setting)	Problem Water					
785HE*-75	22,500	18,750	11,250	8.0	1.5	34.0	49.6	8 x 44	0.75	BTS 15.0"x34.7/BTR 18.1x34.7	BTS 230 /BTR 270	93
785HE-100	30,000	25,000	15,000	10.0	2.0	43.4	64.3	9 x 48	1.00	BTS 15.0"x34.7/BTR 18.1x34.7	BTS 230 /BTR 270	110
785HE-150	45,000	37,500	22,500	12.0	2.4	62.7	90.3	10 x 54	1.50	BTS 15.0"x34.7/BTR 18.1x34.7	BTS 230 /BTR 270	141
785HE-200	60,000	50,000	30,000	15.0	3.5	87.1	124.6	12 x 52	2.00	20.3 x 37.4	385	158
785HE-250	75,000	62,500	37,500	15.0	4.0	108.9	155.8	13 X 54	2.50	20.3 x 37.4	385	198
785HE-300	90,000	75,000	45,000	15.0	5.0	139.2	196.2	14 x 65	3.00	23.0 x 40.5	550	244
785HE-75C	22,500	18,750	11,250	8.0	2.0	40.5	56.1	9 x 35	0.75	13.8 x 23.6 x 43.3	225	93
785HE-100C	30,000	25,000	15,000	10.0	2.4	48.6	69.5	10 x 35	1.00	13.8 x 23.6 x 43.3	225	110

*Choose **HIGH EFFICIENCY** to minimize salt usage. Your system will regenerate a little more often but your salt usage can be reduced by 20% compared to the **STANDARD** setting. Choose **STANDARD** when you need to maximize your capacity but still operate the system with good efficiency. Choose ****IRON & MN** if you have problem water containing Iron, Manganese or hardness in excess of 50 gpg. The high salt setting will be needed since these minerals are more difficult to clean out of the resin bed. Note: A resin cleaner will also need to be periodically added to the brine tank to insure proper operation.
See page 24: Res-Up® Feeder Installation Instructions

Working Temperature: This unit must be operated at temperatures between 40°F and 110°F (4°C - 43°C).

Working Pressure: This water softener must be operated on pressures between 30 psi to 125 psi. If the water pressure is higher than 125 PSI, use a pressure reducing valve in the water supply line to the softener.
 Voltage = 120V / 60 Hz
 Pipe Size = 3/4" and 1"

- At the stated service flow rates, the pressure drop through these devices will not exceed 15 psig.
- The manufacturer reserves the right to make product improvements which may deviate from the specifications and descriptions stated herein, without obligation to change previously manufactured products or to note the change.

Peak flow rates intended for intermittent use only (10 minutes or less) and are for residential applications only. Do not use peak flow rate for commercial applications or for a continuous rate when treated water supplies are geothermal heat pump, swimming pool, etc.

For satisfactory operation, the pumping rate of the well system must equal or exceed indicated backwash flow rate.

All units come with plastic bypass

****Maximum Iron** = 2.0 ppm ferrous (clear water iron)
Maximum Hydrogen Sulfide = 0.0 ppm
Maximum Manganese = .75 ppm
pH = 6.5 to 8.5 with no iron present with iron present 6.5 - 7.5

****NOTE**
SET HARDNESS
 This value is the maximum compensated water hardness in grains per gallon of the raw water supply. It is used to calculate the system capacity. If Ferrous Iron is present add 4 gpg for every 1 ppm of Ferrous Iron, 8 gpg for Ferrous Manganese.




CAUTION!

Do not use where the water is microbiologically unsafe or with water of unknown quality without adequate disinfection before or after the unit.


SYSTEM DIMENSIONS

	A	B
785HE-75	44	8"
785HE-100	48"	9"
785HE-150	54"	10"
785HE-200	52"	12"
785HE-250	54"	13"
785HE-300	65"	14"

Twin Tank Model

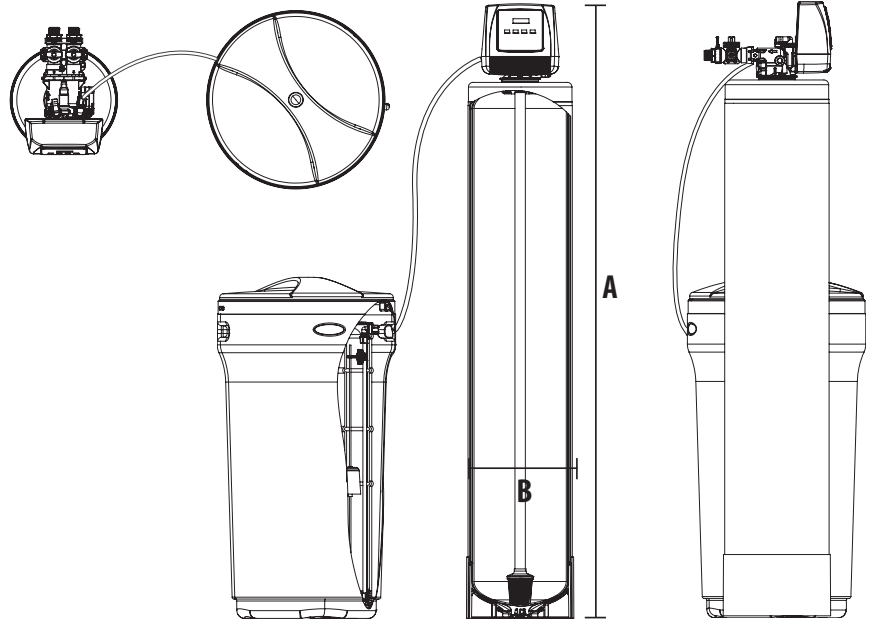

Cabinet Model

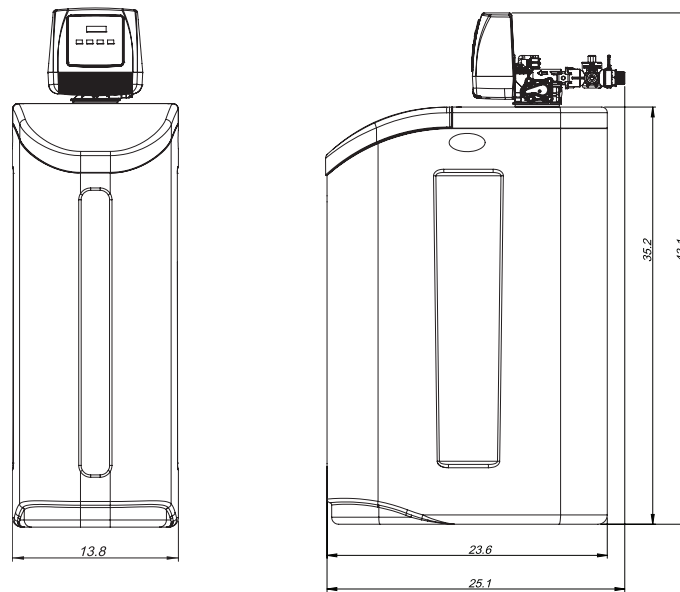


BRINE TANK DIMENSIONS


Model	Color	Liquid Volume		Tank Dimensions (inches)	5 Pack Carton Dimensions (inches)	Salt Capacity		5 Pack Carton Shipping Weight	
		US Gal	Liters	L x W x H	L x W x H	Lbs	Kg	Lbs	Kg
Brine Tanks									
BTR-70	Black	20.3	76.5	15.8 x 32.1	16.7 x 16.7 x 61.0	185.0	92.8	41.6	18.9
BTR-70	Blue	20.3	76.7	15.8 x 32.1	16.7 x 16.7 x 61.0	185.0	92.8	41.6	18.9
BTR-100	Vanilla	29.5	111.5	18.1 x 34.7	18.9 x 18.9 x 65.6	270.0	122.2	52.8	23.9
BTR-100	Black	29.5	111.5	18.1 x 34.7	18.9 x 18.9 x 65.6	270.0	122.2	52.8	23.9
BTR-100	Blue	29.5	111.5	18.1 x 34.7	18.9 x 18.9 x 65.6	270.0	122.2	52.8	23.9
BTR-145	Black	42.3	159.7	20.3 x 37.4	21.9 x 21.9 x 72.2	385.0	174.2	65.6	29.8
BTR-200	Grey	53.0	200.3	23.0 x 40.5	24.6 x 24.6 x 84	700.0	316.7	125.0	56.6
BTS-70	Black	19.0	71.8	13.1 x 13.1 x 34.7	14.4 x 14.4 x 62	175.0	92.8	48.8	22.1
BTS-70	Blue	19.0	71.8	13.1 x 13.1 x 34.7	14.4 x 14.4 x 62	175.0	92.8	48.8	22.1
BTS-100	Vanilla	25.0	94.5	15.0 x 15.0 x 34.7	16.6 x 16.7 x 61	230.0	104.1	54.4	24.7
BTS-100	Black	25.0	94.5	15.0 x 15.0 x 34.7	16.6 x 16.7 x 61	230.0	104.1	54.4	24.7
BTS-100	Blue	25.0	94.5	15.0 x 15.0 x 34.7	16.6 x 16.7 x 61	230.0	104.1	54.4	24.7

* All brine tanks come with salt grid, safety float and brine well

Dimensions BTS70

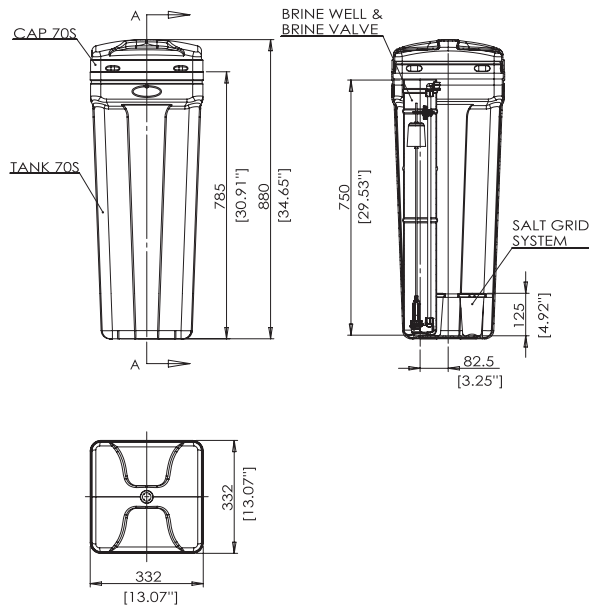


BTS100

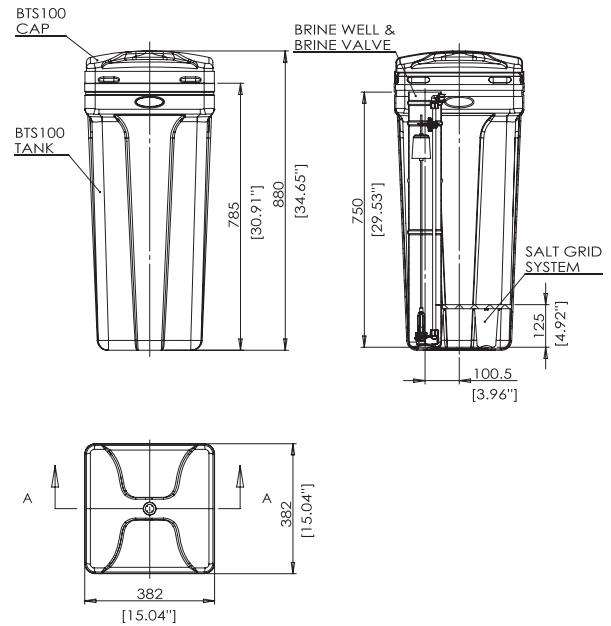


BRINE TANK DIMENSIONS


BTR70

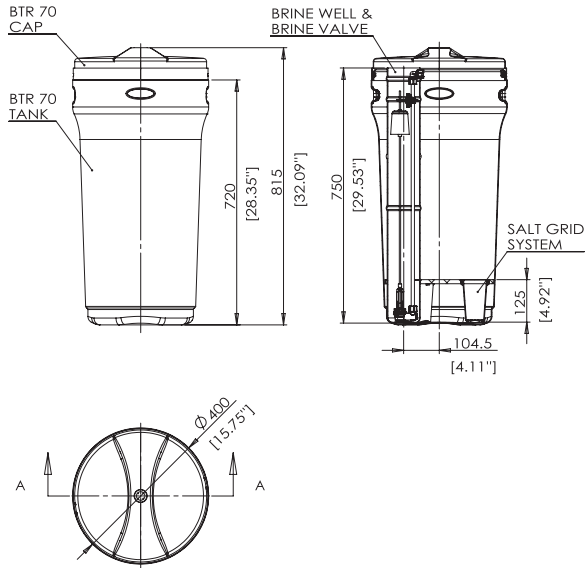


BTR100

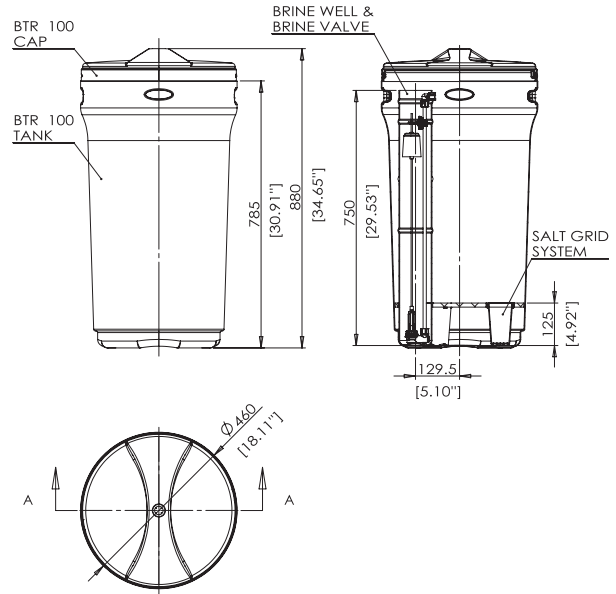

BTR145

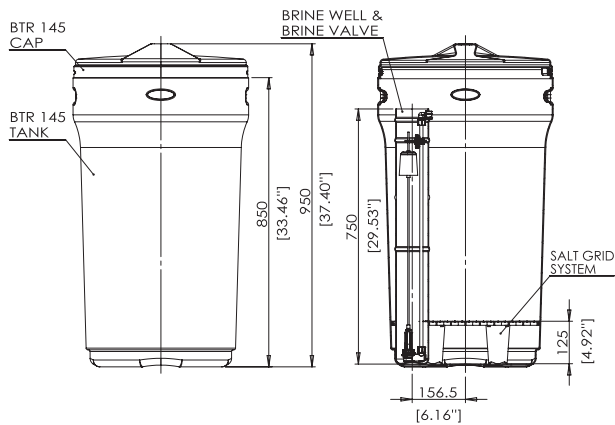

BTR200

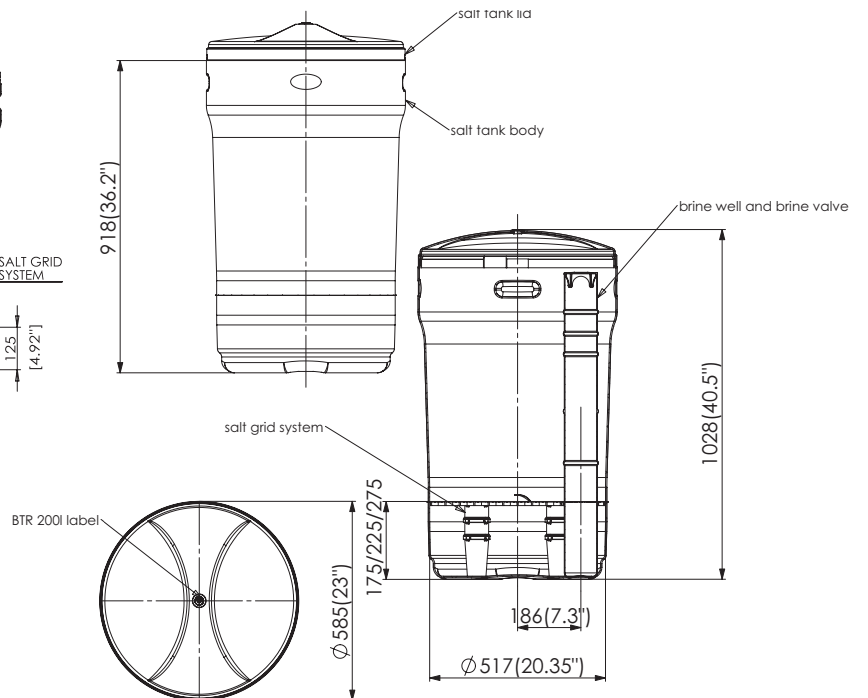

UNPACKING / INSPECTION OF TWIN TANK MODEL

Be sure to check the entire unit for any shipping damage or parts loss. Also note damage to the shipping cartons. Contact the transportation company for all damage and loss claims. The manufacturer is not responsible for damages in transit.


Small parts, needed to install the Softener, are in a parts box. To avoid loss of the small parts, keep them in the parts bag until you are ready to use them.

What is included in the box?


For Models 75,100,150, 200, you will expect the following:

1. Control Valve
2. Tank
3. Parts Box
4. Owners Manual
5. Drain Hose & Clamp (Not included in some brands)
6. Brine Tank Assembly


1. Control Valve

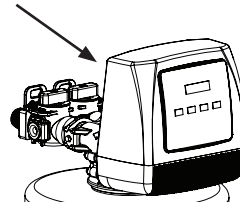


There are 8 Red clips. Please check to make sure you have all of them.

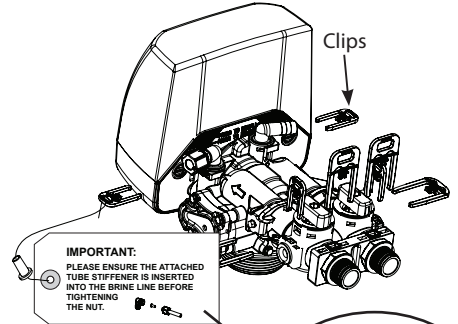


2. Tank

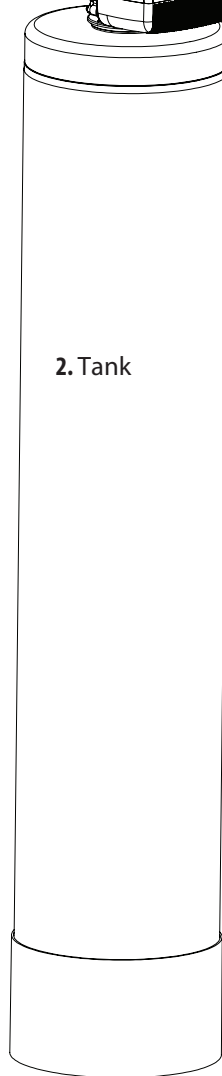

IMPORTANT:
PLEASE ENSURE THE ATTACHED TUBE STIFFENER IS INSERTED INTO THE BRINE LINE BEFORE TIGHTENING THE NUT.

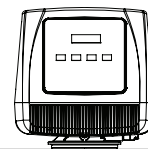


Distributor Tube Inside the Tank

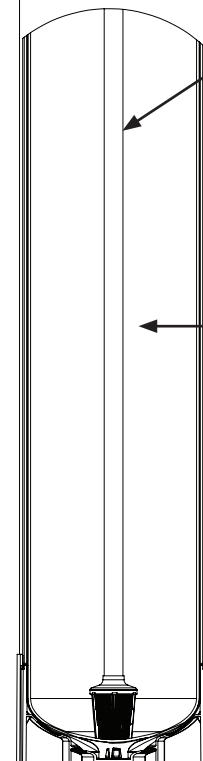


Media Inside the Tank. Media Type will depend on what models were purchased

3. Parts Box

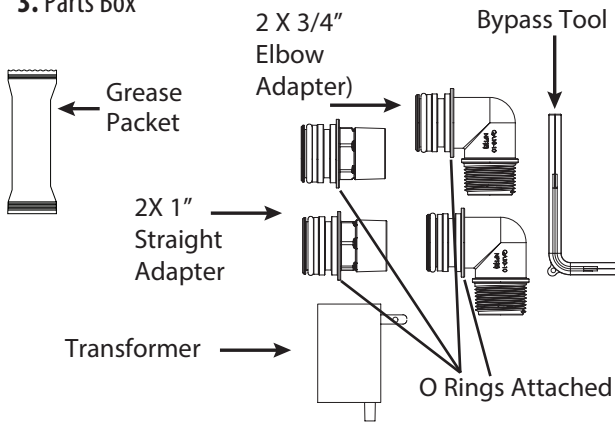

6. Brine Tank Assembly (Round Brine Tank Shown)

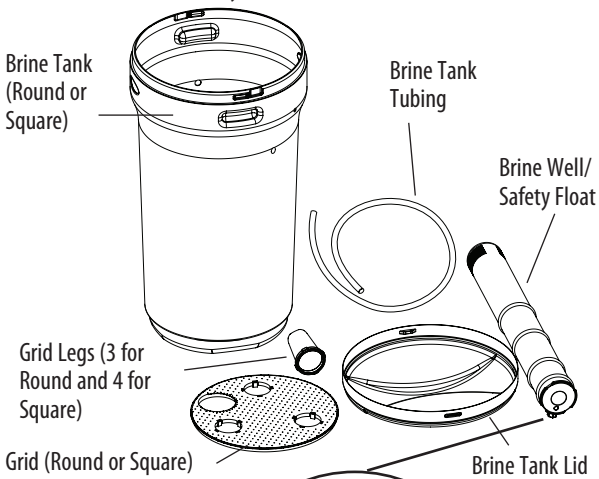


IMPORTANT:
PLEASE ENSURE THE ATTACHED TUBE STIFFENER IS INSERTED INTO THE BRINE LINE BEFORE TIGHTENING THE NUT.

For Models 250 and 300 the media and Control Valve is packaged separately in carton and bags







What is included with 250 and 300 models?

1. Tank (Model 250 and 300 will get an Adapter and Oring attached to the tank)
2. Control Valve with Parts Box
3. Media Boxes (Qty 3 for 250 and 300)
4. Drain Line and Hose Clamp (Not Included with some models)
5. Brine Tank Assembly

Models 250 and 300 will get Adaptor and Oring Shown

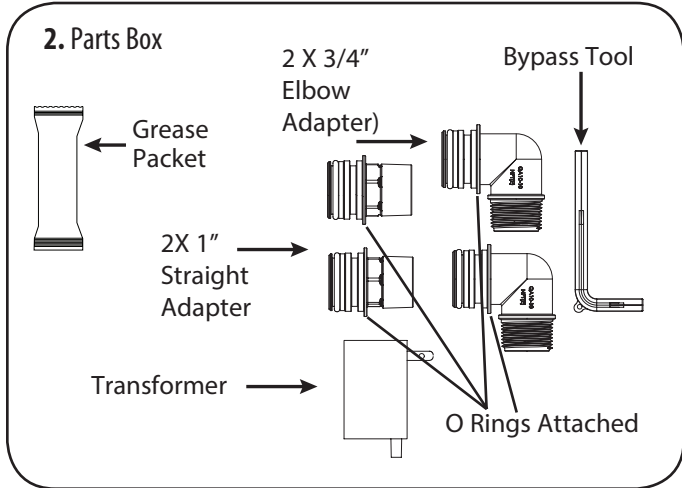


There are 8 Red clips. Please check to make sure you have all of them.

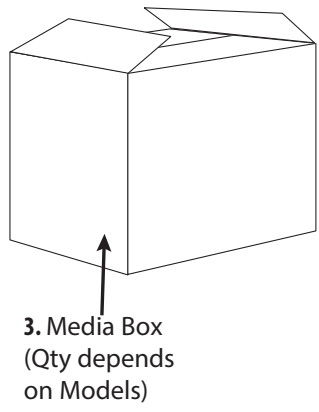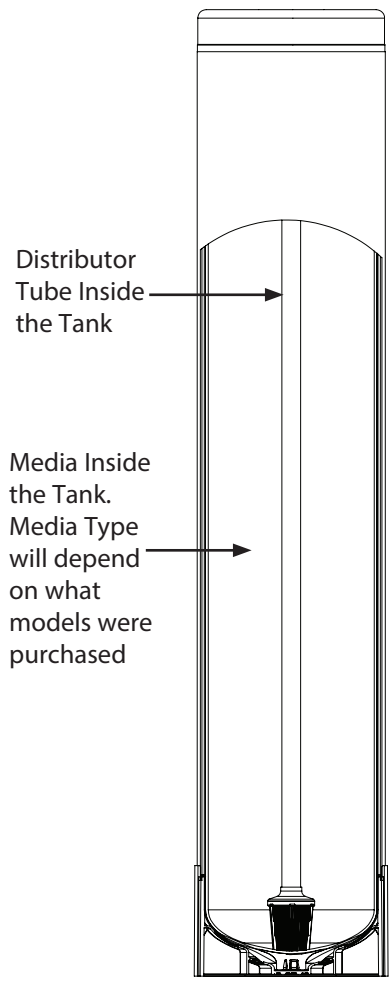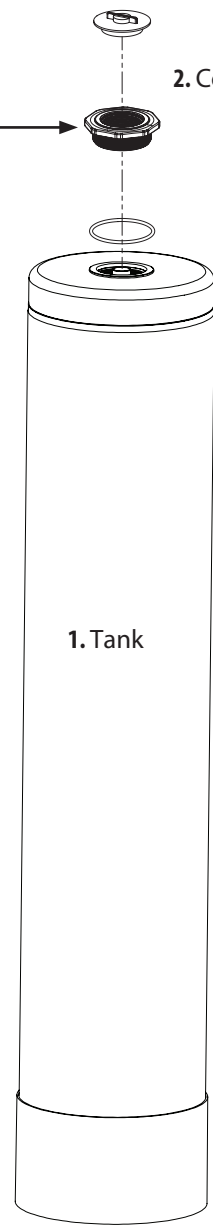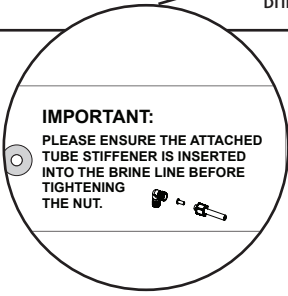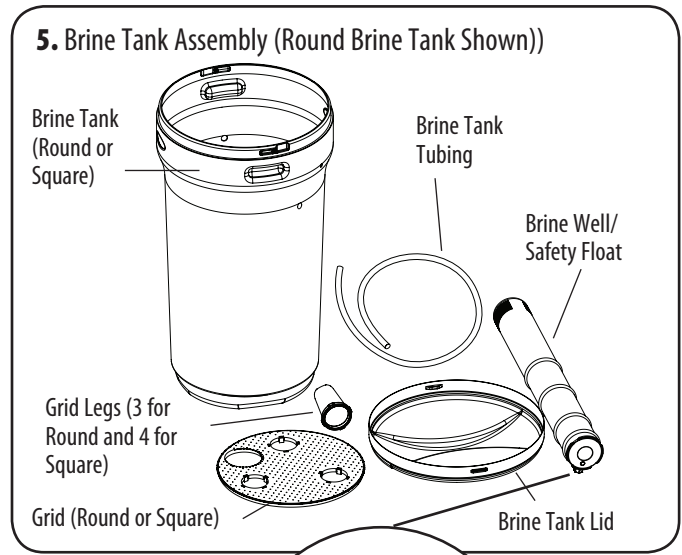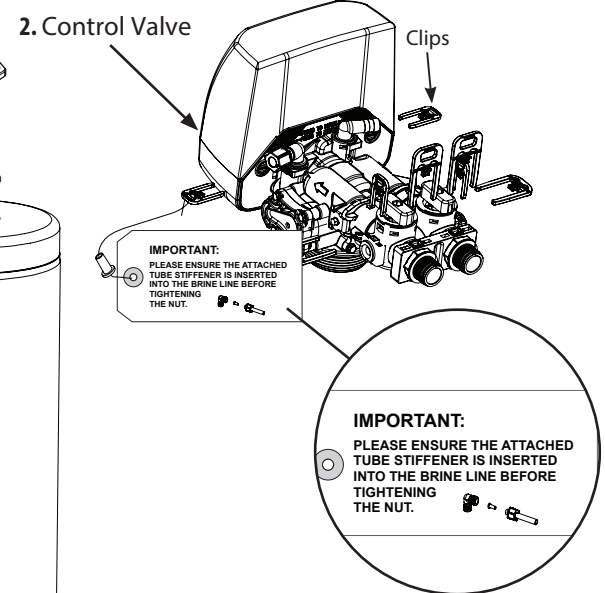


UNPACKING / INSPECTION OF CABINET MODEL

1. Cabinet with Valve attached
2. Parts Box
3. Drain Line and Hose Clamp (Not Included with some models))

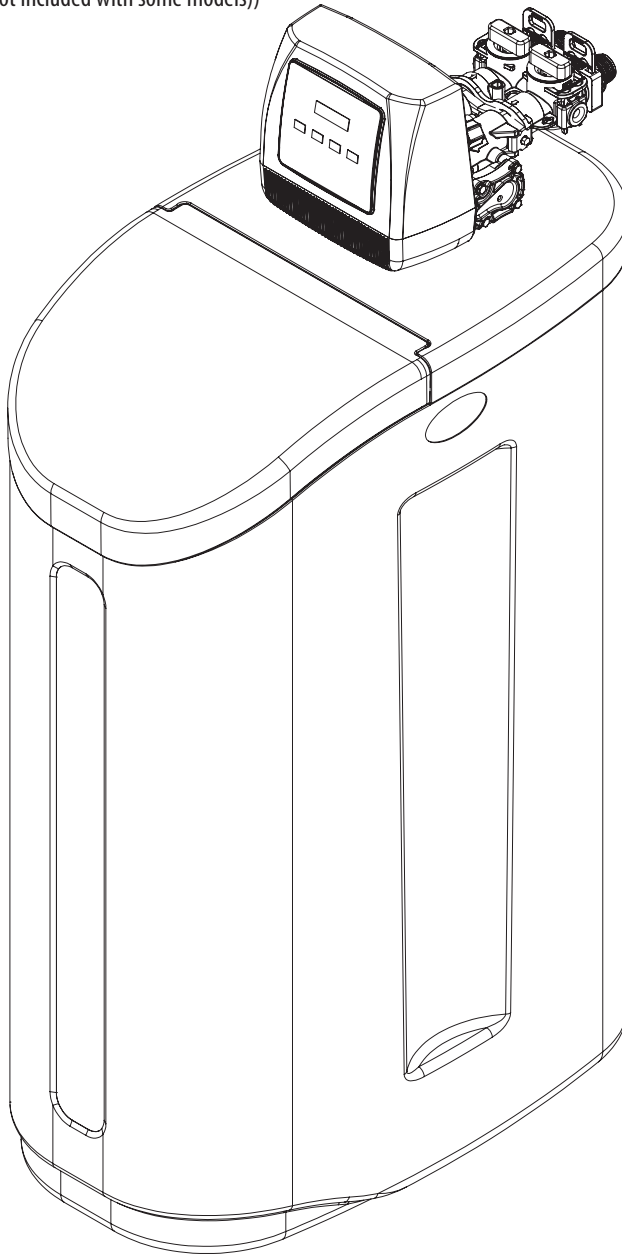


NOTE

Due to transportation and climatic conditions all connections including the valve to the tank need to be checked at time of installation and tightened if necessary.

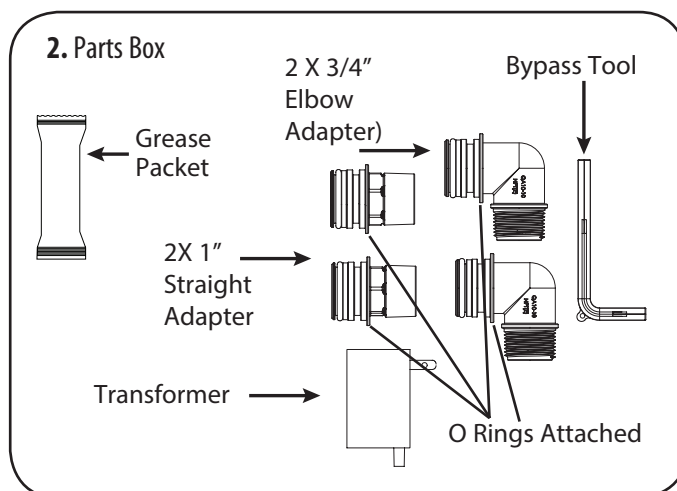

Check Valve Type and Valve Serial

Check to make sure the valve type is what you ordered. The serial # label on the left will show 5650 (DF) for downflow valve. The right Sticker shows the serial # of the control valve. The middle Sticker is dataplate which provides information of Serial # and Date of Manufacture of complete system. Both Serial # labels are important for troubleshooting.

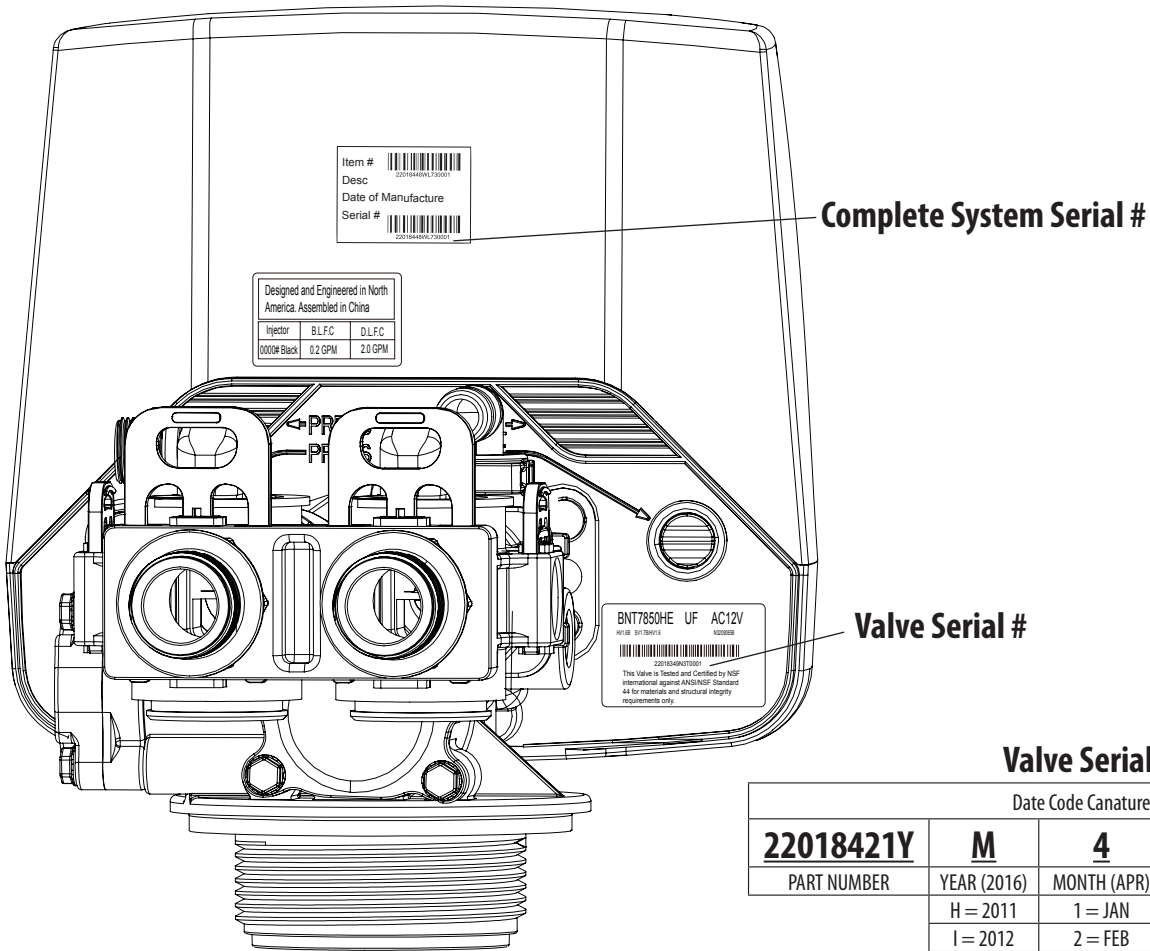


Valve Serial #:

Date Code Canature Valve				
22018421Y	M	4	L	0001
PART NUMBER	YEAR (2016)	MONTH (APR)	DAY of MONTH (21)	BATCH NUMBER
H = 2011	1 = JAN	1		
I = 2012	2 = FEB	2		
J = 2013	3 = MAR	3		
K = 2014	4 = APR	4		
L = 2015	5 = MAY	5		
M = 2016	6 = JUN	6		
N = 2017	7 = JUL	7		
O = 2018	8 = AUG	8		
P = 2019	9 = SEP	9		
Q = 2020	A = OCT	A = 10		
	B = NOV	B = 11		
	C = DEC	C = 12		
		D = 13		
		E = 14		
		F = 15		
		G = 16		
		H = 17		
		I = 18		
		J = 19		
		K = 20		
		L = 21		
		M = 22		
		N = 23		
		O = 24		
		P = 25		
		Q = 26		
		R = 27		
		S = 28		
		T = 29		
		U = 30		
		V = 31		

BEFORE INSTALLATION

Make sure you have a copy of your most recent water test results. If your water has not been tested previously you can contact your supplier of this product to obtain a water sample bottle to be sent to one of our facilities for a free analysis. **It is important that this product not be installed until you have this information.**

In all cases where metal pipe was originally used and is later interrupted by poly pipe or the Noryl bypass valve or by physical separation, an approved ground clamp with no less than #6 copper conductor must be used for continuity, to maintain proper metallic pipe bonding.

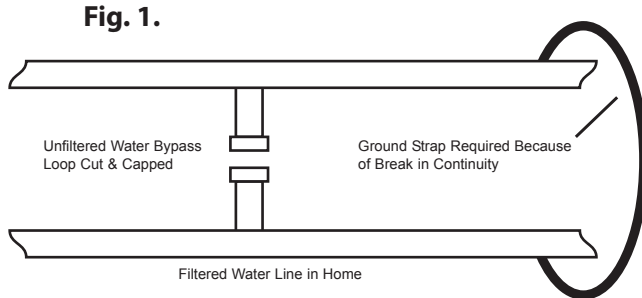

Inspecting and Handling Your 785HE Softener*

Inspect the equipment for any shipping damage. If damaged, notify the transportation company and request a damage inspection. Damage to cartons should also be noted.

Handle the softener unit with care. Damage can result if it is dropped or set on sharp, uneven projections on the floor.

Do not turn the softener unit upside down.

To Ensure this Product Functions Properly:

Your feed water line size to the unit must be a minimum of 1/2 inch with an operating pressure of no less than 30 psi and no more than 125 psi.

MECHANICAL:

Do not use petroleum based lubricants such as petroleum jelly, oils or hydrocarbon based lubricants. Use only 100% silicone lubricants (grease packet provided in parts kit). All plastic connections should be hand tightened only. Teflon tape may be used on connections that do not use an O-ring seal. Do not use pliers or pipe wrenches except where indicated by Nut shape (eg. pipe adapters) All plumbing must be completed according to local codes. Soldering connections should be done before connecting any pieces to the pipe as excessive heat can damage them.

Tools Required for Installation:

NOTE: We recommend installation only be completed by a competent installer or plumbing professional to insure this product is installed in accordance with local plumbing codes.

- ▶ Two adjustable wrenches
- ▶ Additional tools may be required if modification to home plumbing is required.
- ▶ Plastic inlet and outlet fittings are included with the softener. To maintain full valve flow, 3/4" or 1" pipes to and from the softener fittings are recommended. You should maintain the same, or larger, pipe size as the water supply pipe, up to the softener inlet and outlet.
- ▶ Use copper, brass, or PEX pipe and fittings.
- ▶ Some codes may also allow PVC plastic pipe.
- ▶ ALWAYS install the included bypass valve, or 3 shut-off valves. Bypass valves let you turn off water to the softener for repairs if needed, but still have water in the house pipes.
- ▶ 5/8" OD drain line is needed for the valve drain. A 10' length of hose is not included with some models.

NOTE

All government codes and regulations governing the installation of these devices must be observed.



CAUTION!

If the ground from the electrical panel or breaker box to the water meter or underground copper pipe is tied to the copper water lines and these lines are cut during installation of the Noryl bypass valve and/or poly pipe, an approved grounding strap must be used between the two lines that have been cut in order to maintain continuity. The length of the grounding strap will depend upon the number of units being installed and/or the amount of copper pipe being replaced with plastic pipe.

See Fig. 1.

NOTE

Check your local electrical code for the correct clamp and cable size.

NOTE

If a severe loss in water pressure is observed when the filter unit is initially placed in service, the filter tank may have been laid on its side during transit. If this occurs, backwash the filter to "reclassify" the media.

*NOTE


Due to transportation and climatic conditions all connections including the valve to the tank need to be checked at time of installation and tightened if necessary.

PREPARATIONS




The unit should be depressurized before installing or replacing media


1. Media Installation (When Necessary). Models including and higher than 2 CF (Models 250,300) of media are shipped with separate media in pails or boxes. Models lower than 2 CF of media come loaded with media and this step can be skipped for new installation.

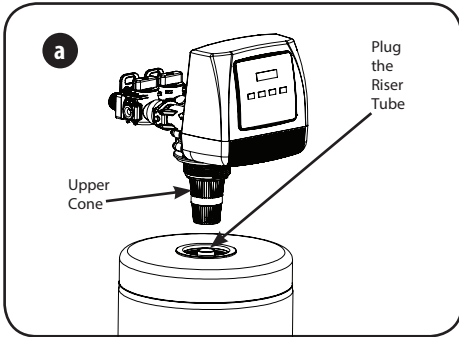


a) Lube the bottom oring (picture d) and attach the upper cone to the valve.

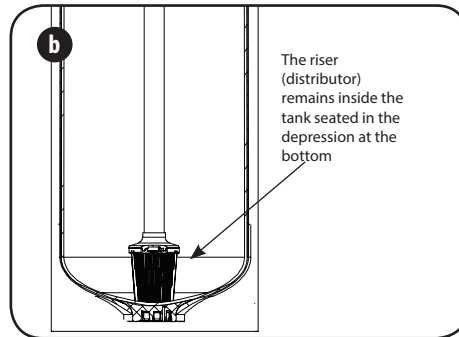


b) Temporarily plug the open end of the riser tube to ensure that no resin or gravel falls down into the distribution. The riser (distributor) remains inside the tank seated in the depression at the bottom. Plug tube with a tape. Remove after media is loaded.

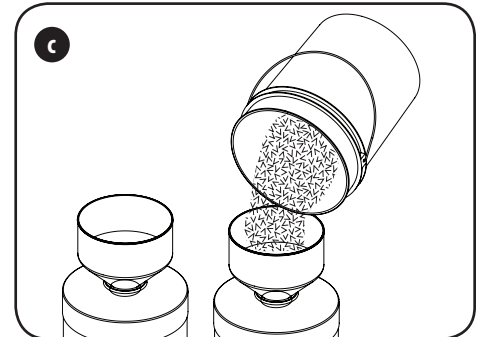

c) Fill support bed first. The media will not always spill down inside the tank and may need to be swept inside. The large funnel (sold separately makes filling the tank easier and neater. (Or an empty 1 gallon or 4 liter container with the bottom cut out makes a good funnel.)

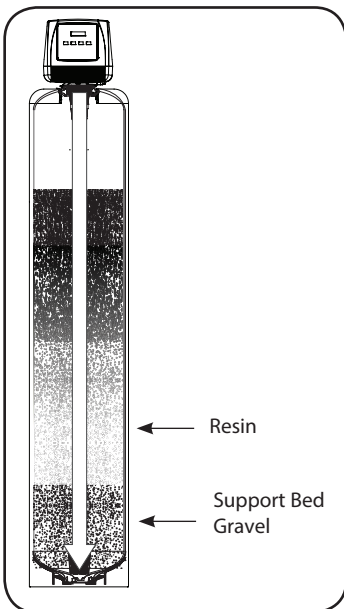

Fill tank one quarter full of water to protect distribution during gravel installation. Place the media into the tank in the order indicated above. Slowly and carefully add the gravel support bed and the filtration media leveling each layer as it is placed into the tank.

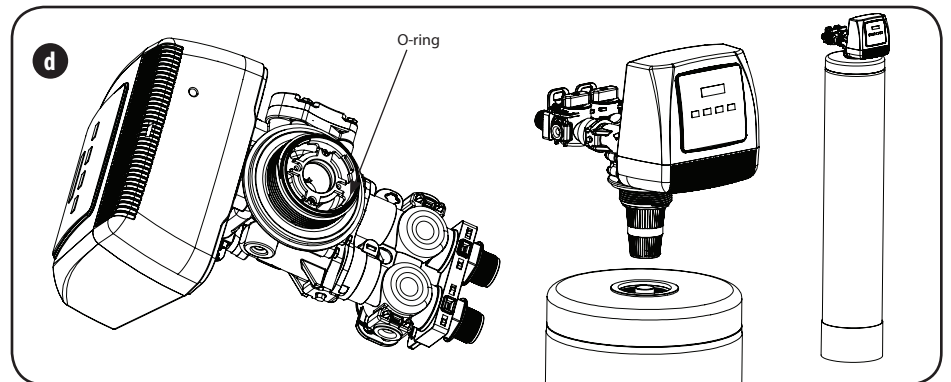


d) Unplug the riser tube, carefully position the valve over it and turn the valve into the threads in the fiberglass tank, tightening securely into tank. Note: Ensure that the internal O-ring in the valve fits securely over the riser tube. Silicone grease (part # 92360) or other food grade lubricant may be applied to the O-ring to ease installation of the riser tube.

CAUTION!
Make sure that the unit is de-pressurized before conducting this task.



CAUTION!
DO NOT use petroleum based lubricants as they will cause swelling of O-ring seals.

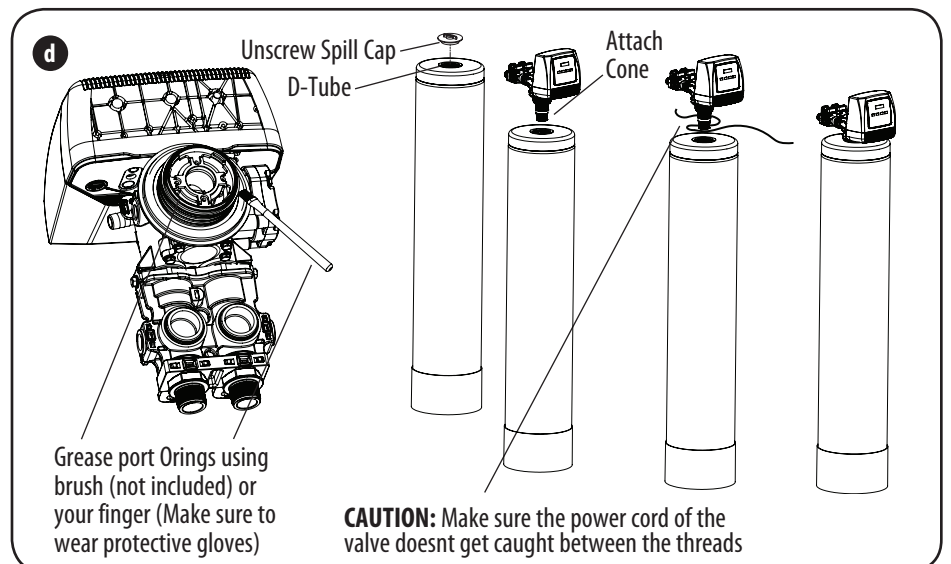


CAUTION: Make sure the power cord of the valve doesnt get caught between the threads

d) Lube the bottom Valve Orings with the grease supplied, Attach the Upper Cone. Unscrew the spill cap. Carefully Slide the D-Tube inside the Valve and Screw the Valve inside the Tank such that the power cord doesnt get caught between the valve and the tank.

PREPARATIONS

1. Determine the best location for your water filter, bearing in mind the location of your water supply lines, drain line and 120 volt AC electrical outlet. Subjecting the filter to freezing or temperatures above 43°C (110°F) will void the warranty.

Please notice the inlet and outlet valves as shown here to determine the position of the equipment:

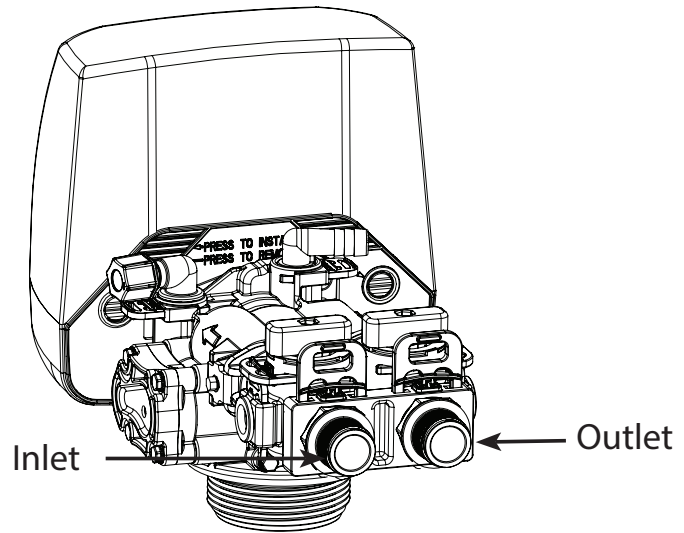

Facts to Remember When Planning Your Installation

1. All installation procedures must conform to local and state or provincial plumbing codes.
2. Outside faucets used to water lawns and gardens should not supply untreated water, replace untreated water with feed water to the unit. If necessary to do this please install check valve, see page 14. A new water line is often required to be connected to supply untreated water to the inlet of the water filter and to the outside faucets.
3. Make sure the bypass is attached well to the control valve. Connect the straight or elbow connectors to the bypass with red clips. Connect the inlet and outlet of the water filter to the plumbing of the house. The control valve must not be submitted to temperatures above 43°C (110°F). When sweat fittings are used, to avoid damaging the control valve, solder the threaded copper adapters to the copper pipe and then, using Teflon tape, screw the assembly into the bypass valve.
Do not use pipe thread compound as it may attack the material in the valve body.
4. Apply Teflon Tape and Orings to the fittings
5. Connect Filter to the house plumbing. Any solder joints near the valve must be done before connecting any piping to the valve. Always leave at least 6" (152 mm) between the valve and joints when soldering pipes that are connected to the valve. Failure to do this could cause damage to the valve.
6. **Drain Line connection:** Using Teflon tape, screw the 1/2" hose barb and attach oring into the drain port in the valve. Attach 1/2" drain hose (Supplied with some models and brands) to the hose barb and tighten securely with a hose clamp (Supplied with some models and brands). Run the drain line to a floor drain or a laundry drain. Complete any necessary plumbing.
7. Using the Allen Key (included), place the unit in the bypass position. Slowly turn on the main water supply. At the nearest cold treated water tap nearby remove the faucet screen, open the faucet and let water run a few minutes or until the system is free of any air or foreign material resulting from the plumbing work.
8. Make sure there are no leaks in the plumbing system before proceeding. Close the water tap when water runs clean.
9. Open the brine tank / cabinet salt lid and add water until there is approximately 3" (75 mm) of water in the tank. Do not add salt to the brine tank at this time.

NOTE

If the plumbing system is used as the ground leg of the electric supply, continuity should be maintained by installing ground straps around any nonconductive plastic piping used in installation.

NOTE


Before starting installation, read page 16, Plumbing System Clean-Up, for instructions on some procedures that may need to be performed first.

2. Water Lines


Outside faucets used to water lawns and gardens should not supply softened water. A new water line is often required to be connected to supply hard water to the inlet of the water softener and to the outside faucets. Cut the water line between where it enters the house and before any lines that branch off to feed the hot water heater or other fixtures in the house and as near the desired location of the water softener as possible. Install a tee fitting on the feed end of the cut pipe, and an elbow fitting on the other end. Install piping from the tee to the inlet of the water softener and from the elbow to the outlet of the softener. To sever the water lines which branch off to feed any outside faucets, cut the branch lines approximately two inches from the fitting on the main water line. Install an elbow on the end of the pipe nearest the outside faucet and a cap on the end connected to the existing water line. Install piping from the tee installed on the inlet line to the water softener to the elbow installed on the pipe to the outside faucet. Following this procedure will result in all lines in the house, with the exception of the outside faucets, but including the water heater and therefore the hot water lines, being supplied with soft water.

INSTALLING BRINE TANK

a) Attach the three brine grid legs to grid plate. The legs will snap on to the tabs of the salt plate making a "click" sound. For square brine tank there are four legs.)

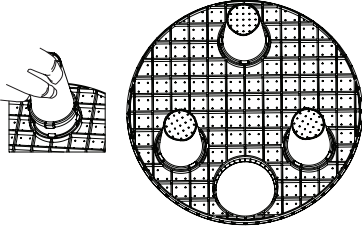


b) Insert the brine well assembly inside the grid plate as well below.

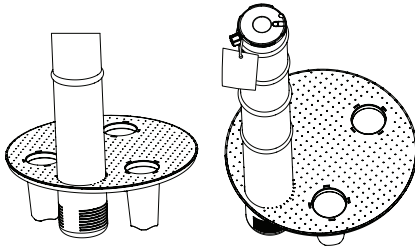


c) Drop the brine grid with brine well inside the brine tank such that the nut fitting faces the hole on the brine tank. Then press the grid evenly inside the brine tank until the brine grid legs touches the bottom of the brine tank.

IMPORTANT:
IN ROUND BRINE TANK, IT IS IMPORTANT TO ALIGN THE HANDLE TO THE BRINE WELL AS SHOWN

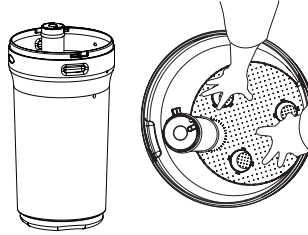


The hole in the brine tank should line up with the brine line as shown for round and square brine tank.

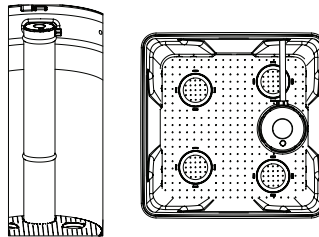


d) Take the brine tube and insert the nut and plastic sleeve as shown below.


Insert Sleeve




e) Insert the tube in the float assembly elbow and hand tighten the nut. In many cases the brine line already come installed from the factory. Leave the other end of the brine line tube inside the brine tank

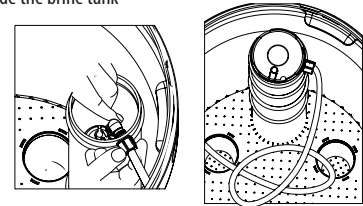

f) For installation of brine tank at the installation site, pull the other end of the brine tube from the hole on the brine tank. The completed assembly is shown below.

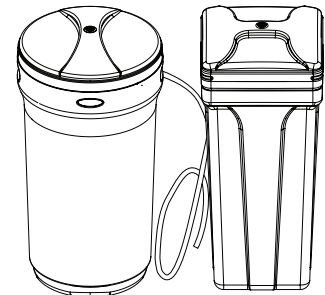

Attaching Brine Tubing to the Brine Line of the Valve

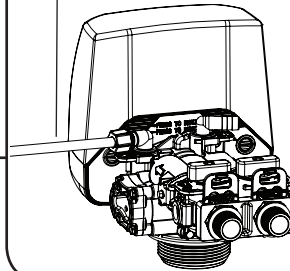



Insert Tubing inside the Sleeve



WATER SOFTENER INSTALLATION


Connect Softener to the House Plumbing Any solder joints near the valve must be done before connecting any piping to the valve. Always leave at least 6" (152 mm) between the valve and joints when soldering pipes that are connected to the valve. Failure to do this could cause damage to the valve.

Upflow Water Softener Installation

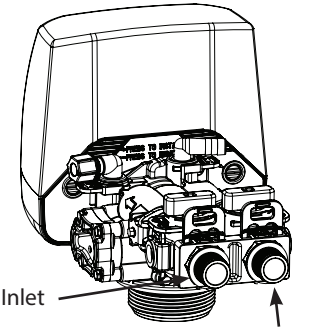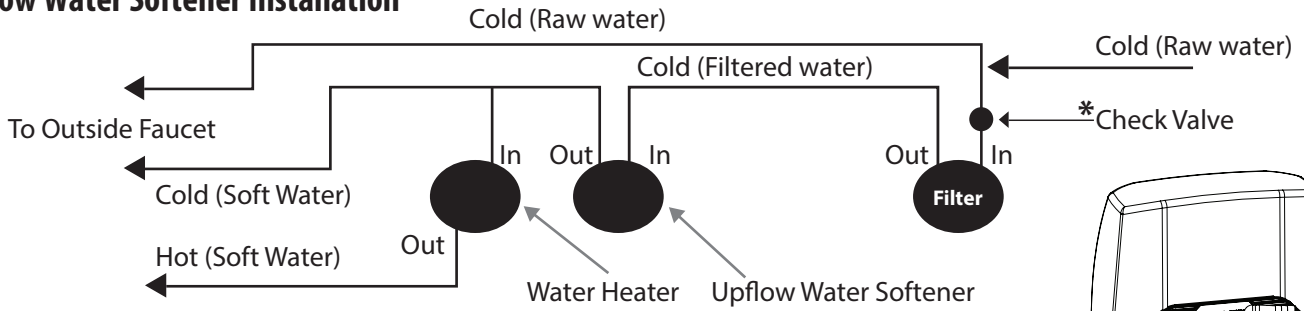


NOTICE - THERE ARE INLET AND OUTLET LABELS ON THE VALVE. PLEASE MAKE SURE TO PLUMB AS SHOWN HERE

***NOTE**
Check local plumbing codes in regards to requirements for use of Check Valve or back flow prevention or vacuum breaker

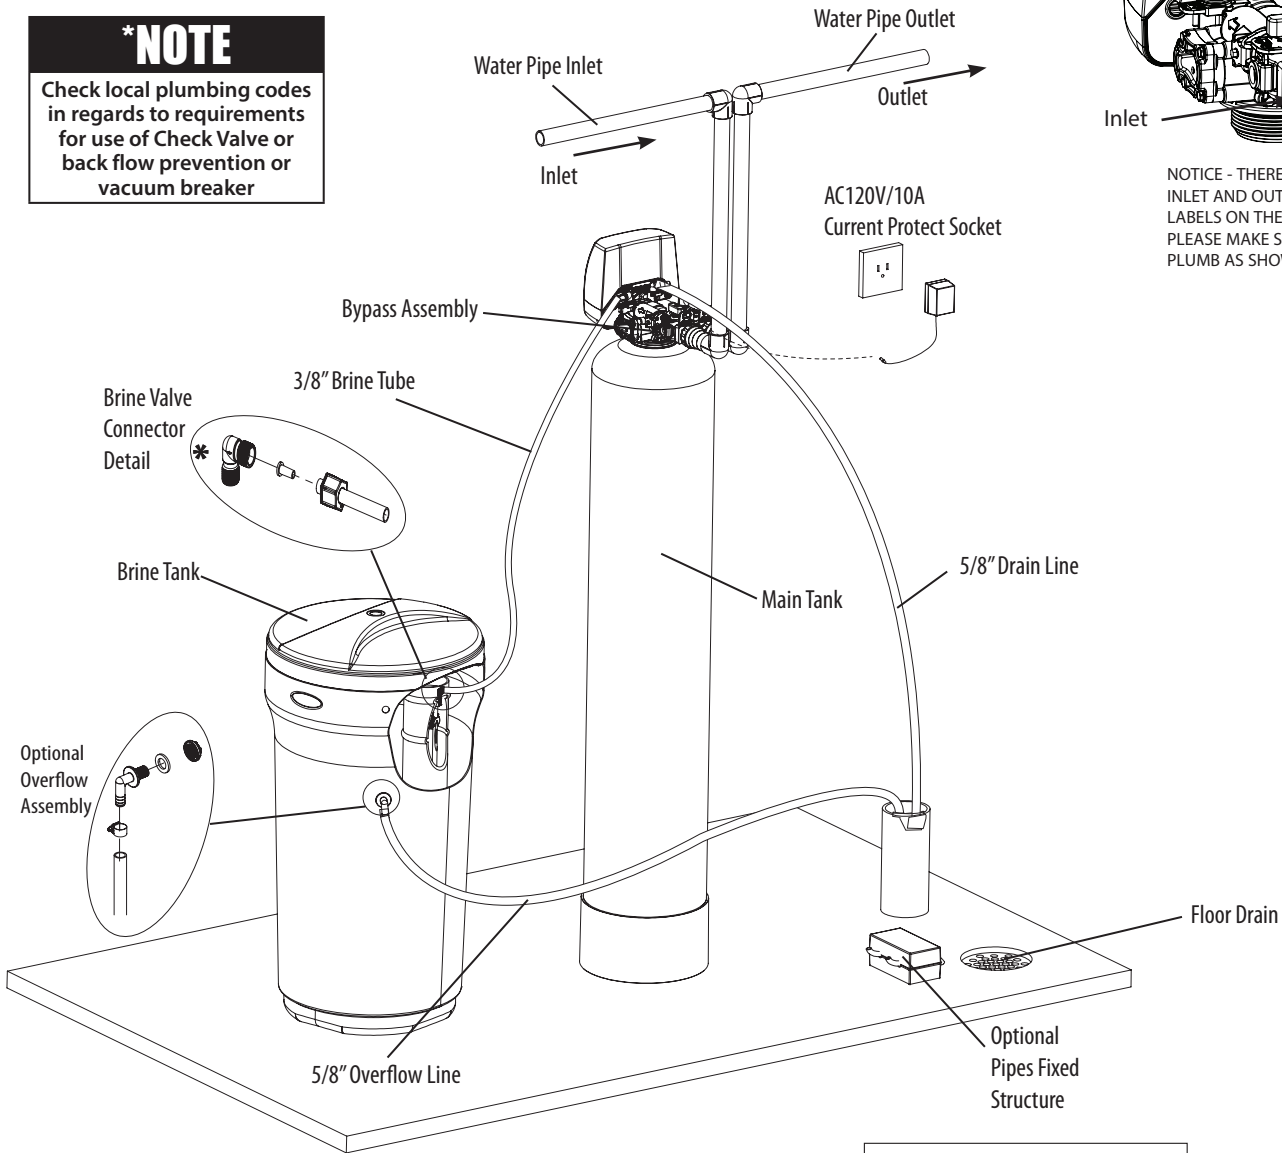

NOTE
Waste connections or drain outlet shall be designed and constructed to provide for connection to the sanitary waste system through an air-gap of 2 pipe diameters or 1 inch (22 mm) whichever is larger.



CAUTION!
Never insert drain line directly into a drain, sewer line, or trap. Always allow an air gap between the drain line and the wastewater to prevent the possibility of sewage being back-siphoned into the conditioner.

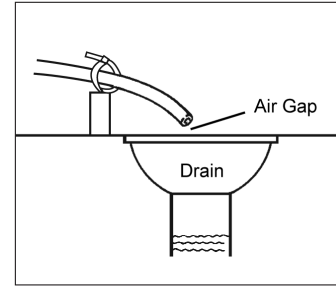

CABINET WATER SOFTENER INSTALLATION


Connect Softener to the House Plumbing Any solder joints near the valve must be done before connecting any piping to the valve. Always leave at least 6" (152 mm) between the valve and joints when soldering pipes that are connected to the valve. Failure to do this could cause damage to the valve.

Upflow Water Softener Installation

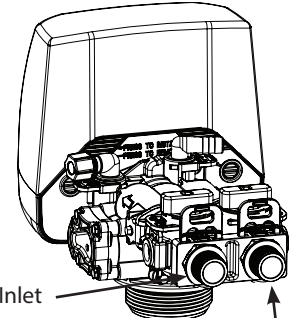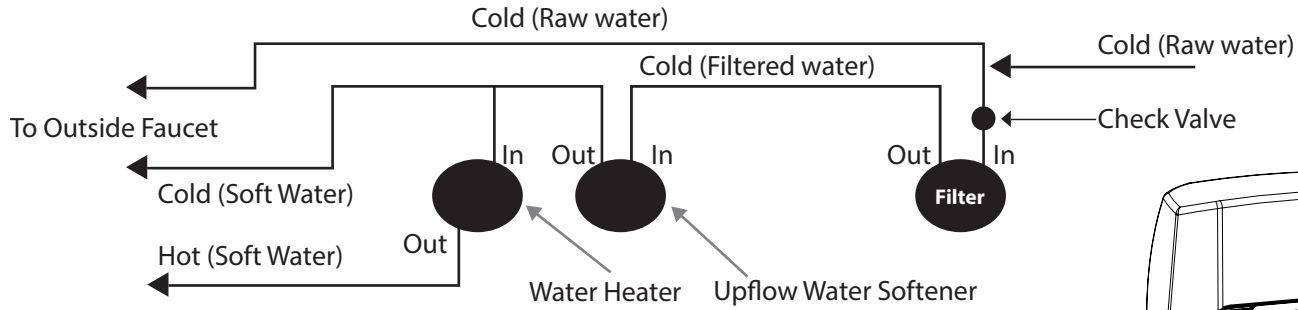


NOTICE - THERE ARE INLET AND OUTLET LABELS ON THE VALVE. PLEASE MAKE SURE TO PLUMB AS SHOWN HERE

***NOTE**
Check local plumbing codes in regards to requirements for use of Check Valve or back flow prevention or vacuum breaker

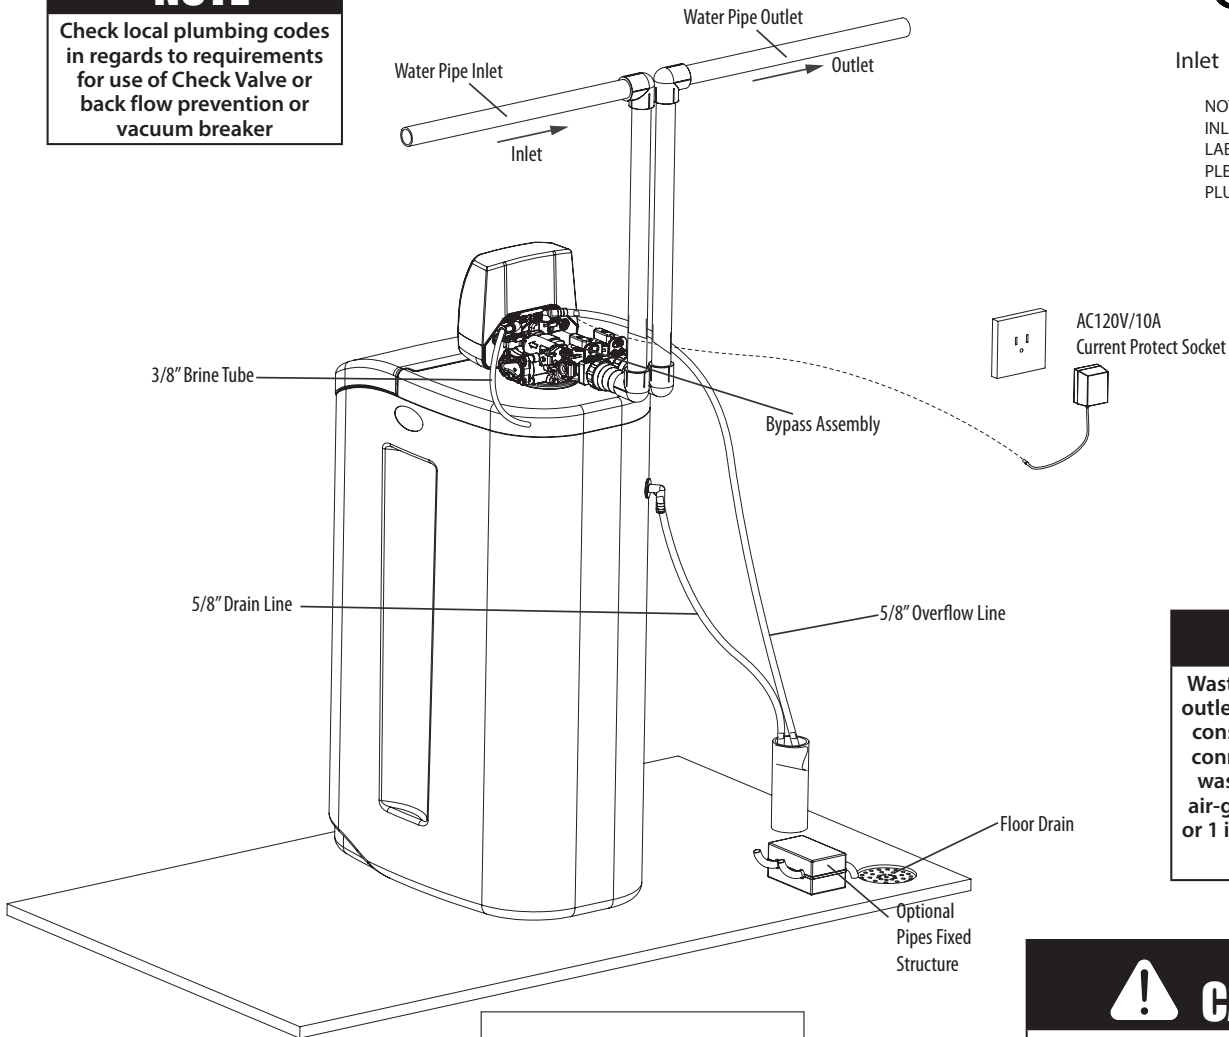

NOTE
Waste connections or drain outlet shall be designed and constructed to provide for connection to the sanitary waste system through an air-gap of 2 pipe diameters or 1 inch (22 mm) whichever is larger.


CAUTION!
Never insert drain line directly into a drain, sewer line, or trap. Always allow an air gap between the drain line and the wastewater to prevent the possibility of sewage being back-siphoned into the conditioner.

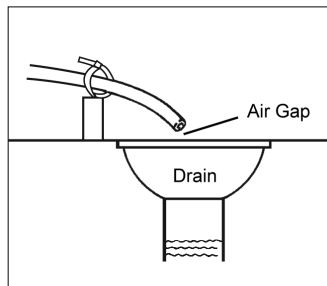

STARTUP INSTRUCTIONS

1. Connect the Transformer to the Valve

Plug the 12-volt transformer into a 120 VAC 60 Hz outlet.

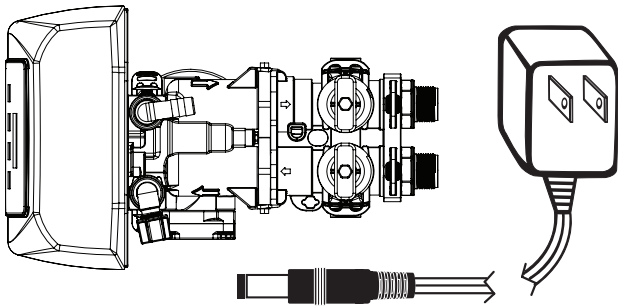

2. Add Water to Brine Tank

Open the brine tank /cabinet salt lid and add water as per the chart below. Do not add salt to the brine tank at this time.

BT-100 - 2.5 US Gallons

BT-145 - 3.25 US Gallons

BT-200 - 5.5 US Gallons

3. Manually Regenerate the Valve

Manually step the valve to the BACKWASH position. If screen is locked, press **MENU** Key for 3 seconds to unlock.


Manually Regenerate the Valve and move it to backwash position.

Press **SET/REGEN** Button for 3 seconds. Press **SET/REGEN** Button once to select delayed or immediate regeneration.





Use Up and Down Arrows $\wedge \vee$ to Select. Immediate and Press **SET/REGEN** Key Press **MENU** Button to exit and start Regen


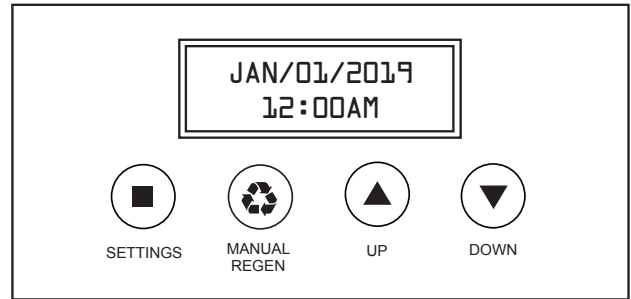
Screen Display

Button Configuration:



Key Pad Setting

-  **SETTINGS** This function is to enter the basic set up information required at the time of installation.
-  **MANUAL REGEN** This function is to initiate an immediate or delayed manual regeneration.
-   **DOWN / UP** Increase or decrease the value of the settings while in the programming mode.

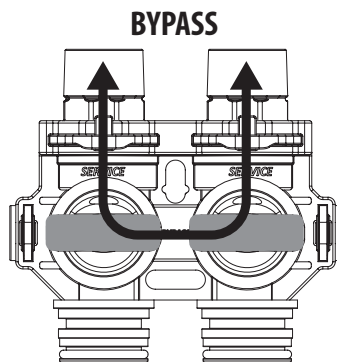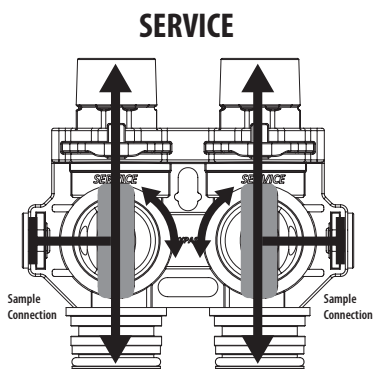

MANUAL REGEN
Delay Immediate

BACKWASH
BRINE DRAW
RINSE (SKIP)
REFILL (SKIP)

BACKWASH
||||| 15 Minutes

BRINE DRAW
||||| 50 Minutes

STARTUP INSTRUCTIONS (CONTINUED)

3. Manually Regenerate the Valve (Continued)

- 3a. Open the inlet on the bypass valve slowly and allow water to enter the unit. (The outlet of the bypass should remain closed to prevent any fines or debris from entering the plumbing system. Allow all air to escape from the unit before turning the water on fully then allow water to run until the drain water appears to be clear of any fines or color.
- 3b. Plug in the valve. Allow the valve to continue its cycles until complete and back in service. Allow the valve to stay in each position for 2 - 3 minutes to purge air from the system and the valve. Failure to properly purge the system may result in unsatisfactory performance. This process can be performed more than once if necessary to purge air and color or fines from the system before finishing start up. Once the system is purged properly you can open the outlet of the bypass valve. Because your plumbing system has been disturbed it is advisable to remove screens from faucets and flush all lines until clear. **See Plumbing System Clean-Up on page 21.**
- 3c. The Valve is already programmed from factory. Please set up date and time of day and feedwater hardness and people as shown below: **(See below for Key Pad Configuration)**

Calculating Compensated Hardness for Water where Iron or Manganese is Present

From your water analysis.

Iron x 4 = grains of hardness and or Manganese x 8 = grains of hardness. These numbers can be found on your water analysis report, and the equivalent grains of hardness should be added to your total hardness number. The new sum of these numbers is the hardness to be entered during programming below.

EG

Iron = 0.5 ppm x 4 = 2.0 gpg

Mang = 0.3 x 8 = 2.4 gpg (always round up) = 3.0 gpg

Hardness = 15 gpg + 2.0 (compensated iron) + 3.0 (compensated manganese) = 20 gpg
enter 20 as the hardness when programming below.

Iron _____ x 4 + Manganese x 8 _____ + Hardness = Total Hardness _____

NOTE

All units are factory programmed for the correct size and regeneration cycle, alteration should only be done by a factory trained technician or after consultation with one of our technical representatives if you have any questions please call: **1-877-288-9888**


4. Power and Program Valve

Key Pad Configuration

SETTINGS This function is to enter the basic set up information required at the time of installation.


MANUAL REGEN This function is to initiate an immediate or delayed manual regeneration.

DOWN / UP Increase or decrease the value of the settings while in the programming mode.

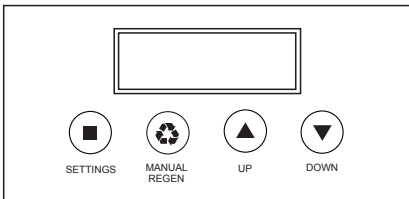

Settings

Press **SETTINGS** key
(3 SECONDS / BEEP)

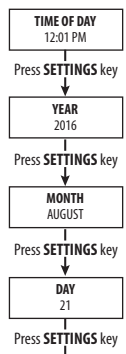

SALT SETTING


Choose HIGH EFFICIENCY to minimize salt usage. Your system will regenerate a little more often but your salt usage can be reduced by 20% compared to the STANDARD setting. Choose STANDARD when you need to maximize your capacity but still operate the system with good efficiency. Choose IRON & MN if you have problem water containing these minerals. The high salt setting will be needed since these minerals are more difficult to clean out of the resin bed. Note: A resin cleaner will also need to be periodically added to the brine tank to insure proper operation.

WATER TYPE

This setting will determine if the BACKWASH OVERRIDE function will be on or off. Select MUNICIPAL if the water source is clean (<1NTU turbidity) and the system will skip the back wash cycle based on the setting in BACKWASH OVERRIDE. Select WELL / OTHER if any Iron or Manganese is present or if the water source is not clean (< 1NTU turbidity). The system will back wash every time. This setting determines the time of day to perform a scheduled regeneration.

6. Add Salt to the Brine Tank/Cabinet

Put 40 kgs of crystal water softener salt in the brine tank. The unit will automatically fill the water to the correct level when it regenerates.

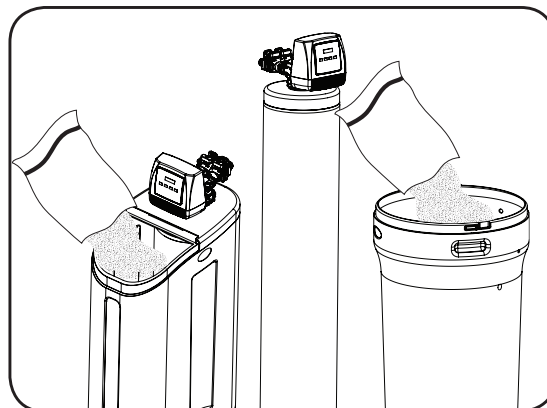

Start up and programming complete. Unit is now operational.

*NOTE

Resin Cleaner
An approved resin cleaner **MUST** be used on a regular basis if your water supply contains iron.
See page 24 - Res-Up® Feeder Installation Instructions

20

DURING REGENERATION


Automatic Water Bypass

The regeneration cycle lasts approximately 1.5 hours to 3.0 hours depending on the specific model, after which treated water service will be restored. During regeneration, untreated water is automatically bypassed for use in the household. Hot water should be used as little as possible during this time to prevent hard water from filling the water heater.

IMPORTANT: This is why the automatic regeneration is set for sometime during the night and manual regenerations should be performed when little or no water will be used in the household.

Manual Water Bypass

In case of an emergency such as filter maintenance, you can isolate your water filter from the water supply using the bypass valve located at the back of the control. In normal operation the bypass is open with the ON/OFF knobs in line with the INLET and OUTLET pipes. To isolate the filter, simply rotate the knobs clockwise (as indicated by the word BYPASS and arrow) until they lock. You can use your water related fixtures and appliances as the water supply is bypassing the softener. However, the water you use will be hard. To resume treated service, open the bypass valve by rotating the knobs counterclockwise. **Please make sure bypass knobs are completely open otherwise the unfiltered water could bypass through the valve.**

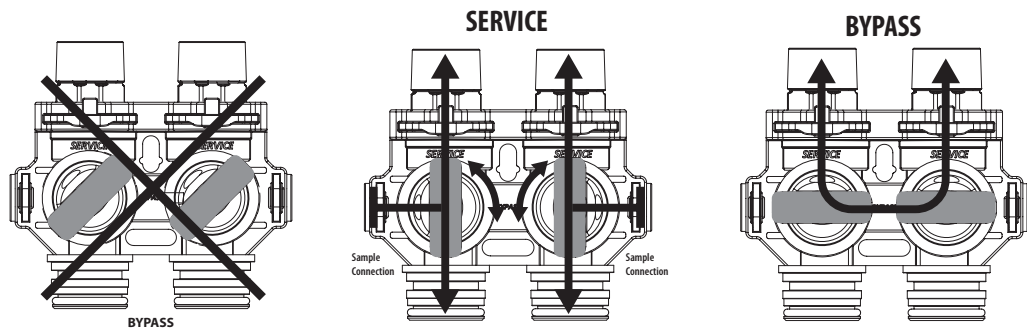

New Sounds

You may notice new sounds as your water softener operates. The regeneration cycle lasts approximately 1.5 hours to 3.0 hours depending on the specific model. During this time, you will be able to hear water running intermittently to the drain, depending on proximity of the unit to sleeping area and time of regeneration.

PLUMBING SYSTEM CLEAN-UP

The following procedures are guidelines only but have proven successful in most instances. Under no circumstances should any procedure outlined below be followed if contrary to the appliance manufacturer's instructions. Should there be any questions concerning the advisability of performing a procedure, it is strongly recommended the manufacturer's authorized service outlet be consulted prior to performing the procedure.

Water Heater

If the water heater has been exposed to both iron and hardness for a long period of time, replacement of the heater tank maybe the only practical solution to prevent continued staining originating from this source. After completing the installation of the conditioner, clean the water heater by following these instructions:

1. Shut off energy supply to water heater and close heater inlet water valve.
2. Drain hot water tank completely. Open inlet water valve allowing heater tank to be refilled with iron-free water. Continue flushing until water runs clear to drain.
3. If, after approximately 30 minutes flushing, water does NOT clear, terminate flushing operation. Refill hot water heater with water and pour approximately 1/2 gallon of household bleach into top of heater tank. Allow bleach solution to stand in tank for 20 to 30 minutes. Flush tank

Dishwasher


Consult owners' handbook and follow manufacturer's instructions.

Toilet Flush Tanks

Prior to commencing installation of the filter system, pour 4 to 6 ounces of resin mineral cleaner Pro-Rust Out or other suitable cleaner such as CLR that contains a mild acid into flush tanks and bowls and let stand. When installation is completed, flush toilets several times with conditioned water. If stains or deposits return check that lines are connected to treated water. Repeat procedure until clear. again until water is clear at drain. Turn energy supply on.

NOTE

If water does not clear in approximately 10 minutes, water heater should probably be replaced.

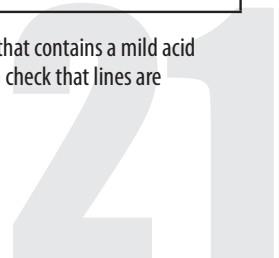

MAINTENANCE INSTRUCTIONS AND SCHEDULE

Service Schedule

- The seals and spacers along with the piston assembly should be inspected/cleaned or replaced every year depending on the inlet water quality and water usage on clean municipal supplies every 2 - 3 years should be sufficient but the first check should be done after 1 year. See inspection and replacement of Piston assembly and seal and spacer kit, page 26.
- The injectors should be cleaned/inspected or replaced every year depending on the water quality and use. See Clean Injector Assembly, page 27.
- **Maintenance Kit (60010565)** should be used for servicing control on an annual basis. The maintenance kit consists of piston assembly, seals and spacers, injectors.


Maintenance of your new water conditioner requires very little time or effort but it is essential. Regular maintenance will ensure many years of efficient and trouble free operation.

FAILURE TO FOLLOW BASIC MAINTENANCE SCHEDULE WILL RESULT IN THE UNIT FAILING TO OPERATE PROPERLY AND VOID YOUR WARRANTY.

Bridging

Humidity or the wrong type of salt may create a cavity between the water and the salt. This action, known as "bridging", prevents the brine solution from being made, leading to your water supply being hard.

If you suspect salt bridging, carefully pound on the outside of the plastic brine tank or pour some warm water over the salt to break up the bridge. This should always be followed up by allowing the unit to use up any remaining salt and then thoroughly cleaning out the brine tank. Allow four hours to produce a brine solution, then manually regenerate the softener.

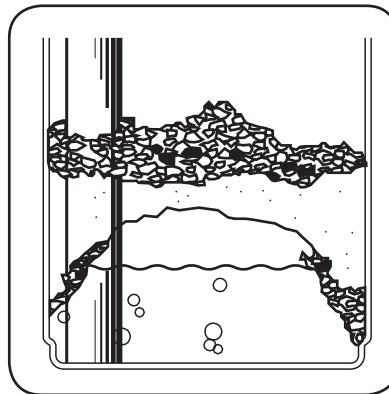

Liquid brine will irritate eyes, skin and open wounds - gently wash exposed area with fresh water. Keep children away from your water conditioner.

Cleaning of your Brine / Salt tank

Salt tanks will build up sludge (undissolved salt) in the bottom of them that will continue to increase as time goes by. Every 2 - 3 years the salt tank should be cleaned out completely and re started using the original start up instructions.



Never subject your conditioner to freezing, vacuum or to temperatures above 43°C (110°F).

MAINTENANCE INSTRUCTIONS AND SCHEDULE



Checking the Salt Level

Check the salt level monthly. Remove the lid from the cabinet or brine tank, make sure salt level is always above the brine level.

Add Salt to the Brine Tank

Put 40 kgs of crystal water softener salt in the brine tank. The unit will automatically fill the water to the correct level when it regenerates. Use only clean salt labeled for water conditioner use, such as crystal, pellet, nugget, button or solar. The use of rock salt is discouraged because it contains insoluble silt and sand which build up in the brine tank and can cause problems with the system's operation. Add the salt directly to the tank, filling no higher than the top of the brine well.

NOTE :THE WATER LEVEL SHOULD BE BELOW THE SALT LEVEL ALL THE TIME

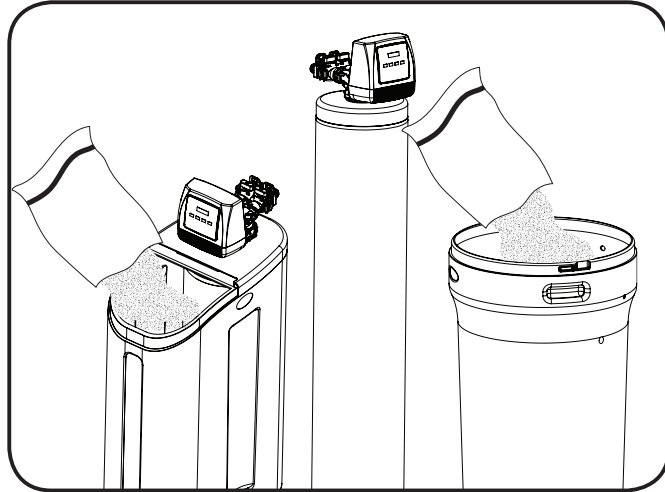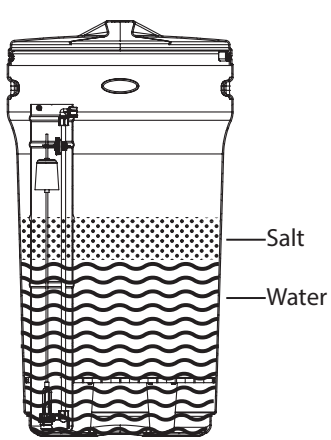

CAUTION!

Incorrect start up, water above the salt level, (not enough salt in tank) will both effect the units capacity and result in hardness slippage. Should either of these situations happen or the unit fails to regenerate for any other reason please first correct the problem. Then regenerate the unit manually 2 times in a row to restore the reserve capacity and bring the media bed back up to specification.

IMPORTANT WARRANTY AND MAINTENANCE INFORMATION

Please have the information below filled out and available when calling in for parts or warranty:

Model number:
Serial number:
Valve Serial number:
Date installed:

Additional notes:

Care of Your Softener

To retain the attractive appearance of your new water softener, clean occasionally with a mild soap solution. Do not use abrasive cleaners, ammonia or solvents. Never subject your softener to freezing or to temperatures above 43°C (110°F).

Servicing Components

- The injector assembly should be cleaned or replaced every year depending on the inlet water quality and water usage.
- The seals and spacer should be inspected/cleaned or replaced every year depending on the inlet water quality and water usage.

Please refer to the servicing section of this manual for step by step procedure.

Not following the above will void all warranty on the control valve.

Resin Cleaner


An approved resin cleaner **MUST** be used on a regular basis if your water supply contains iron. The amount of resin cleaner and frequency of use is determined by the quantity of iron in your water (consult your local representative or follow the directions on the resin cleaner package).

Res-Up® Feeder Installation Instructions (Optional)


Res-Up Feeders attach to your brine tank and automatically dispense the Res-Up cleaner into the brine solution where it cleans the resin during the regeneration cycle.

The feeder hooks onto the tube inside your brine tank and you just pour some chemical in it and your water conditioner should last significantly longer. A Res-up feeder is essential if your raw water contains measurable amounts of iron.


Res-up Feeder Bottle (Chemical sold Separately)
The 12 cc feeder (Part # 33010) is for conditioners up to 64,000 grains (2 ft3 of resin).
The 30 cc feeder (Part # 33018) is for larger conditioners over 64,000 grains.
Pro-Res Care Chemicals
Item #45147 Pro-ResCare - Gallon
Item #45148 Pro-ResCare - Quart

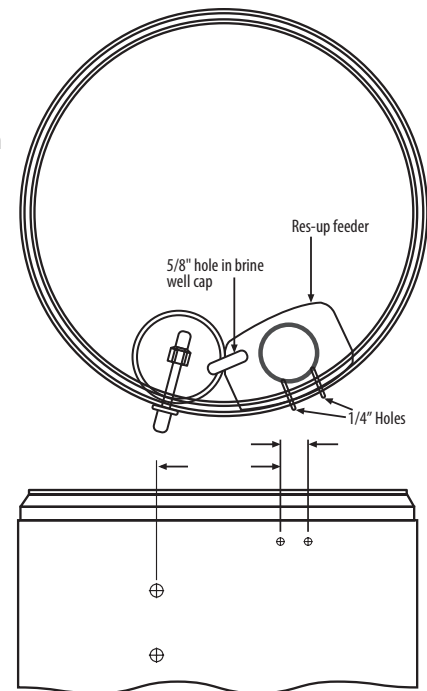


Install Resup Feeder

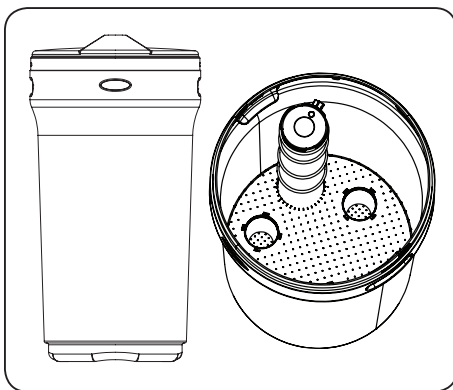

1. Install the grid and brine well inside the tank.

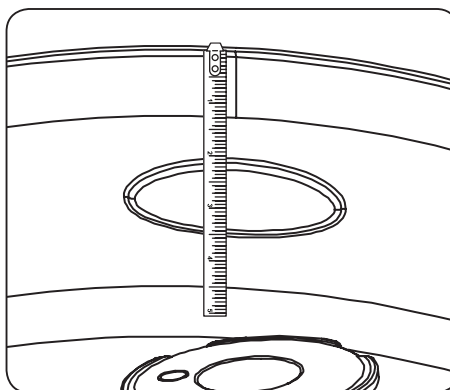


2. Measure 2 inches from the top of the tank beside the oblong molding.


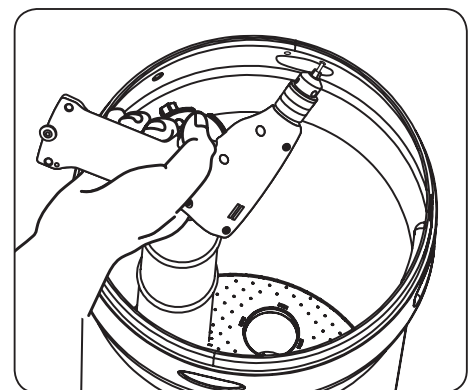


3. Mark the location of the holder and drill.


Res-Up® Feeder Installation Instructions (Optional)

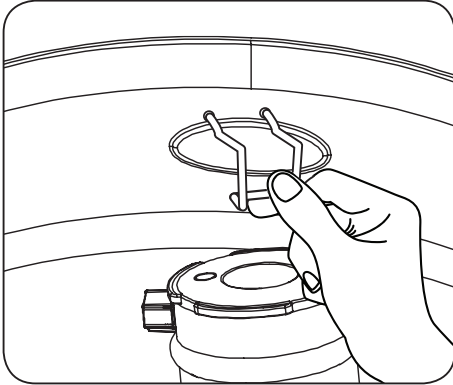

4. Install the holder and the Res Care Solution

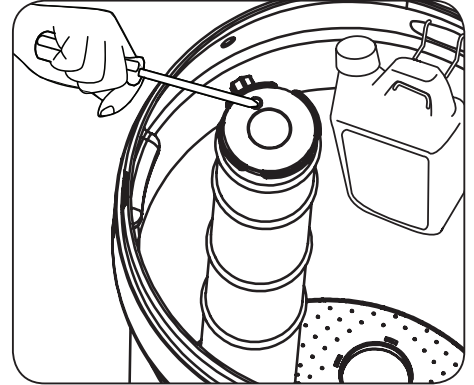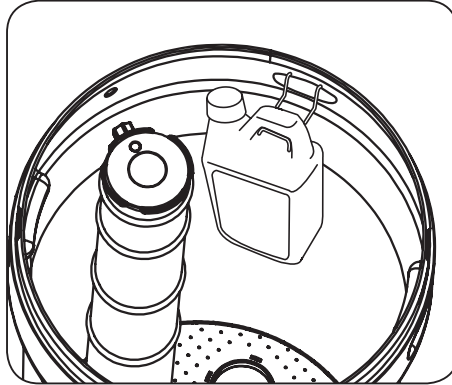

5. Take off the small hole cover on the Brine Well lid.

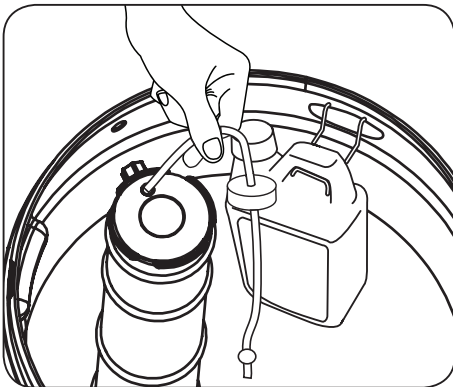


6. Take off the cover of the Res care bottle . Insert the wick, making sure it touches the bottom of the bottle. Insert the other end of the tube completely into the hole in the brine well cap. Automatic feeding will start in a few hours.

SERVICING 785HE VALVE

Before Servicing


1. Turn off water supply to conditioner :
 - a. If the conditioner installation has a 3 valve bypass system first open the valve in the bypass line, then close the valves at the conditioner inlet & outlet.
 - b. If the conditioner has an integral bypass valve, put it in the bypass position.
 - c. If there is only a shut-off valve near the conditioner inlet, close it.
2. Relieve water pressure in the conditioner by stepping the control into the backwash position momentarily. Return the control to the In Service position.
3. Unplug Electrical Cord from outlet.
4. Disconnect drain line connection.

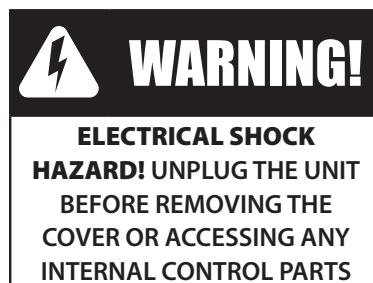


INSPECTION AND REPLACEMENT OF PISTON ASSEMBLY AND SEAL AND SPACER KIT

Fig. 2


Remove 3 X
Screws

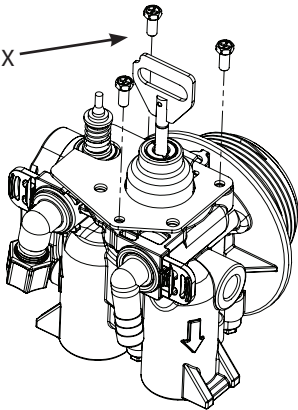

1. Remove three screws from the plate on the valve body.

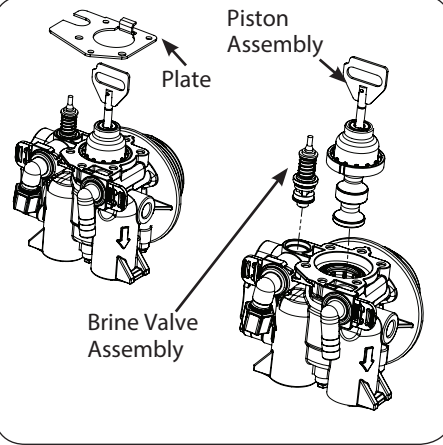


2. Remove the plate from the valve body and pull the Piston Assembly from the valve. The brine valve assembly can also be removed in this stage.
3. Remove the seal spacer assembly, grease it with silicone lubricant (# 92360) and put back in.

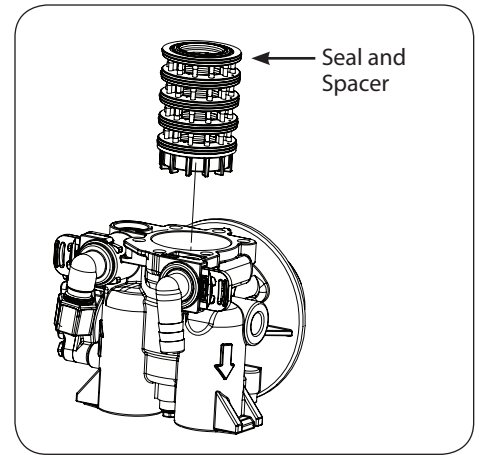

4. Replace piston assembly followed by timer assembly.
5. Replace the piston assembly and reverse following steps in this section


CLEAN INJECTOR ASSEMBLY

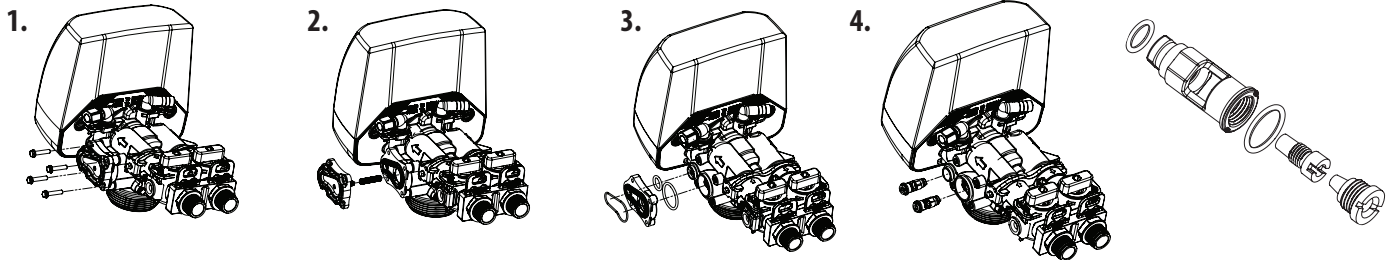

1. Remove four screws of the injector cap.
2. Pull the Injector Cap Out
3. Remove the injector assembly, oring and screen
4. Clean the injectors and replace cap


REPLACE METER ASSEMBLY

1. Disconnect the meter cable from the meter.
2. Disconnect the valve from bypass by removing clips
3. Remove the coupling adapter from the bypass
4. Remove the meter and meter support from the bypass and replace

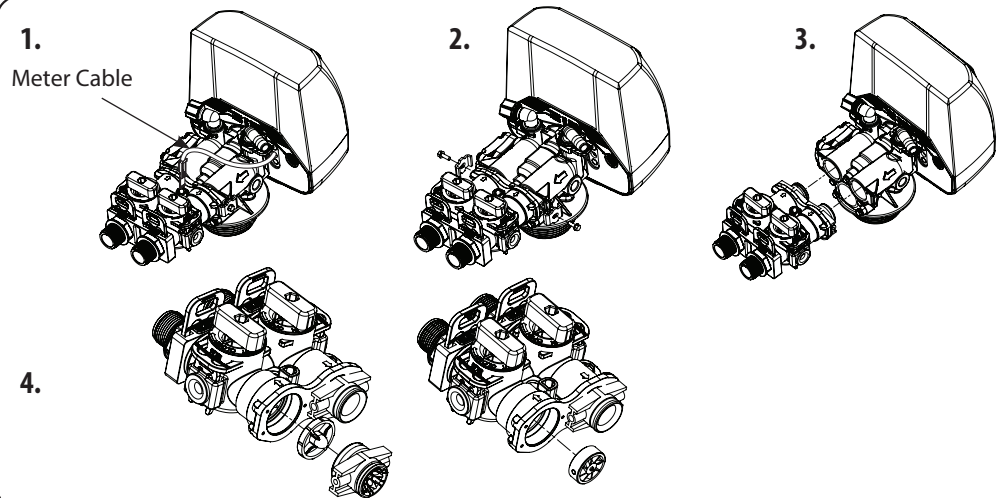

REPLACING THE BYPASS AND METER CABLE

60095101 Bypass comes with Meter and Grey Meter Cable

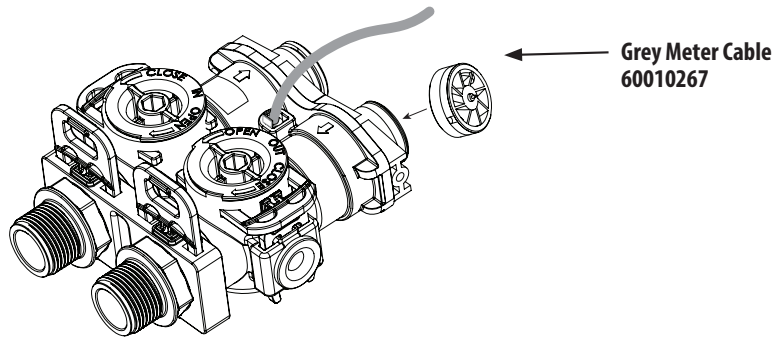

Step 1
Unplug the power from the wall socket.

Step 2*
Remove 2 screws and clips from bypass.

Disconnect the meter cable from the bypass.

***NOTE**
Water to the household needs to be turned off and pressure relieved before Step 2

Step 3
Remove Cover.

Step 4
Disconnect the cables from the front PCB display.

Step 5
Disconnect the cables from the rear PCB display.

Remove the meter cable attached on Main PCB.

Cut the tie that fastens the wires

Step 6
Remove strain relief with pliers.


Step 7
Replace the old cable with the new Cable.

Step 8
Assemble the valve. Plug the power supply back into the wall socket and follow the programming shown on right:


If there are "TB-L" and "TB-H" meter type options in PCB programming, select "TB-H". If the valve programming has no "TB-L" and "TB-H" options, change the meter ratio to the new value as per chart on right*:
For 85HE Valves press MANUAL REGEN+UP+DOWN for 3 seconds to get to Factory Settings.
Or:
To enter the programming press and hold the MENU button for three seconds to unlock the screen. When the screen is unlocked, press and hold the DOWN arrow button for 3s to enter the code entry screen.
Enter the code number 119 using the UP and DOWN arrows. Press the MANUAL/REGEN to step through the digit. Press the SET to step through to METER RATIO and set as per chart below*:
Press the SET to step through to PROGRAMING COMPLETE and past this until TIME OF DAY screen appears.

* Valve Model	Region	Meter Ratio
785HE Series	U.S Gallon	5.680

REPLACE MOTOR

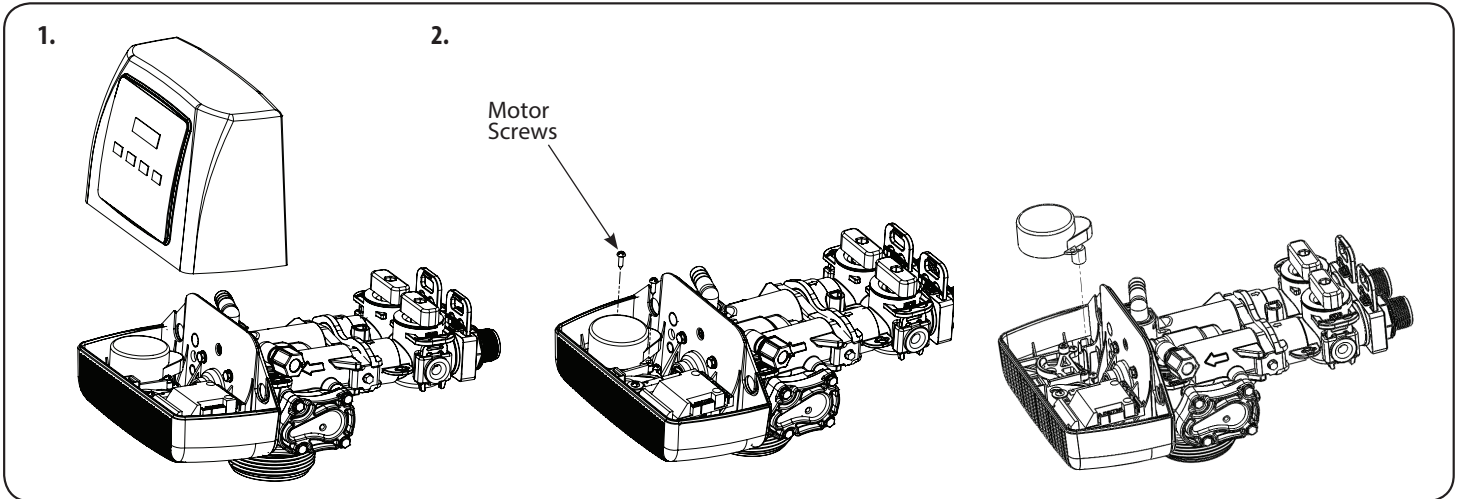


REPLACE DRAIN LINE FLOW CONTROL

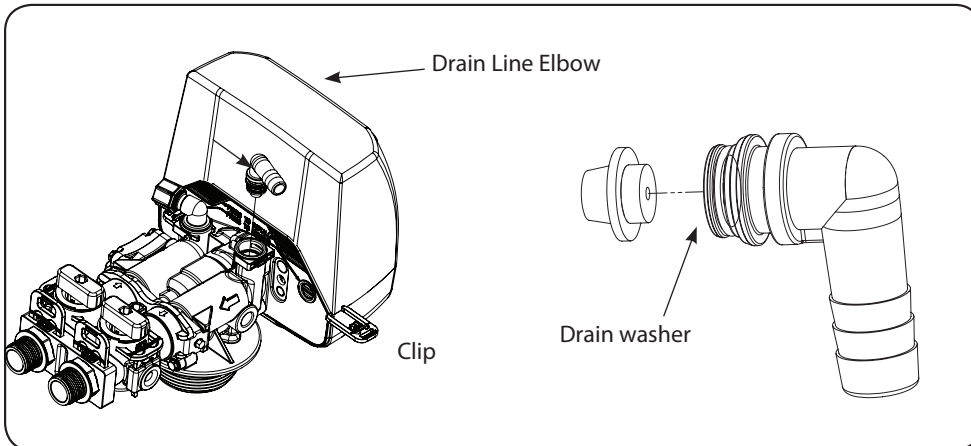

NOTE
Be sure to shut off any bypass line.

REPLACE BRINE LINE FLOW CONTROL

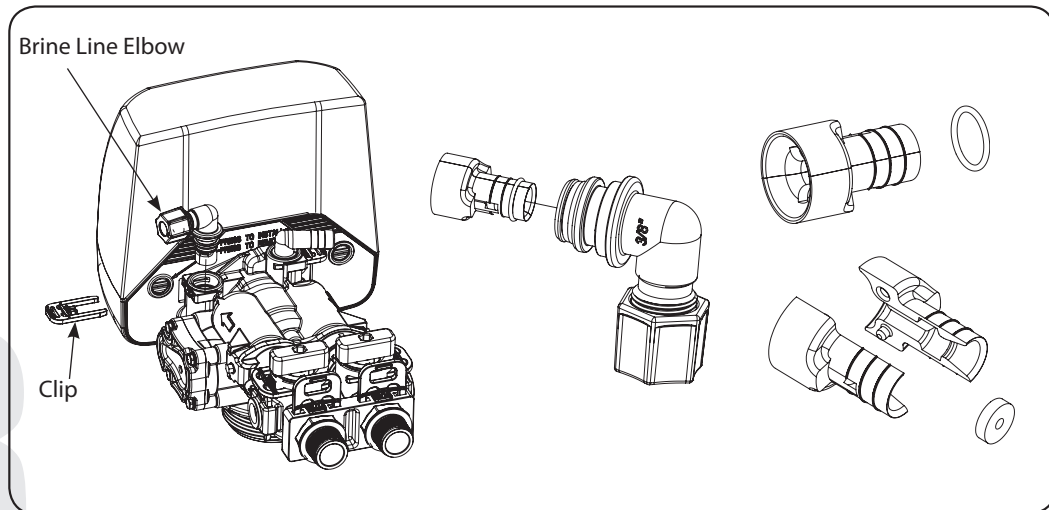


AFTER SERVICING

1. Reconnect drain line
2. Return bypass or inlet valve to normal in service position. Water Pressure will automatically build in the Softener

NOTE
Be sure to shut off any bypass line.

3. Check for leaks at all sealed areas. Check Drain seal with the control in the backwash position
4. Plug electrical cord into outlet
5. Set Time of Day and cycle the control valve manually to assure proper function. Make sure control valve is returned to the In Service position


PARTS BREAKDOWN

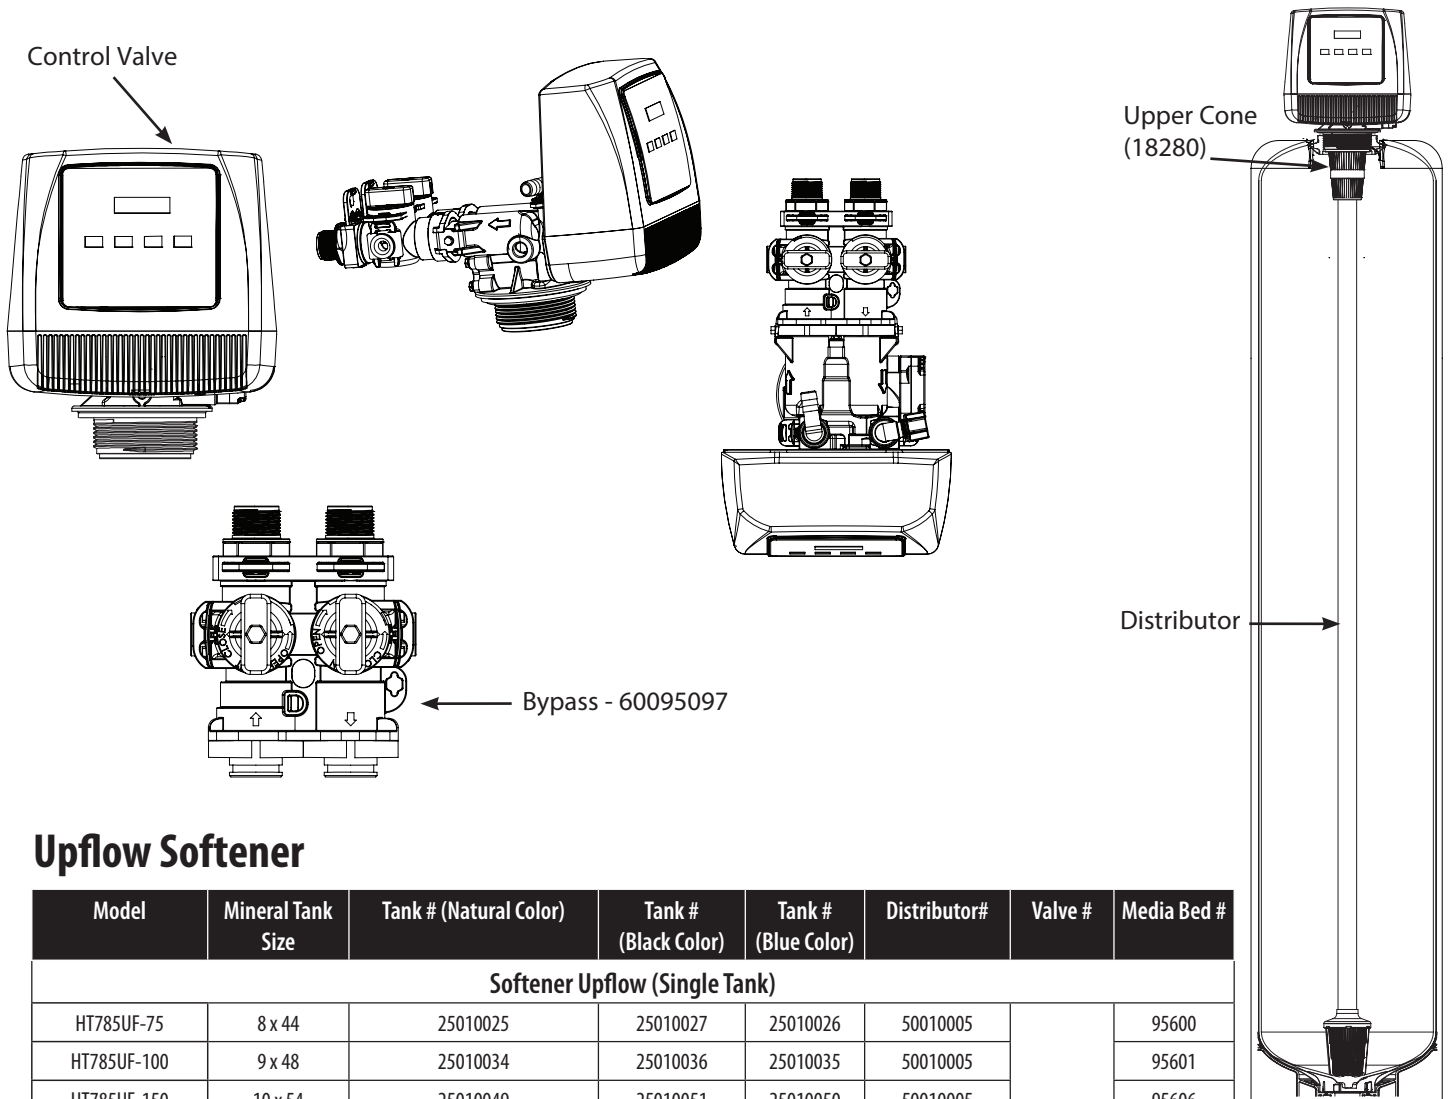

Upflow Softener

Model	Mineral Tank Size	Tank # (Natural Color)	Tank # (Black Color)	Tank # (Blue Color)	Distributor#	Valve #	Media Bed #
Softener Upflow (Single Tank)							
HT785UF-75	8 x 44	25010025	25010027	25010026	50010005	10010109	95600
HT785UF-100	9 x 48	25010034	25010036	25010035	50010005		95601
HT785UF-150	10 x 54	25010049	25010051	25010050	50010005		95606
HT785UF-200	12 x 52	25010058	25010060	25010059	50010005		95609
HT785UF-250	13 x 54	25010064	25010066	25010065	50010010		95610
HT785UF-300	14 x 65	25030001 and 50040039	Not Available	Not Available	50010010		95604
HT785UF-75C	9 x 35	25030002 and 50040036	Not Available	Not Available	50010010		
HT785UF-100C	10 x 35						


PARTS BREAKDOWN

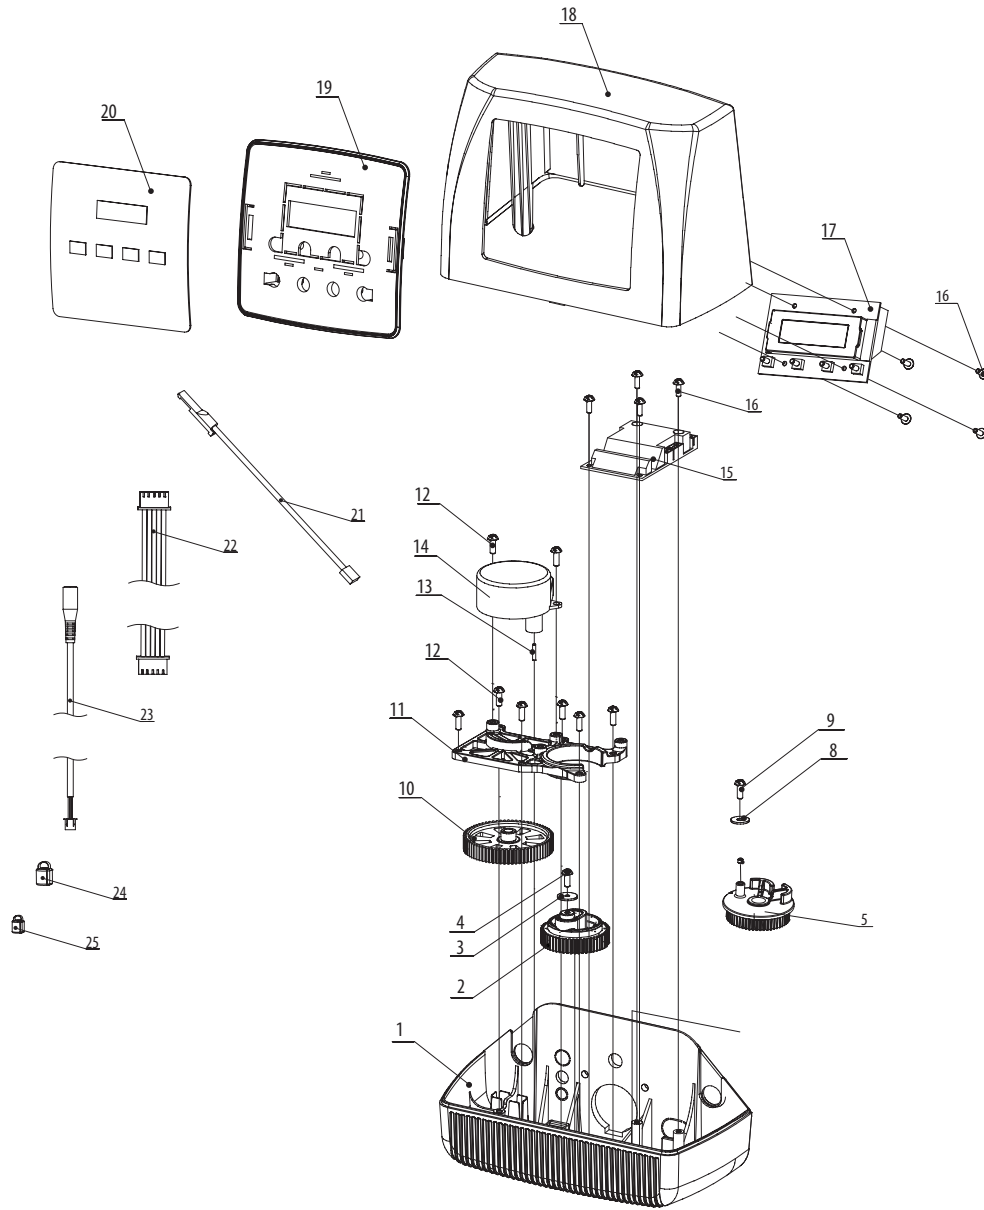

Upflow Powerhead Parts List

No.	Part #	Description	Qty
25	60010331	Power Cable Clip	1
24	60010330	Meter Cable Clip	1
23	60010124	Power Cable	1
22	60010240	Display-PCB cable	1
21	60010115	Meter Cable	1
20	80080130	785HE Face Label	1
19		Bnt785 Display Plate(Black)	1
18	60010286 - Black 60010287 - Grey	Bnt785HE Housing(Black)	1
17	60010180	Bnt85HE Display	1
	60010740		
16	60010740	Screw-ST2.9×10	8
15	60010178 60010179 - MAIN PCB - DF	Bnt85HE Main Pcb(UF)	1
14	92393	Bnt85 Motor	1
13	60010660	Motor Pin	1
12	60010574	Screw-ST3.5x13	8
11	60010573	Bnt85HE Mounting Plate	1
10	92389	Bnt85 Drive Gear	1
9	60010575	Screw-4.2×12	1
8	60010661	Washer-4x12	1
5	60095102	Gear, Brine, 85HE(UF)	1
4	60010099	Screw-2.9×13	1
3	60010100	Washer-3x13	1
2	92391	Bnt85HE Main Gear	1
1		Bnt785HE Base(Black)	1

PARTS BREAKDOWN

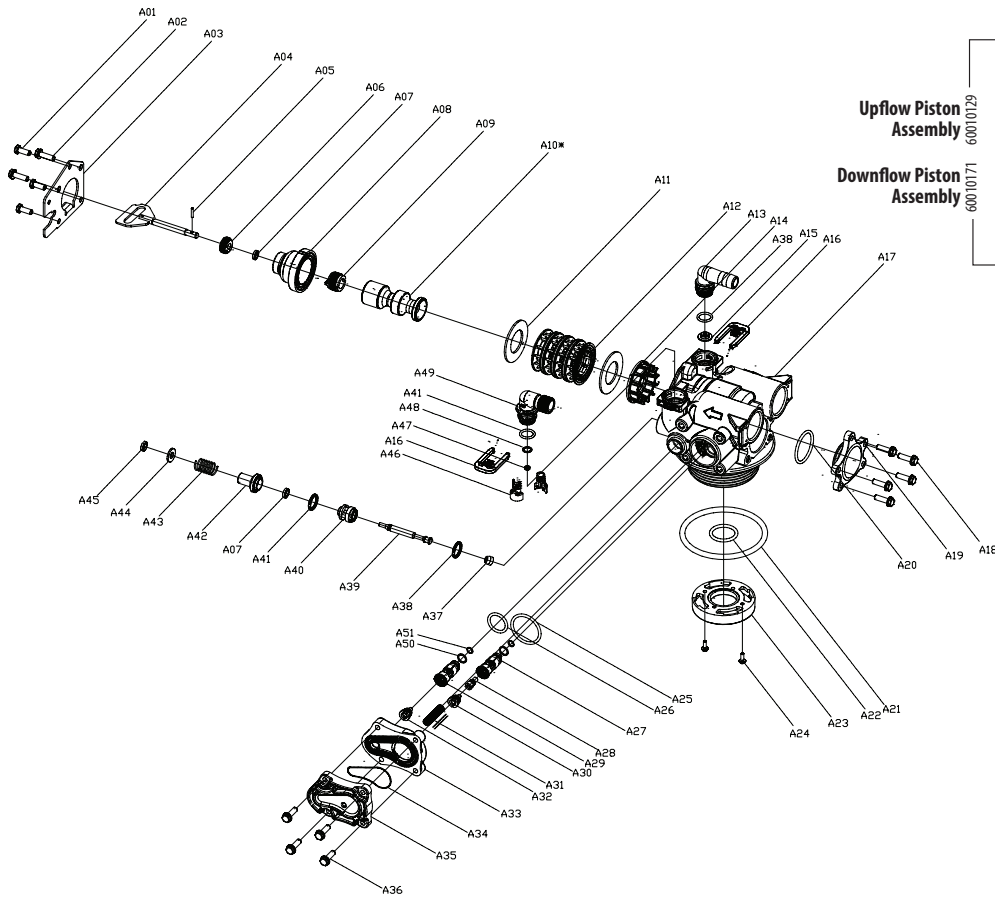

Valve Body Parts List

No.	Part # (WaterGroup)	Part # (Canature)	Description	Qty
A01	60010075	05056087	Screw-M5x12(Hexagon)	3
A02	60010076	05056088	Screw-M5x16(Hexagon With Washer)	2
A03	60010645	05056047	End Plug Retainer	1
A04	60095056	05031032	BNT85HE Rod	1
A05	60010647	05056097	Piston Pin	1
A06	60010344	05031015	BNT85HE Quad Ring Plug Cover	1
A07		05056070	Quad Ring	2
A08		05031011	BNT85HE End Plug	1
A09	60095058	05031014	BNT85HE Piston Retainer	1
A10	60095075, 60095059	05057002, 05057001	BNT85HE Piston(Up flow and Downflow)	1
A11	13242-02	05056073B	Seal	5
A12	14241	05056204	Spacer	8
A13	60010229	05010082	Drain Fitting-B	1
A14	60095060	05031005	BNT85HE Spacer	1
A16	60010069	05056172	Secure Clip-s	2
A17	60095061	05031002	BNT85HE Valve Body	1
A18	60010596	05056508	Screw-M5x12(Hexagon With Washer)	5
A19	60095063	05030004	BNT85 End Cover	1
A20	60095614	05030013	O-Ring- ϕ 30x2.65	1
A21	60010077	05056063	O-Ring- ϕ 78.74x5.33	1
A22	60010080	26010103	O-Ring- ϕ 25x3.55	1
A23	60010599	07060007	Valve Bottom Connector	1
A24	60010099	13000426	Screw-S12.9X13(Large Washer)	2
A25	60010190	05031022	O-Ring- ϕ 32x3	1
A26	60010189	05031021	O-Ring- ϕ 18x3	1
A27	60010174	05031012	BNT85HE Injector Fixed Sleeve	1
A29	60010175	05031013	Injector Plug Body	1
A31	10227	05056103	Injector Screen	1
A32	60095076	05056156	Injector Plug	1
A33	60010193	05031003	BNT85HE Injector Cover Body	1
A34	60010195	05031018	O-Ring- ϕ 40x2.65	1
A35	60010194	05031004	BNT85HE Injector Cover Cap	1
A36	60010196	05031027	Screw-M5x25(Hexagon with Washer)	4
A37	92381	05056075	Seal Mat	1
A38		05056134	O-Ring- ϕ 12x2	3
A39		05056054	Injector Stem	1
A40		05056031	Injector Spacer	1
A41		05056081	O-Ring- ϕ 12.5x1.8	1
A42		05056030	Injector Cap	1
A43		05056093	Injector Screen	1
A44		05010049	Spacer Washer	1
A45		05056105	Retaining Ring	1
A46	60010173	05031010	BNT85HE BLFC Fixed Sleeve	2
A47			BLFC(optional)	1
A48	60010188	05031033	O-Ring- ϕ 8x1	1
A49	60010172	30020013	BNT85HE Brine Line Elbow	1
A50	60010186	05031019	O-Ring- ϕ 12.5x1.5	2
A51	60010187	05031020	O-Ring- ϕ 8x1.5	2
A52	60010191	30110012	Ball, Seal	


Item #s For All Injector Assemblies and Brine Line and Drain Line Washers

Part #	Part Description
60010110	BLFC BUTTON #2 0.3GPM A32
60010082*	BLFC BUTTON #2 0.7GPM A32
60010128	BLFC BUTTON 0.2GPM
60010601	INJECTOR SET #0000 BLACK THROAT
60010602	NOZZLE #0000 BLACK THROAT
60010603	INJECTOR SET #000 GREY THROAT
60010604	NOZZLE #000 GREY THROAT
60010605	INJECTOR SET #00 VIOLET THROAT
60010606	NOZZLE #00 VIOLET THROAT
60010607	INJECTOR SET #0 RED THROAT
60010608	NOZZLE #0 RED THROAT
60010609*	INJECTOR SET #1 WHITE THROAT
60010610*	NOZZLE #1 WHITE THROAT
60010611	INJECTOR SET #2 BLUE THROAT
60010612	NOZZLE #2 BLUE THROAT

* Default

Part #	Part Description
60010613	INJECTOR SET #3 YELLOW THROAT
60010614	NOZZLE #3 YELLOW THROAT
60010685	INJECTOR SET #4 GREEN THROAT
60010686	NOZZLE #4 GREEN THROAT
60010131	DLFC #1 1.5GPM
60010132	DLFC #2 2.0GPM
60010133	DLFC #3 2.4GPM
60010135	DLFC #5 3.5GPM
60010041	DLFC #6 4GPM
60010169	DLFC #7 5GPM
60010136	DLFC #A 5.0GPM
60010137	DLFC #B 7.0GPM
60010138	DLFC #C 11.0GPM

PARTS BREAKDOWN

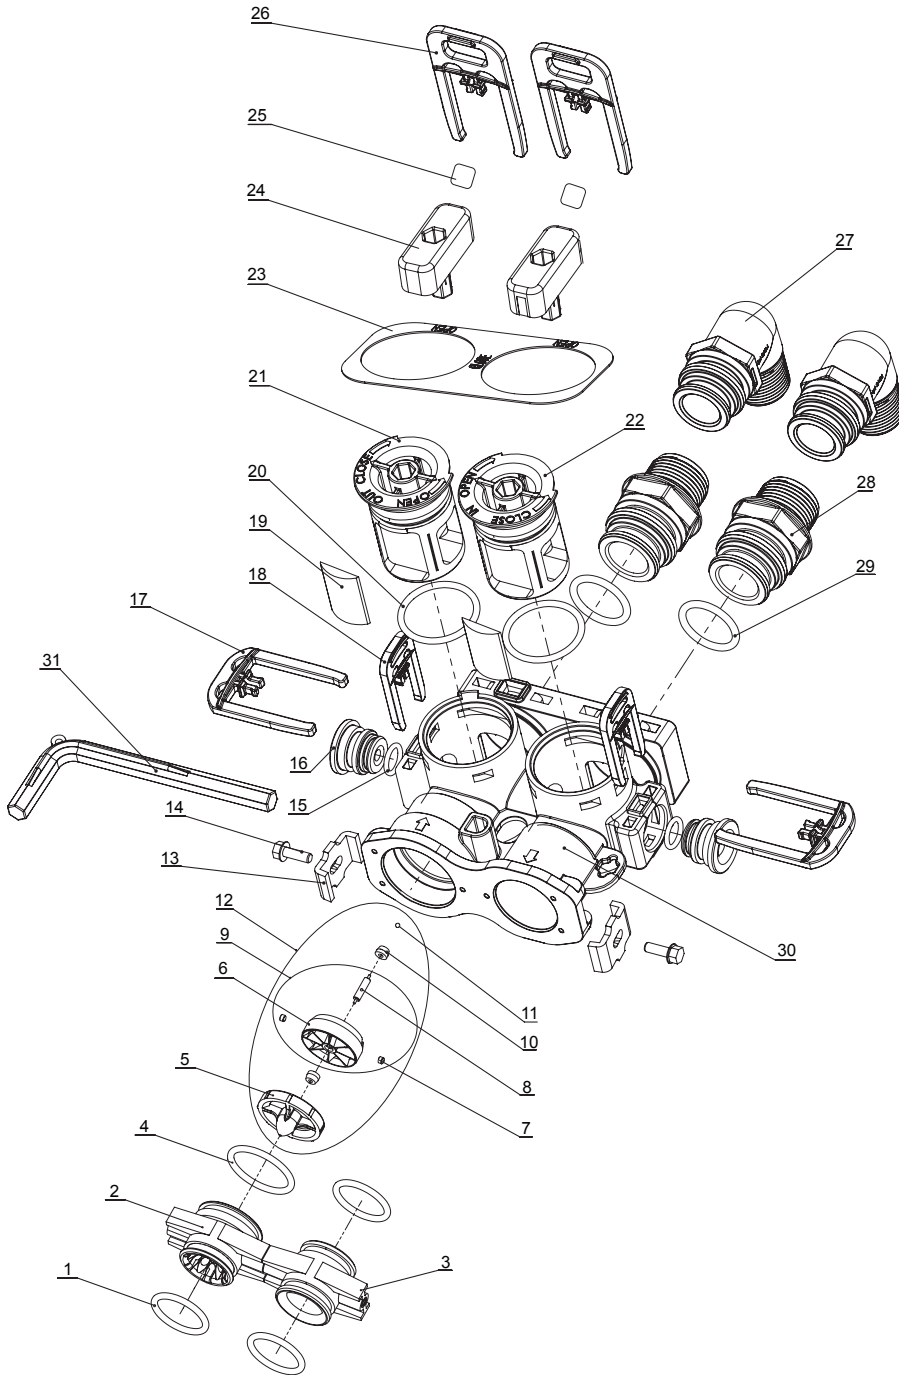


Bypass Parts List

No.	Part # (Water Group)	Part # (Canature)	Description	Qty
32	60010267	05010108	Grey Meter Cable cc	1
31	60010006	70020007M	Bypass Tool	1
30		05056212	063 Bypass Body	1
29	60010026	26010143	O-ring on Inlet and Outlet	2
28	60010019	21319011N	Straight 1" NPT Inlet and Outlet	2
27	60010023	21319036N	Elbow 3/4" NPT Inlet and Outlet	2
26	60010025	21709003N	Secure Clip Inlet and Outlet	2
25	60010740	50040086	Direction Indication Label	2
24	60010740	05056220	Bypass Knob	2
23	60010740	61045012	Bypass Indication Plate	1
22	60010740	05056213	Bypass Shaft(Inlet)	1
21	60010740	05056214	Bypass Shaft(Outlet)	1
20	60095614	05030013	O-ring(30×2.65)	2
19	60010740	05056149B	Shaft Seal	2
18	60010069	05056172N	Plug Clip(Red)	2
17	60010740	21709004	Shaft Clip(Red)	2
16	60010209	05056146M	Bypass Plug	2
15	60010044	05056134	O-ring(12×2)	2
14	60010126	13000327	Screw M4×12	2
13	60010046	05056044B	SS Clip	2
12		02170264	Meter Spare Parts	1
11		05040129	Bush Ball	1
10		05010019	Bush	2
9		02170263	Meter Assy	1
8	60010238 *60010308	05010107	Impeller Pin	1
7		05010104	Magnet	2
6		05010105	Impeller	1
5		05010077	Impeller Support	1
4	60010102	26010046	O-ring(27×3)	1
3	60010079	05056025M	Valve-Bypass Connector(Inlet)	1
2	60010101	05010083N	Valve-Bypass Connector(Outlet)	1
1	60010562	05056129	O-ring(23×3)	3

*After 03/18 refer to '# 80150452 Manual Replacing Bypass & Grey Meter Cable'

PARTS BREAKDOWN

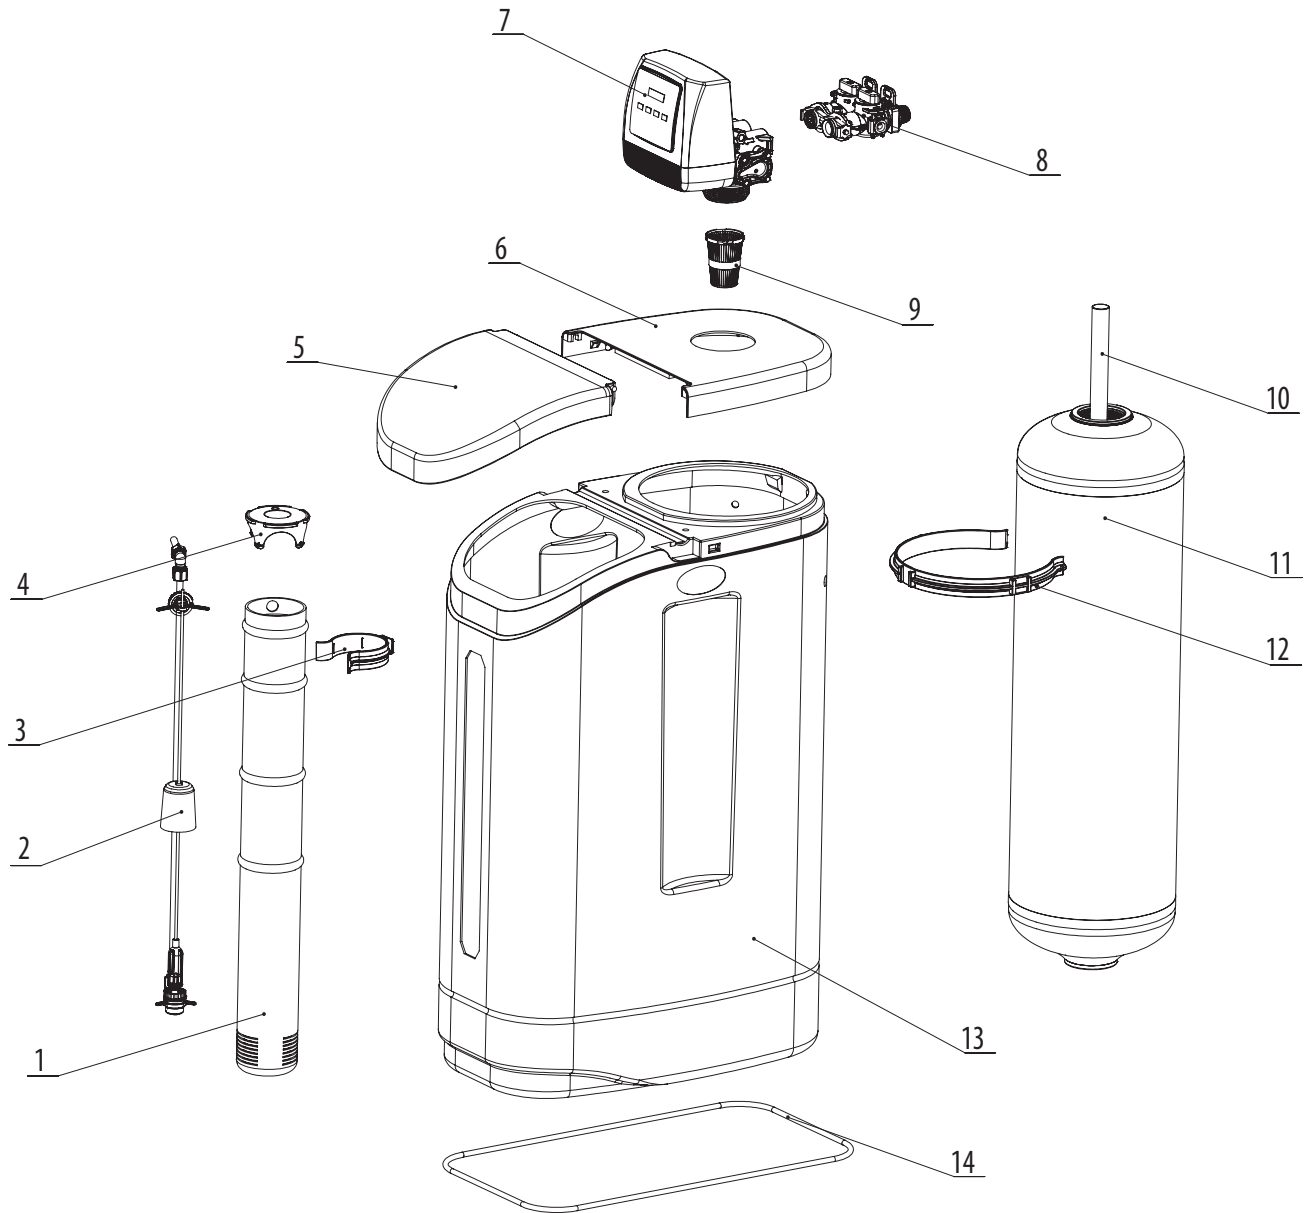

Cabinet Parts List

No.	Part #	Description	Qty
14		Trim Strip	1
13		Softener Cabinet(Grey)	1
12	60010361	Pressure Tank Clamp	1
11	25020019	TANK ASSY 935 NAT	1
	25020020	TANK ASSY 1035 NAT	1
10	50010020	Distribution Assy-1035	1
9	18280	Top Cone	1
8	60095097-1	Bypass Valve Assy	1
7	10010109	785HE(UF) Control Valve	1
6	55010031	Softener Low Cover	1
5	85010132	Softener Salt Lid	1
4	55020002	Brine Well Cap	1
3	60010362	Brine Well Clamp	1
2	55010023	0435 Brine Valve	1
1	55010010	0435 Brine Well	1

TROUBLE SHOOTING GUIDE

NOTE

Before doing any service, record the diagnostic information provided by the controller. See page 21

Problem	Possible Solutions
1. CONDITIONER DELIVERS HARD WATER A. Bypass valve is open B. No salt in brine tank C. Injector or screen plugged D. Insufficient water flowing into brine tank E. Hot water tank hardness F. Leak at distributor tube G. Internal valve leak H. Flow meter jammed I. Flow meter cable disconnected or not plugged into meter J. Improper programming	A. Close bypass valve B. Add salt to brine tank and maintain salt level above water level C. Replace injectors and screen D. Check brine tank fill time and clean brine line flow tank control if plugged E. Make sure distributor tube is not cracked. Check O ring and tube pilot F. Make sure distributor tube is not cracked. Check O ring and tube pilot G. Replace seals and spacers and/or piston H. Remove obstruction from flow meter I. Check meter cable connection to timer and meter J. Reprogram the control to the proper regeneration type, inlet water hardness, capacity or flow meter size.
2. CONDITIONER FAILS TO REGENERATE A. Electrical service to unit has been interrupted B. Timer is not operating properly C. Defective valve drive motor D. Improper programming	A. Assure permanent electrical service (check fuse, plug, chain or switch) B. Replace circuit with display C. Replace drive motor D. Check programming and reset as needed
3. UNIT USES TOO MUCH SALT A. Improper salt setting B. Excessive water in brine tank C. Improper programming	A. Check salt usage and salt setting B. See 1 - C C. Check programming and reset as needed
4. LOSS OF WATER PRESSURE A. Iron build-up in line to water conditioner B. Iron build-up in water conditioner C. Inlet of control plugged due to foreign material broken loose from pipes by recent work done on plumbing system.	A. Clean line to water conditioner B. Clean control and add resin cleaner to resin bed. Increase frequency of regeneration C. Remove control valve from unit, remove upper cone and clean cone
5. LOSS OF RESIN THROUGH DRAIN LINE A. Air in water system B. Drain line flow control is too large	A. Assure that well system has proper air eliminator control. Check for dry well condition. B. Ensure drain line flow control is sized
6. IRON IN CONDITIONED WATER A. Fouled resin bed B. Iron content exceeds recommended parameters C. Dirty resin	A. Check backwash, brine draw and brine tank fill. Increase frequency of regeneration. Increase backwash time. B. Add iron removal filter system C. If cleaning resin does not resolve then replacement of resin is required.
7. EXCESSIVE WATER IN BRINE TANK A. Plugged drain line flow control B. Brine valve failure C. Improper programming	A. Clean flow control B. Replace brine valve C. Check programming and reset as needed
8. SALT WATER IN SERVICE LINE A. Plugged injector system B. Timer not operating properly C. Foreign material in brine valve D. Foreign material in brine line flow control E. Low water pressure F. Improper programming	A. Clean injector and replace screen B. Replace circuit c/w display C. Clean or replace brine valve D. Clean brine line flow control E. Water pressure must be above 20 psi F. Check programming and reset as needed
9. CONDITIONER FAILS TO DRAW BRINE A. Drain line flow control is plugged B. Injector is plugged C. Injector screen is plugged D. Line pressure is too low E. Internal control leak F. Improper programming G. Timer not operating properly	A. Clean drain line flow control B. Clean or replace injectors C. Replace screen D. Increase line pressure (line pressure must be at least 20 psi at all times) E. Change seals and spacers and/or piston assembly F. Check programming and reset as needed G. Replace circuit c/w display
10. CONTROL CYCLES CONTINUOUSLY A. Timer not operating properly B. Faulty cycle times	A. Contact customer support for additional trouble shooting information B. Contact customer support for re programming instructions.
11. DRAIN FLOWS CONTINUOUSLY A. Foreign material in control B. Internal control leak C. Control valve jammed in brine or backwash position D. Timer motor stopped or jammed teeth	A. Remove piston assembly and inspect bore. Remove foreign material and check control in various regeneration positions B. Replace seals and/or piston assembly C. Replace piston and seals and spacers D. Replace timer motor and check all gears for missing teeth

MASTER PROGRAMMING

Press **Up** and **Down** Button for 5 seconds



Press **MANUAL REGEN** Button and change value using **Up** and **Down** Buttons

Key Pad Setting

SETTINGS This function is to enter the basic set up information required at the time of installation.


MANUAL REGEN This function is to initiate an immediate or delayed manual regeneration.

DOWN / UP Increase or decrease the value of the settings while in the programming mode.

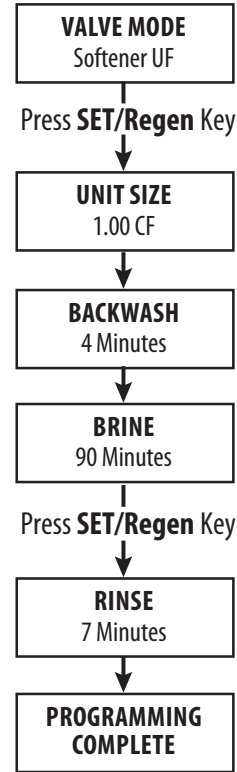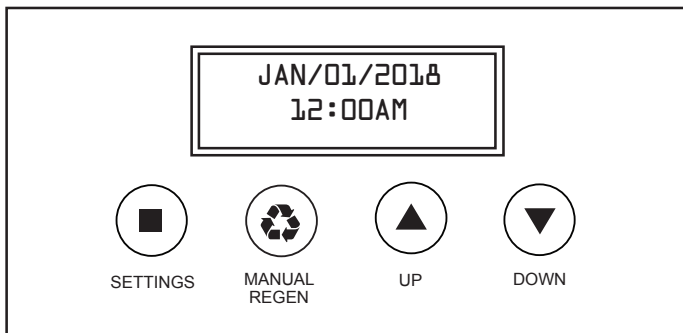

Main Valve Settings

Meter Ratio	METER RATIO AFTER MAR 20,2018 - 5.68 METER RATIO BEFORE MAR 20,2018 - 8.00
Service Delay	3.0
Backwash Delay	7.0
Brine Delay	4.0
Rinse Delay	5.0
Refill Delay	4.0

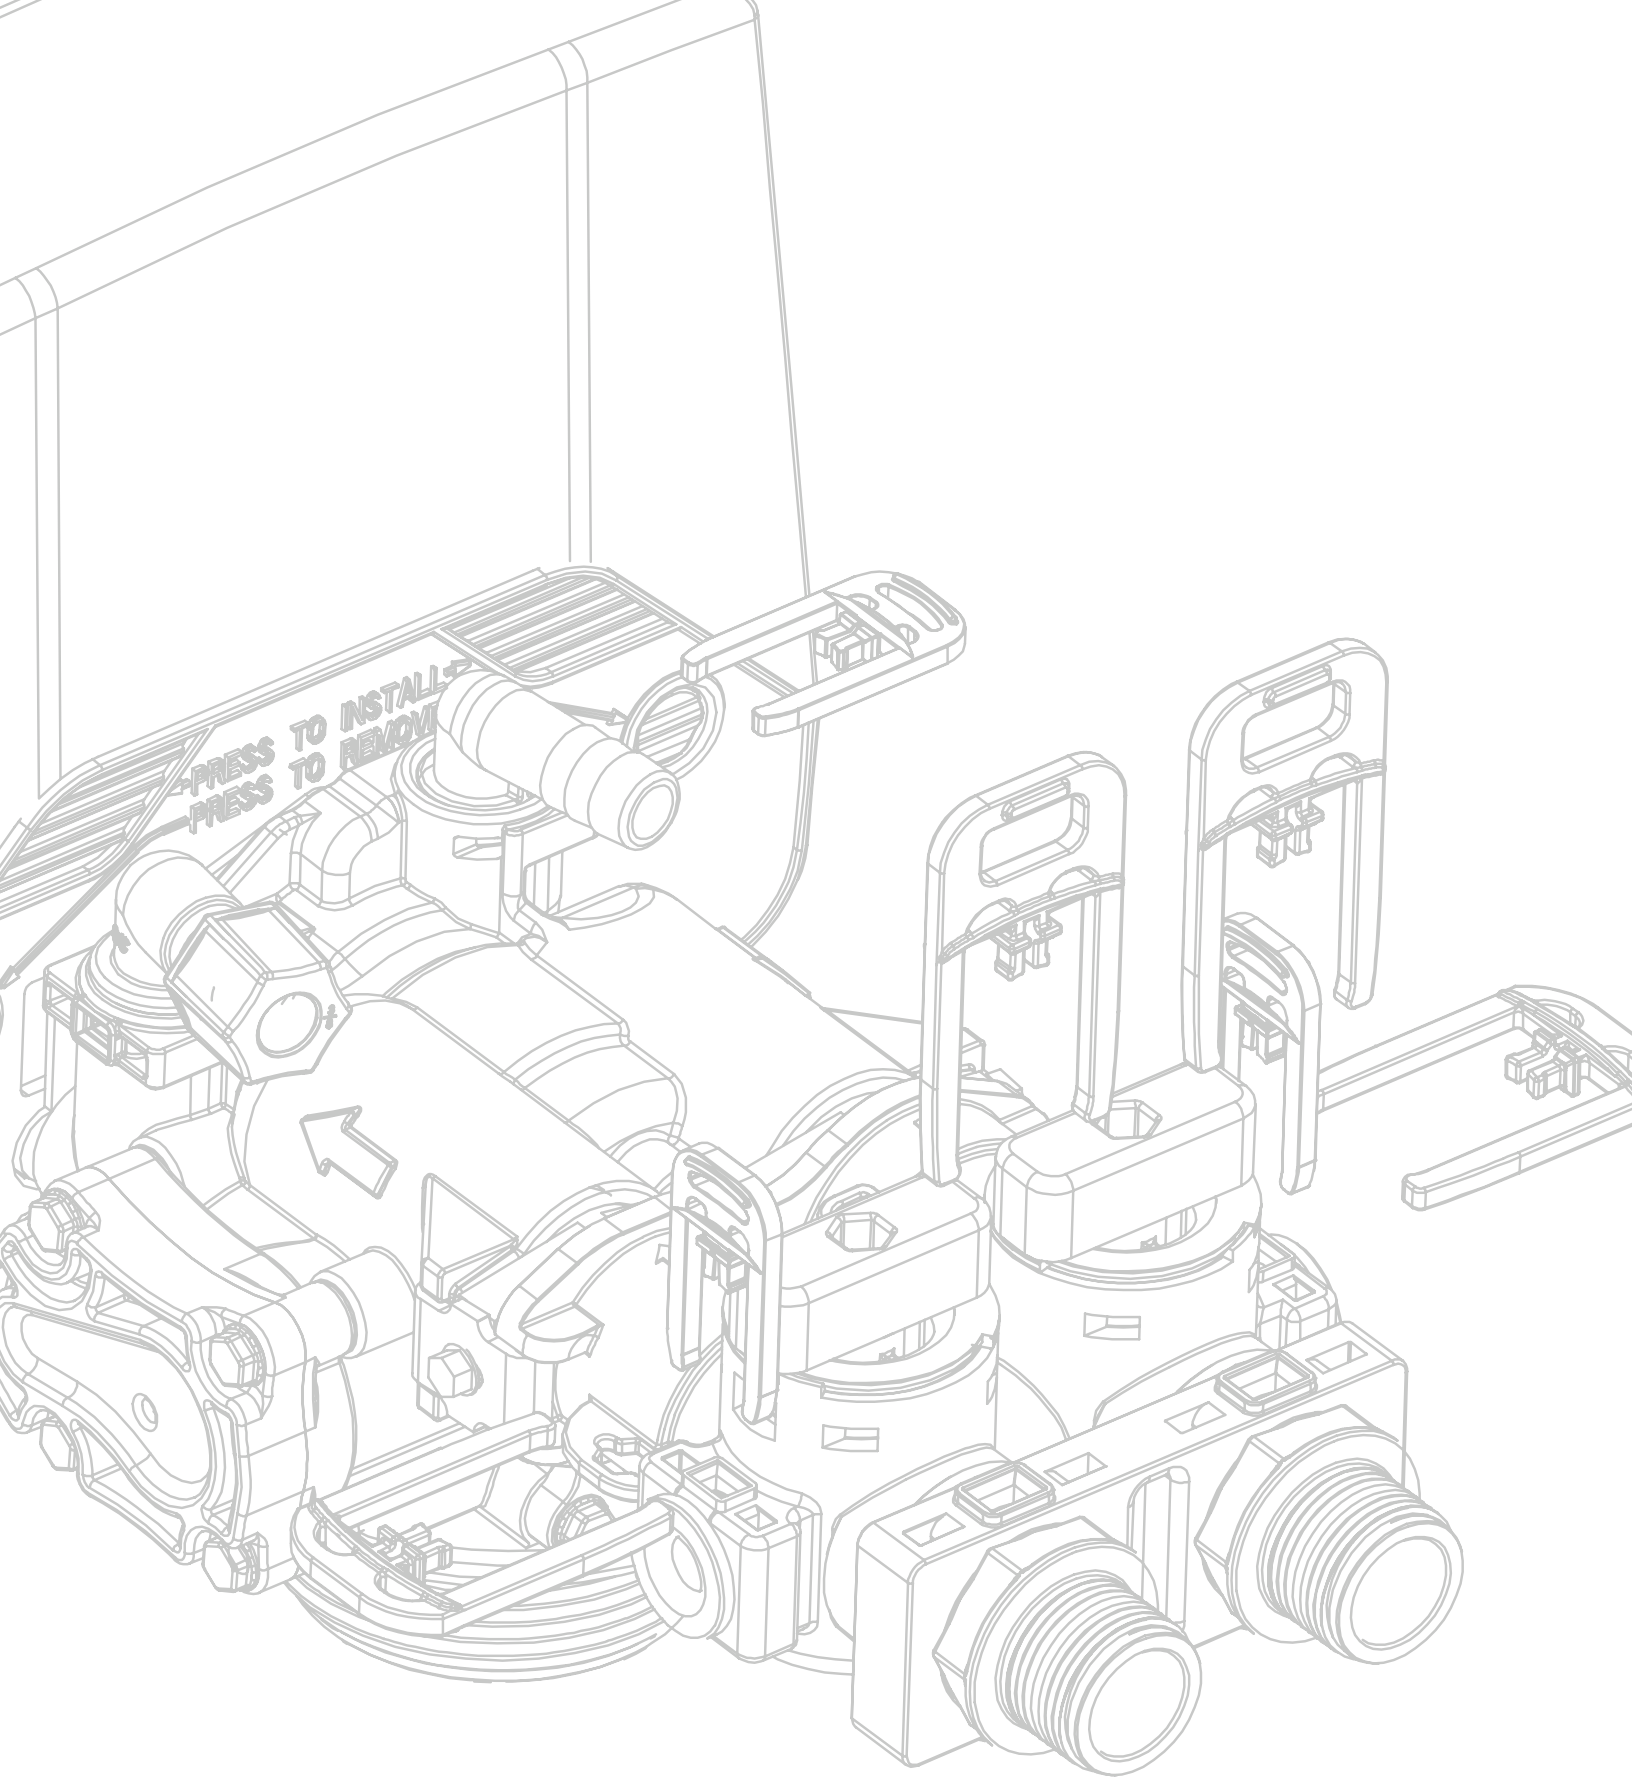

Toll Free: 1-877-288-9888

Regina, SK • Cambridge, ON • Carmel, IN • Pottstown, PA • Phoenix, AZ