


# Kickout Flashing Installation Diagram

(not to scale)

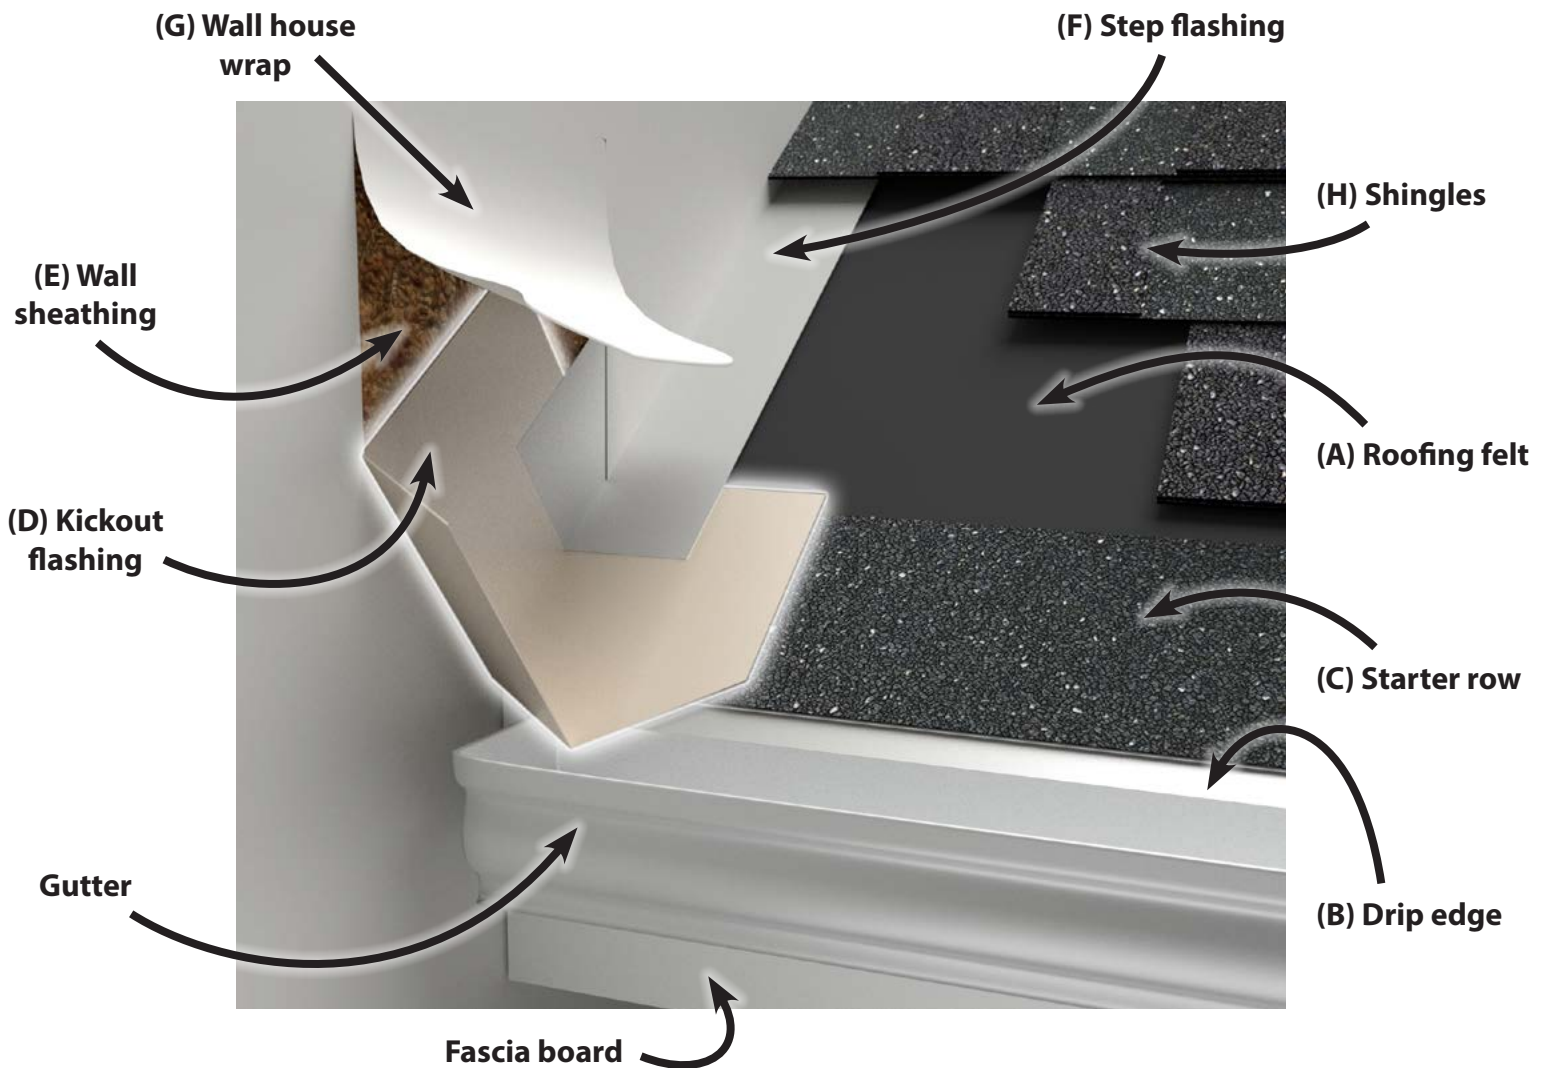

1. (A) Roofing felt, (B) drip edge, and (C) starter row of shingles to be installed prior to kickout flashing.
2. Vertical side of (D) kickout flashing to be installed to (E) wall sheathing.
3. Standard (F) step flashing at wall and roof joint to overlap kickout flashing by a minimum of 4".
4. (G) Wall house wrap to be installed on top of kickout flashing.
5. (H) Shingles to be installed on top of kickout flashing.

Space gutter away from vertical wall per siding manufacturers' recommendation.

**PLEASE NOTE:** PBZ LLC, the manufacturer of Kickout Flashing by PBZ, provides this diagram for general information purposes only. To ensure proper installation, comply with local governing codes and regulations, as well as roofing and wall finish manufacturer instructions.

Consult the roofing material manufacturer and wall finish manufacturer for their instructions for installation of kickout flashing. Should a contradiction arise in installation instructions, the roofing or wall finish manufacturer's instructions shall supersede this diagram.

Consult your local building code and regulations for installation instructions of kickout flashing. Should a contradiction arise in product installation or overall construction, the building code and regulations shall supersede this diagram.



295 Wood Corner Rd, Lititz, PA 17543

KickoutFlashing.com • Phone: 717-738-7365 • Fax: 717-738-7375