

IMPORTANT SAFETY NOTICE




A potential problem has been identified on the Federal Pioneer NC015 and NCO15CP circuit breakers. In some circumstances these breakers may not trip, however in other cases, the breakers will continue to protect the circuit breaker handle to the OFF position.

If ANY work has been done (new installation, renovation or addition) on the electrical panel of your home or office since August 1, 1996, please follow these instructions:


STEP 1 Do you have any circuit breaker panels at your location? (typical circuit breaker panels are shown below) Fuse panels are not affected by this notice. If you do have any circuit breaker panels, please go on to **STEP 2**.

STEP 2 Do you have a main or sub electrical circuit breaker panel with ANY of these illustrated names on it? The name may be behind a door. The panel could be dark gray, beige, light gray or may have been painted.



If you do **NOT** have any of these illustrated names, please disregard this notice. If your panel has any one or more of these identifiers, please go on to **STEP 3** and carefully follow the outlined instructions.

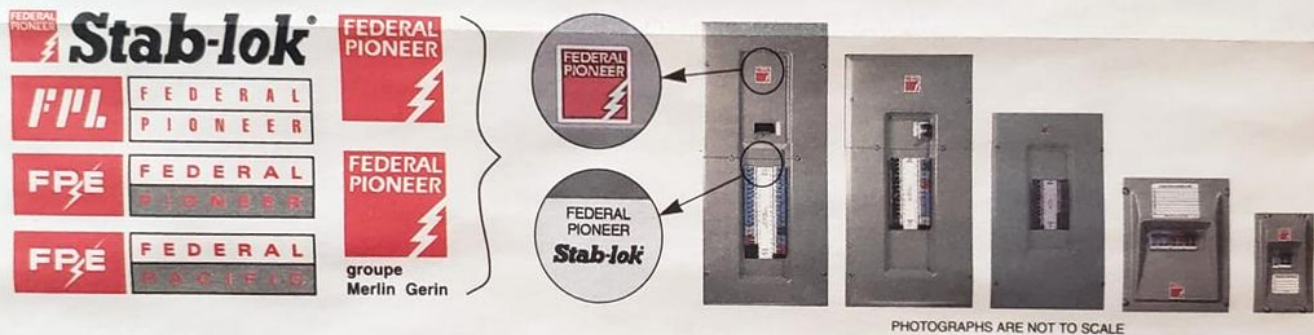

STEP 3 Do you have ANY circuit breakers with BLUE coloured handles? Black, red, green and gray coloured handles are okay. Please note that you do **not** have to remove the cover to inspect the colour of the breaker handles. If you do **NOT** have any blue coloured handles, please disregard this notice. If you do, please go to **STEP 4**.

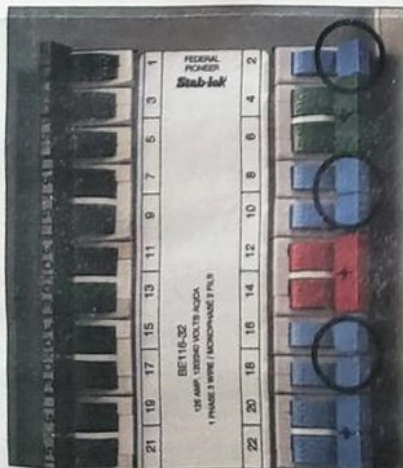

STEP 4 Do ALL of the BLUE coloured handles have a hole through the handle as shown in the photographs below?

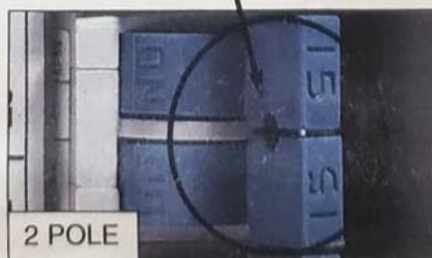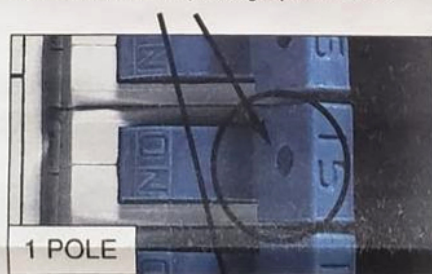

If ALL of your blue coloured handles have a hole through the handle, please disregard this notice. If not, please go to **STEP 5**.

STEP 5 If ANY of your BLUE coloured handle circuit breakers (as shown below) do **NOT** have a hole through the handle and have one of the names as shown above, then please call toll free **1-888-519-5556** or locally in the Metro Toronto area **(416) 234-6407** for further instructions and information.



Version française disponible: 1-888-519-5556

IMPORTANT SAFETY NOTICE