

# OWNER'S MANUAL

## R-410A Ductless Split System Air Conditioner and Heat Pump

Models: DLC4(A/H)–Outdoor Unit, DLF4(A/H)–Indoor Unit

Sizes: 9K, 12K, 18K, 24K, 30K and 36K

Please read the operating instructions and safety precautions carefully and thoroughly before installing and operating your room air conditioner or heat pump.

CLICK ANYWHERE on THIS PAGE to RETURN to ICP & TEMPSTAR HVAC MANUALS at [InspectApedia.com](http://InspectApedia.com)

### TABLE OF CONTENTS

	PAGE
SAFETY PRECAUTIONS .....	2
GENERAL .....	2
INDOOR / OUTDOOR UNIT PART NAMES .....	3
REMOTE CONTROL AND FUNCTIONS .....	4-13
CLEANING, MAINTENANCE AND TROUBLESHOOTING .....	14-15

#### NOTE TO EQUIPMENT OWNER:

Thank you for your purchase. Please read this Owner's Information Manual carefully before installing and using this appliance and keep this manual for future reference.

For your convenience, please record the model and serial numbers of your new equipment in the spaces provided. This information, along with the installation data and dealer contact information, will be helpful should your system require maintenance or service.

#### UNIT INFORMATION

Model # \_\_\_\_\_

Serial # \_\_\_\_\_

#### DEALERSHIP CONTACT INFORMATION

Company Name: \_\_\_\_\_

Address: \_\_\_\_\_

#### INSTALLATION INFORMATION

Date Installed \_\_\_\_\_

Phone Number: \_\_\_\_\_

Technician Name: \_\_\_\_\_


## SAFETY PRECAUTIONS

### WARNING

#### PERSONAL INJURY, DEATH, OR PROPERTY DAMAGE HAZARD

Failure to follow this warning could result in personal injury, death, or property damage.

Read and follow all instructions and warnings, including labels shipped with or attached to unit before operating your new air conditioner.

Any time you see this symbol  in manuals, instructions and on the unit, be aware of the potential for personal injury. There are three levels of precaution:

**DANGER** identifies the most serious hazards which will result in severe personal injury or death.

**WARNING** signifies hazards that could result in personal injury or death.

**CAUTION** is used to identify unsafe practices which would result in minor personal injury or product and property damage.

## GENERAL

The high wall fan coil unit provides quiet, maximum comfort. In addition to cooling and/or heating, the high wall fan coil unit matched with an outdoor condensing unit will filter and dehumidify the air in the room to provide maximum comfort.

**IMPORTANT:** The high wall fan coil unit should be installed by authorized personnel only; using approved tubing and accessories. If technical assistance, service or repair is needed, contact the installer or local dealer or call 1-877-591-8908.

The high wall fan coil unit can be set up and operated from the remote control (provided). **If the remote is misplaced, the system can be operated from the “Auto” setting on the unit.**

### Operating Modes:

The high wall fan coil unit has five operating modes.

- Auto
- Cooling
- Dehumidification (DRY)
- Fan Only
- Heating (heat pump models only)

**NOTE** is used to highlight suggestions which **will** result in enhanced installation, reliability, or operation.

### WARNING

#### PERSONAL INJURY, DEATH AND / OR PROPERTY DAMAGE HAZARD

Failure to follow this warning could result in personal injury, death or property damage.

Improper installation, adjustment, alteration, service, maintenance, or use can cause explosion, fire, electrical shock, or other conditions which may cause personal injury or property damage.

Consult a qualified installer, service agency, your distributor or branch for information or assistance. The qualified installer or service agency must use factory-authorized kits or accessories when modifying this product.

### Fan Only

In Fan Only mode, the system filters and circulates room air without changing room air temperature.

### Auto

In Auto mode, the system will automatically cool or heat the room according to the factory setting in Auto Mode. The setpoint temperature is not adjustable.

### Heating

In Heating mode, the system heats and filters room air.

### Cooling

In Cooling mode, the system cools, dries and filters room air.

### Dehumidification (DRY)


In Dehumidification mode, the system dries, filters and slightly cools room air temperature. This mode **does not** take the place of a dehumidifier.

### Remote Control

The remote control transmits commands to set up and operate the system. The controller has a window display panel that shows the current system status. The controller can be secured to a surface when used with the provided mounted remote control holder.

Indoor / Outdoor Units


● Indoor Unit

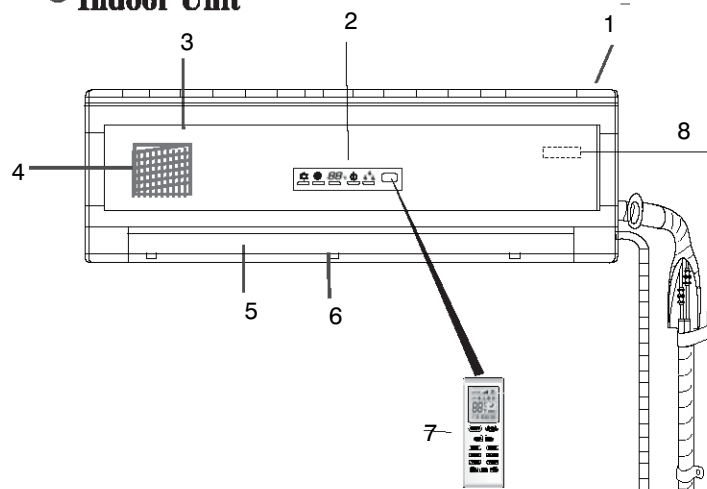

- 1. Front Panel Frame
- 2. Display Panel
- 3. Front Panel
- 4. Air Filter
- 5. Horizontal Airflow Louver
- 6. Manual Adjustable Vertical Airflow Louver
- 7. Remote Control
- 8. Room Temperature Sensor
- 9. Inter-Connecting Tubing
- 10. Control and Power Wiring to Indoor Unit
- 11. Service Valves

Drain hose


● Outdoor Unit

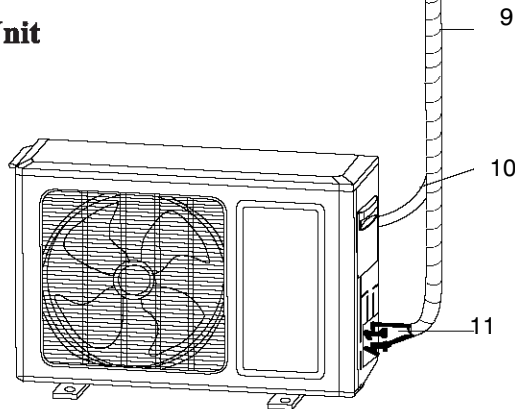

A08294a

Size 09–36, Indoor/Outdoor Unit


# Remote Control and Functions

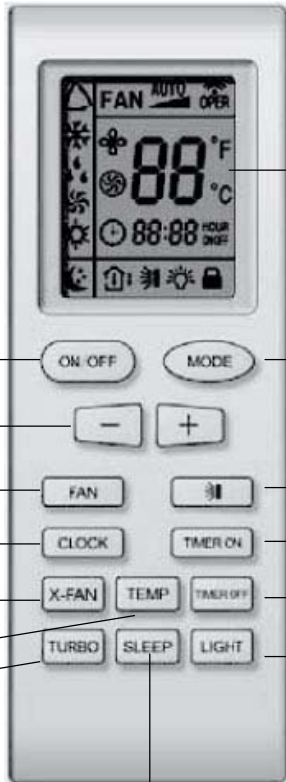

A12434

Remote Control, Size 09–24

1. Remote Control Display
2. ON/OFF Button
3. MODE Button
4. Setpoint Clock, Timer Up (+) and Down (-) Buttons
5. Fan Speed
6. Horizontal Louver Swing Button
7. Clock Button
8. Timer ON Button
9. Dry Coil Button
10. Temperature Button
11. Timer OFF Button
12. Turbo Mode Button
13. Sleep Mode button
14. Light Button to Turn ON or OFF Display on Front Panel

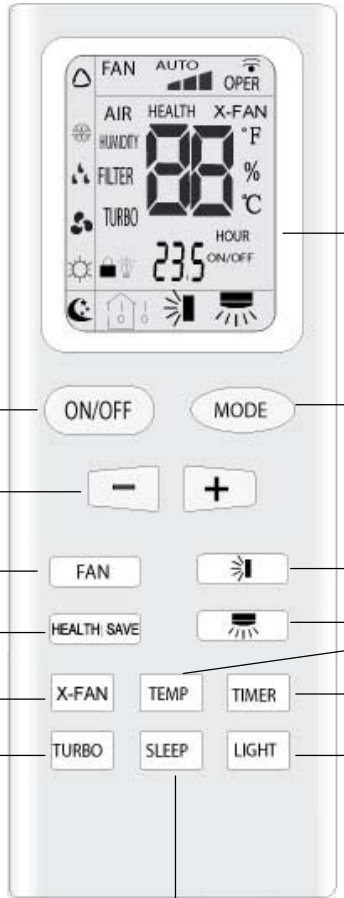


A12390

Remote Control, Size 30–36

1. Remote Control Display
2. ON/OFF Button
3. MODE Button
4. Setpoint, Timer Up (+) and Down (-) Buttons
5. Fan Speed
6. Horizontal Louver Swing Button
7. Left/Right Louver Swing Button (Not available with these models)
8. HEALTH/SAVE Button (Not available with these models)
9. Dry Coil Button
10. Temperature Button (Not available with these models)
11. Timer Button
12. Turbo Mode Button (Not available with these models)
13. Sleep Mode button
14. Light Button to Turn ON or OFF Display on Front Panel

## Remote Control Display, Size 09–24

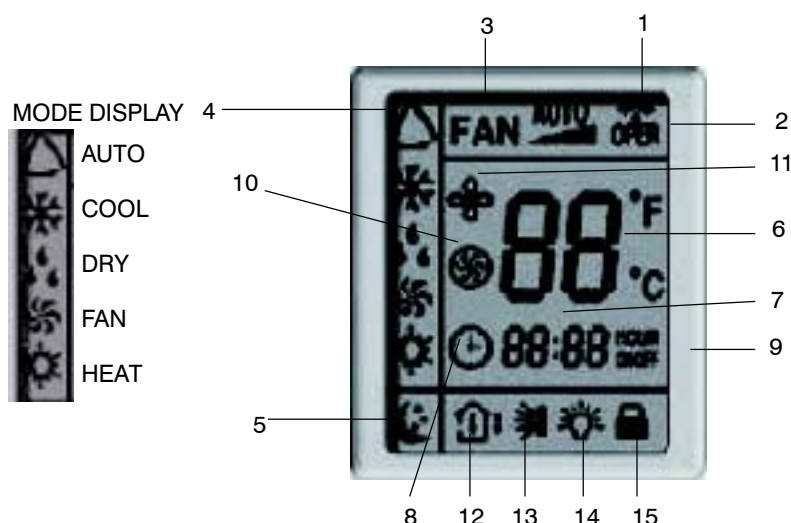


A12391

NOTE: Symbols shown in this manual are for the purpose of demonstration. During actual operation, only the relevant symbols are displayed.

1. **TRANSMISSION INDICATOR:** Illuminates when remote control transmits signals to the indoor unit.
2. This symbol appears when the unit is turned on by the remote control, and disappears when the unit is turned off.
3. **FAN SPEED DISPLAY:** Indicates the set fan speed. AUTO is displayed when unit is running in AUTO mode.
4. **MODE DISPLAY:** Indicates the current operation mode "AUTO", "COOL", "DRY", "FAN ONLY", or "HEAT"
5. **SLEEP DISPLAY:** Indicates unit is running in SLEEP mode.
6. **TEMPERATURE DISPLAY:** Temperature setting from 61°F (16°C) to 86°F (30°C) will be displayed. If FAN mode is selected, there will be no temperature displayed.
7. **CLOCK DISPLAY:** Indicates the current time (0 to 24 hours).
8. **CLOCK INDICATOR:** Displayed with time and is not displayed when setting ON/OFF timer.
9. **TIMER ON / TIMER OFF DISPLAY:** ON is displayed if TIMER ON is set. OFF is displayed if TIMER OFF is set. ON OFF displayed if both ON and OFF timers are set.
10. **TURBO DISPLAY:** Indicates unit is running in Turbo Mode.
11. **DRY COIL DISPLAY:** Indicates unit is running in DRY COIL mode where the fan continues to run after the unit is shut off to dry the coil.
12. **TEMPERATURE DISPLAY:** Indicates if room temperature or set point temperature is being displayed on the front panel.
13. **SWING DISPLAY:** Sets louver position or set louvers to continuously move for better air distribution.
14. **LIGHT DISPLAY:** Indicates if LED display on the front panel is illuminated.
15. **LOCK DISPLAY:** Indicates if remote control is locked.

Remote Control Display, Size 30–36

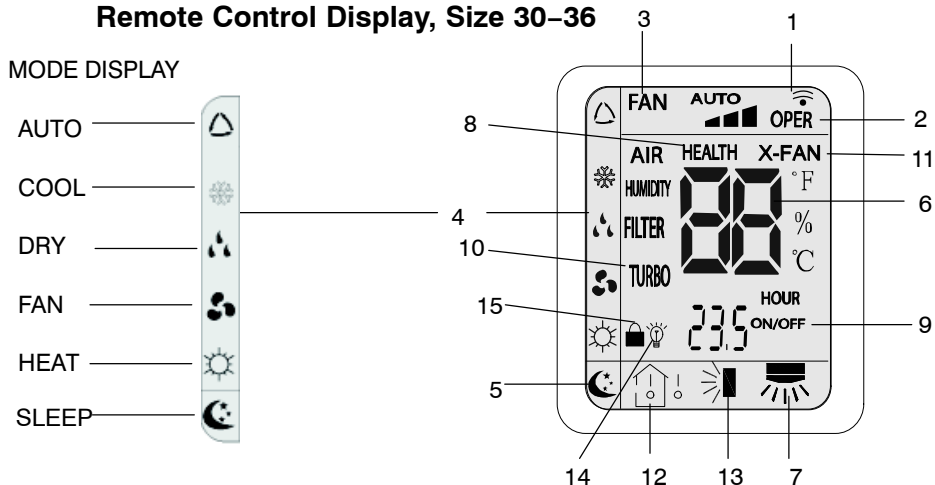


NOTE: Symbols shown in this manual are for the purpose of demonstration. During actual operation, only the relevant symbols are displayed.

1. **TRANSMISSION INDICATOR:** Illuminates when remote control transmits signals to the indoor unit.
2. This symbol appears when the unit is turned on by the remote control, and disappears when the unit is turned off.
3. **FAN SPEED DISPLAY:** Indicates the set fan speed. AUTO is displayed when unit is running in AUTO mode.
4. **MODE DISPLAY:** Indicates the current operation mode “AUTO”, “COOL”, “DRY”, “FAN ONLY”, or “HEAT”
5. **SLEEP DISPLAY:** Indicates unit is running in SLEEP mode.
6. **TEMPERATURE DISPLAY:** Temperature setting from 61°F (16°C) to 86°F (30°C) will be displayed. If FAN mode is selected, there will be no temperature displayed.
7. **Left/Right Louver Swing:** Not available on these models.
8. **Health/Save:** Not available on these models.
9. **SETTING ON / OFF TIMES:** 0.5 to 24 hours.
10. **TURBO DISPLAY:** Not available on these models.
11. **DRY COIL DISPLAY:** Indicates unit is running in DRY COIL mode where the fan continues to run after the unit is shut off to dry the coil.
12. **TEMPERATURE DISPLAY:** Not available on these models.
13. **SWING DISPLAY:** Sets louver position or set louvers to continuously move for better air distribution.
14. **LIGHT DISPLAY:** Indicates if LED display on the front panel is illuminated.
15. **LOCK DISPLAY:** Indicates if remote control is locked.

**Unit Display**

NOTE: The display panel on the indoor unit can be turned on or off using the remote control. Press the Light button to turn the display on and off. Some of the functions will appear on the display panel, on the remote control, or both.

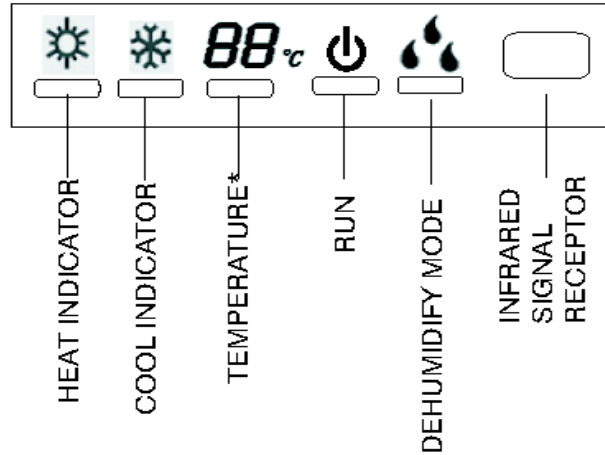

A12434

NOTE: The temperature readout is either setpoint or room temperature and will be replaced by an error code if there is a malfunction. (9K to 24K Only)  
Remote shown is for the size 9K to 24K remote.

**⚠ CAUTION**

**EQUIPMENT DAMAGE HAZARD**

Failure to follow this caution may result in equipment damage.

Handle the control with care and avoid getting the remote wet.

**NOTE:**The remote control is set from factory to display temperatures in °F. If °C is desired, turn the remote OFF and then press “MODE” and “-” buttons on the remote simultaneously.

**IMPORTANT:** The remote control can operate the unit from a distance of up to 25ft. (7.6m) as long as there are no obstructions. This is one way communication only (from remote control to fan coil).

The remote control can perform the following basic functions:

- Turn the system ON and OFF
- Select operating mode
- Adjust room air temperature set point and fan speed
- Adjust airflow direction


Refer to the *Remote Control Function* section for detailed description of all the capabilities of the remote control.

**Battery Installation**

Two AAA 1.5 v alkaline batteries (included) are required for operation of the remote control.

To install or replace batteries :

1. Slide the back cover off the control to open the battery compartment.
2. Remove old batteries if you are replacing the batteries.
3. Insert batteries. Follow the polarity markings inside the battery compartment.
4. Replace battery compartment cover.

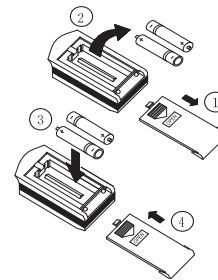

A08299

**NOTE:**




1. When replacing batteries, do not use old batteries or a different type battery. This may cause the remote control to malfunction.
2. If the remote is not going to be used for several weeks, remove the batteries. Otherwise battery leakage may damage the remote control.
3. The average battery life under normal use is about 6 months.
4. Replace the batteries when there is no audible beep from the indoor unit or if the Transmission Indicator fails to light.

**Set the Clock** (Size 9K to 24K systems only. There is not a clock function for the size 30K and 36K.


Before you start operating the air conditioner, set the clock on the remote control as outlined below. The clock panel on the remote controller will display the time regardless of whether the air conditioner is in use or not.

Initial Setting of the Clock:

After batteries are inserted in the remote control, the clock panel will display "12:00".

1. Push the CLOCK button once  will flash.
2. Push the "+" or "-" button. Each time you press the button, the time moves forward or backward by one minute depending on which button you press. If you push the "+" or "-" button continuously, the time adjusts in increments of 10 minutes.
3. When the right time is achieved, press the CLOCK button once to set the time. The  will stop flashing.
4. To readjust the Clock, Press the CLOCK button on the remote. The  will flash. Repeat steps 1 through 3.

**NOTE: Note: The time of the CLOCK must be set before the AUTO-TIMER function will operate.**

 **CAUTION**

**UNIT OPERATION HAZARD**


Failure to follow this caution may result in equipment damage or improper operation.

Static electricity or other factors (voltage fluctuations) can cause the remote control clock to reset. If your remote control is reset (the time of "12:00" flashing), set the clock before starting the unit.

### Remote Control Operation – Quick Start

**NOTE:** When transmitting a command from the remote control to the unit, be sure to point the control toward the LED display on the front panel of the unit. The unit will confirm receipt of a command by sounding an audible beep.

1. Turn the unit on by pushing the **ON/OFF** button.
2. Select the desired mode by pushing the mode button.

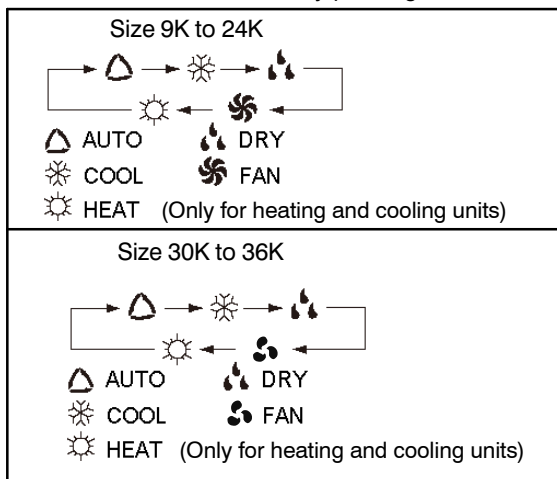



A08301

3. Select the temperature set point by pointing the control toward the unit and pressing the "+" or "-"

buttons until the desired temperature appears on screen. In AUTO mode the setpoint temperature is not adjustable.

4. Select the desired fan speed by pressing the **FAN** button to select desired fan speed.

**NOTE:** If unit is operating in Dry mode (X-Fan), low fan speed will be displayed and the fan speed cannot be changed.


5. Set the airflow direction. When the unit is turned on, the louvers default to the cooling or heating position. The user can adjust the default louver position by pushing the  "SWING" button. The louver will start to swing. If a stationary position is desired, push the  "SWING" button again.

### Emergency Operation

If the remote control is lost, damaged, or the batteries are exhausted, the **AUTO** button on the unit can be used to temporarily operate the unit.

Open the front cover panel and press the **AUTO** button once briefly when the system is off.

To stop emergency operation, push the **AUTO** button once. The emergency operation can also be stopped by pushing the "ON/OFF" button on the remote control.

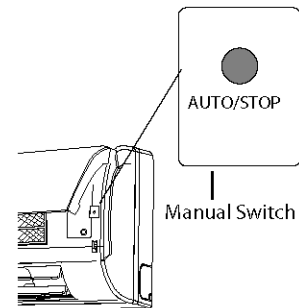

A12433

The following occurs when the AUTO button is pushed:

- No temperature will be displayed on display panel.
- Unit will run in FAN ONLY mode if return air temperature is between 68°F (20°C) and 77°F (25°C).
- Unit will run in HEATING if return air temperature is less than 68°F (20°C).
- Unit will run in COOLING if return air temperature is greater than 77°F (25°C).
- Fan speed will be set to AUTO
- SWING will be on.




## REMOTE CONTROL FUNCTIONS


The remote control is the interface between the user and the high-wall systems. Commands are entered by the user to control the system. Any command that has been entered with the remote control will remain in the memory until it is changed by the user or the batteries are replaced.

### LOCKING FUNCTION:

Settings can be locked by pushing the “+” and “-” buttons simultaneously.

**NOTE: When the remote control is locked, no commands can be entered. To unlock remote control, press “+” and “-” buttons simultaneously.**


When entering commands, point the remote control in the direction of the LED display on the front panel. The  will appear for a short period of time on the remote control when the command is entered. The unit will only emit an audible beep when the signals are received correctly.

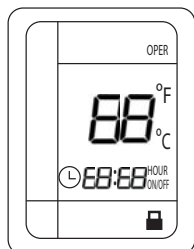

Size 9K to 24K

A09635

### On/Off Button

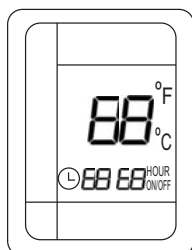

Size 9K to 24K

A09648

When the air conditioner is not in operation, the remote control will display the last set point and time.



- Press the On/Off button to start the unit.
  - The unit will start in the last operating mode and set point. The “OPER” indicator will appear. The “RUN” indicator on the display panel turns green.
- Press button On/Off to stop the unit.
  - The “RUN” indicator light on the display panel will turn red and the remote control will display the setpoint and time. “OPER” will disappear.

**NOTE:** If the On/Off button is pressed too soon after a stop, the compressor will not start for 3 minutes due to the inherent protection against frequent compressor cycling.

When turning the unit ON and OFF, the Timer and Sleep functions will be cancelled.


## SELECTING THE OPERATING MODE



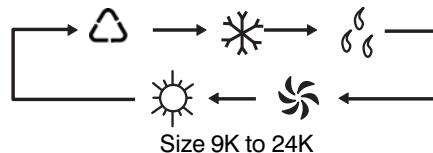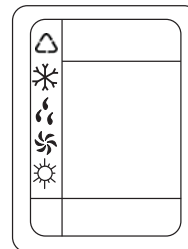


Use the “MODE” button to select one of the available modes.

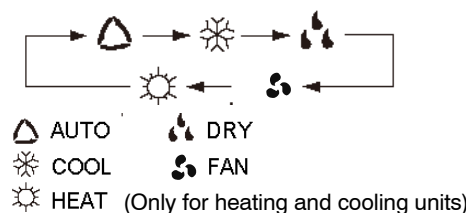

Size 9K to 24K

A09641 /A09628b



 AUTO      DRY  
 COOL      FAN  
 HEAT (Only for heating and cooling units)

Size 30K to 36K

The selected mode will be displayed on the remote control and the appropriate light will illuminate on the display panel.

### MODE Descriptions:

**AUTO:** No temperature will be displayed on the unit or the remote control. Unit will operate as described in the Emergency Operation section.

**COOL and HEAT MODES:** Press the “+” and “-” button to select the temperature. The unit will confirm signal receipt with a beep and the value of the set temperature is displayed on the remote and on the front panel display.

The temperature can be set between 61°F (16°C) and 86°F (30°C).


**NOTE:** In Cooling mode, if the temperate selected is higher than the room temperature, the unit will not start. The same applies for the Heating mode if the selected temperature is lower than the room temperature.

**DRY MODE:** This is a dehumidification mode of operation. The system will dry filter and slightly cool the room air temperature. This mode does not take the place of a dehumidifier.

In DRY mode, the indoor fan will operate continuously in Low speed. The fan speed is not adjustable.


**FAN MODE:** This mode filters and circulates room air at the selected fan speed. See figure below for selecting fan speed.

**SELECTING THE FAN SPEED**

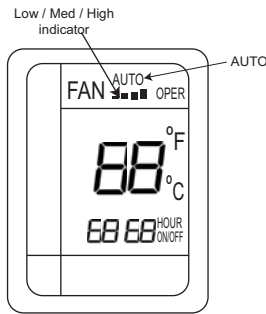

A09649


The fan speed can be selected by pressing the “FAN” button.

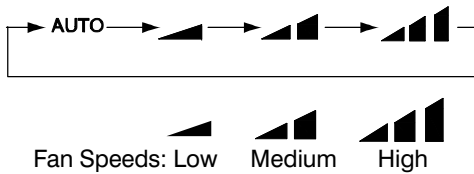

**NOTE:** When the unit is on, the fan will run continuously in cooling or heating. When in heating, there might be situations where the fan will slow down or shut off to prevent cold blow.

**TURBO MODE:** (Only available on sizes 9K to 24K)  
The desired setpoint, either in heating or cooling, can be achieved faster if TURBO mode is used. After selecting the “HEAT” or “COOL” mode button, push the “TURBO” button. This will force the unit to run at super high speed. When the setpoint is satisfied, push the “TURBO” button again. The unit will run at the selected fan speed.


When TURBO mode is running, the following is displayed on the remote control:

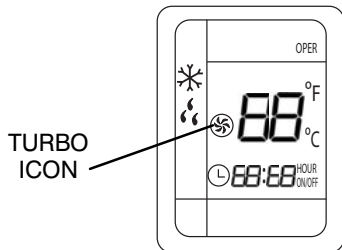

A09636

**Displaying Setpoint or Room Temperatures on Front Panel:** (Only available on sizes 9K to 24K)

The setpoint temperature or room temperature can be displayed on the front panel. Only setpoint temperature is displayed on the remote.

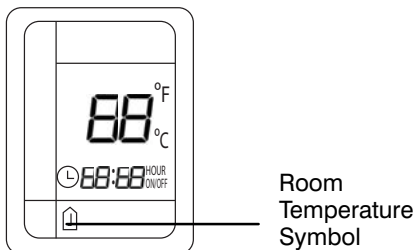

A09638



When the “TEMP” button is pushed once, the temperature indicator (without thermometer) is displayed. This indicates that the setpoint temperature is displayed on the front panel.

When the “TEMP” button is pushed a second time, a thermometer is displayed inside the temperature indicator. This indicates that the room temperature is displayed on the front panel.

**NOTE:** If any other button is pushed on remote control, the temperature will return to the setpoint temperature. Outdoor air temperature is not available.

**Using Dry Coil Function (X-Fan):**

When operating in humid areas, hi-wall units have a DRY COIL function that will allow the indoor fan to run for a pre-determined amount of time (10 minutes) after the unit is turned off (**cooling or dry modes**) to ensure that additional moisture is removed from coil. Push the “X-FAN” button to enable this feature. This will be displayed on remote control.

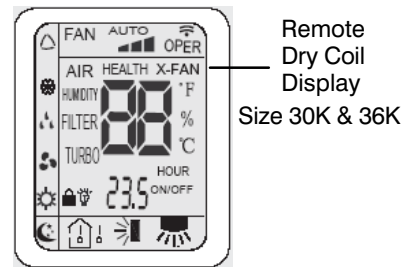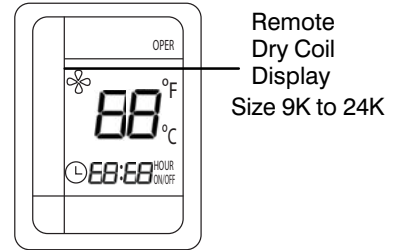

A09637

To deactivate this feature, push the “X-FAN” button again.

**Selecting the Horizontal Direction Louver Position**



When the unit is turned on, the louvers default to the cooling or heating position.


If the louver position is not providing adequate comfort due to room layout or where people are gathered, two options are available to correct the situation:

**Size 9K to 24K Systems**


**Setting the louvers in a stationary position (other than default for heating and cooling):**


The stationary position can be one of five (5) default positions.

To change the louver position, press the  “SWING” button once. The  icon is displayed on the remote.

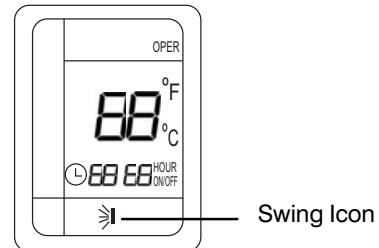



A09640

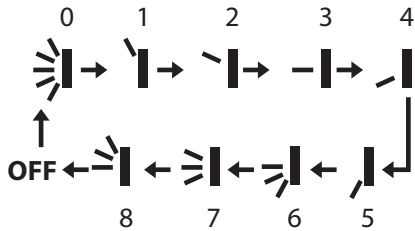When the  is displayed, the louver will swing continuously between positions 1 and 5 as shown below.





A09634


If the “SWING”  button is pushed again, the louver will move to position 1. If position 2 through 5 is desired, push the  button repeatedly until the desired position (2 through 5) is displayed on remote control.

**Setting the louvers to move continuously:**

This setting allows the louvers to move continuously between either positions 1 through 5, or between positions 6, 7, and 8.

Push the  button once to have louvers swinging between positions 1 and 5. If position 6, 7, or 8 is desired, push the  button repeatedly until the desired position is displayed on the remote.


**NOTE: Always use the remote control to adjust the horizontal louver position otherwise, abnormal operation may occur. If this occurs, turn the unit off and then on again.**


Sometimes, in the heating mode, when the  “SWING” button is pushed, the louvers will not start moving right away. This is due to the fact that the fan will not start running until the coil temperature is warm enough to prevent discomfort to the user by blowing cold air.

**Size 30K and 36K Systems**

The louver can be set to swing the full swing or be set to a stationary position. The stationary position can be one of (5) default positions or a position selected by the user.

The default setting allows the user to select the swing or a stationary position.


To change the louver position, press the  “SWING” button once. The icon will be displayed on the remote.

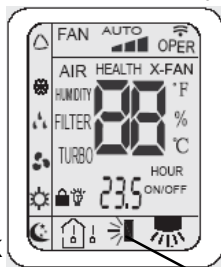


Size 30K & 36K


Swing Icon

The louver will swing continuously.

If the  “SWING” button is pushed again, the louver will stop in its present position.

If the user prefers to select swing with (5) preset stationary positions, follow the instructions below:


- Turn OFF the remote control.
- Simultaneously press the  “SWING” and “+” button.
- Wait 2 seconds.
- Turn remote control on.

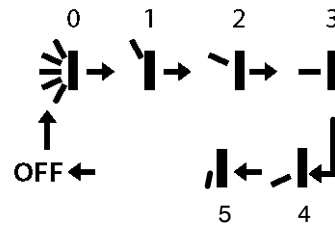

Pushed once, the louver will swing continuously. If the button is pushed again, the louver will move to position 1. If position 2 through 5 is desired, push the button repeatedly until the desired position (2 through 5) is displayed on the remote control.

**Selecting Vertical Direction of the Louver**

The vertical louvers can be adjusted manually to direct the airflow to achieve the optimal comfort in the space.

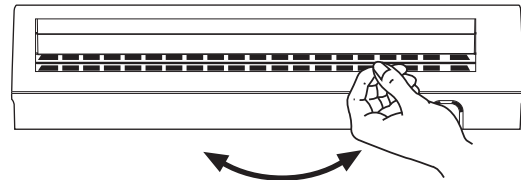


A07543

**Sleep Mode**

This mode is used to conserve energy and can be used when the unit is in the COOL, HEAT or DRY mode only.

**Cool Mode**

– Push the SLEEP button. The SLEEP display will appear on the remote control.

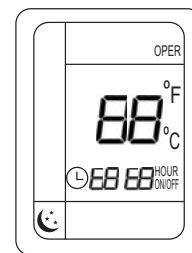

A09644


- After 1 hour the set point will be raised by 1.8°F (1°C).
- After another hour, the set point will be raised by another 1.8°F (1°C) and the fan will run in low speed.
- The SLEEP mode will be cancelled when the SLEEP button is pushed again.

**Heat Mode**

– Same as cooling mode but set points will be lowered by 1.8°F (1°C) and the HEAT icon will disappear from the display panel.

**Timer Function** (Size 9K to 24K Systems)


TIMER ON (to start the unit) and TIMER OFF (to stop the unit) can be used separately or together. The clock on the remote control must be set before using this function.

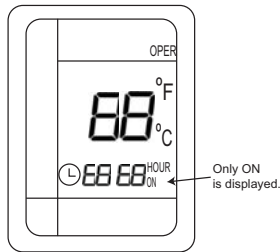**Timer ON only**

A09639


This function will allow the unit to start automatically at the set time. The TIMER ON can be set while the unit is on or off.

To set the TIMER ON function, perform the following:

1. Push the "TIMER ON" button once.
2. The clock indicator  and time will not be displayed on the remote control. The default "TIMER ON" time (first time function is used) or the last time setting will be displayed and "ON" will flash.
3. Push the "-" or "+" within 5 seconds until the desired on time is displayed.

**NOTE: Pressing the "-" or "+" will decrease or increase the time in 1 minute increments.**

**Pressing the "-" or "+" continuously will decrease or increase the time in 10 minute increments.**

4. Push the "TIMER ON" again. The "ON" icon will stop blinking and the time at which the unit will start is set. The clock indicator  and the time will be displayed again.

The "TIMER ON" time will be stored in memory indefinitely until it is cancelled by the user by pushing the "TIMER ON" button or the remote control batteries are replaced.


If the unit is running and the "TIMER ON" set time is reached, the unit will continue operating normally.

**NOTE: When the unit is shut off by the user using the "ON/OFF" button, and if the "TIMER ON" is set, the following will be displayed on the remote control.**

- Set Point
- Time

- Clock indicator  next to time indicates TIMER ON is set.


On the display panel, the operation light will turn red. When the "TIMER ON" set time is reached, the display on the remote does not change, but the unit will run as indicated by the operation light on the front cover turning green. To get display on the remote, push the "ON/OFF" button once.

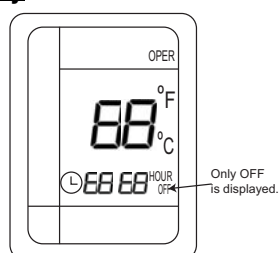**Timer OFF only**

A09642


This function will allow the unit to stop automatically at the set time. The timer can be set while the unit is on or while it is off.

To set the "TIMER OFF" function, perform the following:

1. Push the "TIMER OFF" button once.
2. The clock indicator  and time will not be displayed. "OFF" will be flashing.
3. Push the "-" or "+" button within 5 seconds until the desired ON time is displayed.


**NOTE: Pressing the "-" or "+" will decrease or increase the time in 1 minute increments.**

**Pressing the "-" or "+" continuously, will decrease or increase the time in 10 minute increments.**

4. Push the "TIMER OFF" button again, the "OFF" icon will stop blinking and the time at which the unit will turn off is set. The clock indicator  and the time will be displayed again.

The "TIMER OFF" time will be stored in memory indefinitely until it is cancelled by pushing the "TIMER OFF" button or the batteries are replaced in the remote control.

If the unit is running and the "TIMER OFF" set time is reached, the unit will turn off and the operation indicator light on the front panel will turn red. The display on the remote control will remain the same as when the unit was running. To turn the unit on again, push the "ON/OFF" button twice. The operation indicator light on the front panel will turn green.

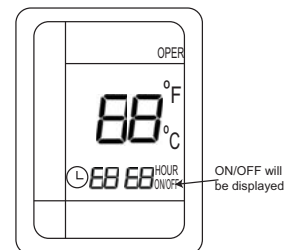
**Timer ON and Timer OFF**

A09643

Use both functions as described in "TIMER ON" and "TIMER OFF" sections to program the unit to turn on and shut off at specified times. Times will be stored in memory until cancelled by user or the remote control batteries are replaced.

**Timer Function** (Sizes 30k and 36K Systems)

This function will allow the user to set the unit to run for a number of hours and be off for a number of hours, on a continuous basis. The time OFF and ON can be set from 0.5 hours to 24 hours in half hour increments, within a one minute accuracy.

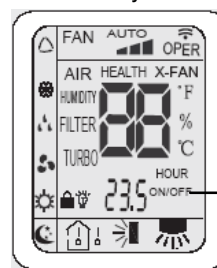

Size 30K &amp; 36K

**Setting the Timer ON Time**

With the remote control and system OFF, press the "TIMER" button. Within 5 seconds, use the "+" and "-" buttons to set the TIMER ON hours. The range of hours is from 0.5 to 24

hours, in half hour increments. Press the “TIMER” button again to save the setting.

**Setting the Timer OFF Time**



With the remote control and system ON, press the “TIMER” button within 5 seconds, use the “+” and “-” button to set the Timer OFF hours. The range of hours is 0.5 to 24 hours, in half hour increments. Press the “TIMER” button again to save the setting.

**NOTE:**

1. Once the Time ON time is set to a number of hours, and the Time OFF time is set to a number of hours, the system will operate on and off at those set times. It will continue until the hours ON and OFF are changed or the timer function is turned OFF.
2. To Turn OFF timer function, simply press the “TIMER” button again, clearing the timer function from the remote control display.

**Light Function**

This function will allow the user to Turn ON or OFF the display on the front panel.

Press the light icon  to turn the indoor unit front panel ON or OFF. The remote control will display the Light Icon  as shown below.

Size 9K to 24K



Light Icon

Size 30K & 36K



Light Icon

**Time Delay**

If the On/Off button is pressed too soon after a stop, the compressor will not start for 3 minutes due to the inherent protection against frequent compressor cycling. The unit will only emit an audible beep when the signals are received correctly.

**Heating Features**

If the unit is in the heating mode, there will be a delay when the fan starts. The fan will start only after the coil is warmed up to prevent cold blow.

**Defrost Operation**

In heating mode, if the outdoor coil is frosted, the indoor fan and outdoor fan will turn off while system removes the frost on the outdoor coil. “H1” will be displayed on the display panel on the front cover of the unit.

The system will automatically revert to normal operation when frost is removed from the outdoor unit, and “H1” will disappear.

**Auto Start**

If the power fails while the unit is operating, the unit stores the operating condition, and it will start operation automatically under those conditions when the power is restored.

## CLEANING, MAINTENANCE, AND TROUBLESHOOTING

### ⚠ CAUTION

#### ELECTRICAL SHOCK HAZARD

Failure to follow this caution may result in personal injury or death.

Always turn off power to the system before performing any cleaning or maintenance to the system. Turn off the outdoor disconnect switch located near outdoor unit. Be sure to disconnect indoor unit if on a separate switch.

### ⚠ CAUTION

#### EQUIPMENT DAMAGE/OPERATION HAZARD

Failure to follow this caution may result in equipment damage or improper unit operation.

Operating the system with dirty air filters may damage the indoor unit and could cause reduced cooling performance, intermittent system operation, frost build-up on indoor coil or blown fuses.

### Periodic Maintenance

Periodic maintenance is recommended to ensure proper operation of the unit. Recommended maintenance intervals may vary depending on the installation environment, e.g., dusty zones, etc. Refer to Table 1.

### ⚠ CAUTION

#### CUT HAZARD

Failure to follow this caution may result in personal injury. The coil fins are very sharp. Use caution when cleaning.

### Cleaning the Coil

Clean the coil at the beginning of each cooling season, or when necessary. Use a vacuum cleaner or a long-bristle brush to avoid damage to the coil fins.

### Air Filters

Remove and clean the air filters once a month.

**NOTE:** If air filters show signs of excessive wear or are torn, they must be replaced. Contact your local dealer for replacement filters.

1. Open front panel on unit.
2. Pull filters down to remove.
3. Vacuum filters.
4. Clean with warm water.
5. Shake filter to remove excess water and dry thoroughly.
6. Replace filter by sliding filter behind front grille until filter snaps in place.
7. Close front panel on unit.

### ⚠ CAUTION

#### EQUIPMENT DAMAGE HAZARD

Failure to follow this caution may result in equipment damage.

When cleaning the front panel, do not use water hotter than 105°F (40.56°C) and do not pour water onto the fan coil. Do not use abrasive or petroleum based cleaners as they may damage the front panel.

### Indoor Unit Front Panel

To clean the front panel on the indoor unit, wipe the outside with a soft, dry cloth. If necessary, a mild liquid detergent can be applied and wiped off with a dry cloth.

### Preparing for Extended Shutdown Period

Clean the filters and reposition them in the unit. Operate the unit in Fan only mode for 12 hours to dry all internal parts.

Turn main power supply off and remove batteries from the remote control.

### System Operation Recommendations

The items outlined in the following list will help to assure proper system operation:

- Replace both remote control batteries at the same time.
- Point the remote control toward the unit display panel when transmitting a command.
- Keep doors and windows closed while unit is operating.
- Contact an authorized service representative if a problem arises that cannot be easily resolved.
- Do not perform cleaning or maintenance activities while unit is on.
- Keep display panel on unit away from direct sunlight and heat as this may interfere with remote control transmissions.
- Do not block air intakes and outlets on the indoor or outdoor units.

### Energy Saving Recommendations

The following recommendations will add greater efficiency to the ductfree system:

- Select a comfortable thermostat setting and leave it at chosen setting. Avoid continually raising and lowering the setting.
- Keep unit filter clean. Frequent cleaning may be necessary depending on indoor air quality.
- Use drapes, curtains or shades to keep direct sunlight from heating room on very hot days.
- Do not obstruct air intake on front panel.
- Turn on air conditioning before indoor air becomes too uncomfortable.

### Troubleshooting

Refer to Table 2 before contacting your local dealer.

Table 1—Periodic Maintenance

INDOOR UNIT	EVERY MONTH	EVERY 6 MONTHS	EVERY YEAR
Clean Air Filter*	•		
Change Remote Control Batteries		•	
OUTDOOR UNIT	EVERY MONTH	EVERY 6 MONTHS	EVERY YEAR
Clean Outdoor Coil from Outside		•	
Clean Outdoor Coil from Inside†			•
Blow Air Over Electric Parts†			•
Check Electric Connection Tightening†			•
Clean Fan Wheel†			•
Check Fan Tightening†			•
Clean Drain Pans†			•

\* Increase frequency in dusty zones.

† Maintenance to be carried out by qualified service personnel. Refer to the Installation Manual

Table 2—Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
<b>Indoor unit emits a bad odor on start-up</b>	<ul style="list-style-type: none"> <li>Air filter dirty</li> <li>Output air still has odor after cleaning filter.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the air filter</li> <li>Contact your service representative.</li> </ul>
<b>You hear water flowing noise when the unit is running</b>	<ul style="list-style-type: none"> <li>This is normal and is the refrigerant flowing through the system.</li> </ul>	<ul style="list-style-type: none"> <li>No maintenance required</li> </ul>
<b>Indoor unit produces a mist when the air conditioner is running</b>	<ul style="list-style-type: none"> <li>This is normal cooling and is caused by high humidity and temperature in the room.</li> </ul>	<ul style="list-style-type: none"> <li>No maintenance required. Mist should stop as room is cooled down and the humidity is removed.</li> </ul>
<b>Wireless remote control does not work</b>	<ul style="list-style-type: none"> <li>Batteries are dead.</li> <li>Unit needs to be reset.</li> </ul>	<ul style="list-style-type: none"> <li>See battery replacement section in this manual and replace batteries.</li> <li>Turn off power to indoor unit. Remove plug from wall and then reinsert plug. Restart unit.</li> </ul>
<b>Water leaks into room from Indoor unit</b>	<ul style="list-style-type: none"> <li>Condensing water has overflowed</li> </ul>	<ul style="list-style-type: none"> <li>Check indoor condensing drain or call your representative.</li> </ul>
<b>Unit/System Does Not Work</b>	<ul style="list-style-type: none"> <li>To protect the unit upon an immediate restart after a stop, the system controller will delay the unit for 3 minutes before allowing the unit to start back up.</li> <li>The circuit breaker has tripped or a fuse has blown.</li> <li>Power failure.</li> <li>Error codes displayed</li> <li>Voltage is too low.</li> </ul>	<ul style="list-style-type: none"> <li>After turning unit off, wait at least 3 minutes before trying to restart.</li> <li>Reset the circuit breaker or replace the fuse with the specified replacement fuse.</li> <li>Restart operation when the power is restored.</li> <li>Call your service representative.</li> <li>Call your service representative.</li> </ul>
<b>Cooling is Not Working Properly</b>	<ul style="list-style-type: none"> <li>The filter is blocked with dust.</li> <li>Temperature is not set properly.</li> <li>A window or door is open.</li> <li>The outdoor unit is obstructed.</li> <li>The fan speed is too low.</li> <li>The operation mode is in Fan instead of Cool.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the air filter.</li> <li>Check the temperature and reset if necessary.</li> <li>Close the window or door.</li> <li>Remove the obstruction.</li> <li>Change the fan speed selection.</li> <li>Change the operating mode to Cool or reset the unit.</li> </ul>
<b>Heating is Not Working Properly</b>	<ul style="list-style-type: none"> <li>The filter is blocked with dust.</li> <li>Temperature is set too low.</li> <li>A window or door is open.</li> <li>The outdoor unit is obstructed.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the air filter.</li> <li>Check the temperature and reset if necessary.</li> <li>Close the window or door.</li> <li>Remove the obstruction.</li> </ul>
<b>Unit Stops During Operation</b>	<ul style="list-style-type: none"> <li>The Off timer is not operating correctly.</li> <li>Error codes displayed</li> </ul>	<ul style="list-style-type: none"> <li>Restart the operating mode.</li> <li>Call your service representative.</li> </ul>